


## Connector Joining Wire Harness and Wire Harness

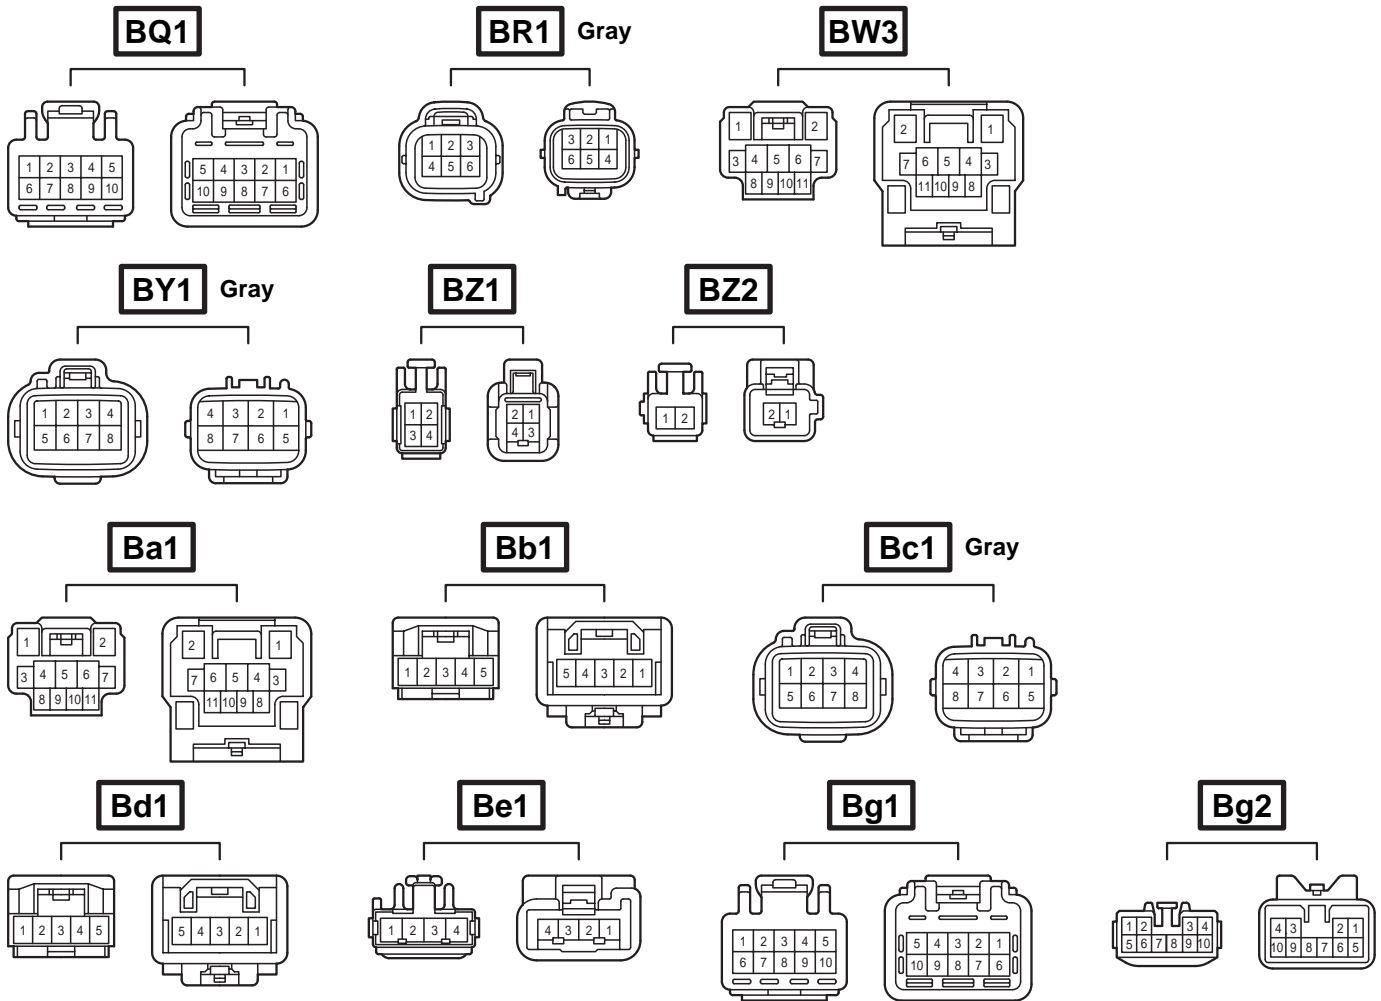

Code	Joining Wire Harness and Wire Harness (Connector Location)
BQ1	Floor No.2 Wire and Roof No.2 Wire (Right Rear Side Quarter Panel)
BR1	Fuel Tank No.2 Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)
BW3	Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BY1	Front Door LH Sub Wire and Front Door LH Wire (Front Door LH)
BZ1	Roof No.3 Wire and Roof No.1 Wire (Front Side of Roof)
BZ2	
Ba1	
Bb1	Floor No.1 Wire and Floor No.1 Wire (Near the Left Rear Suspension Support)
Bc1	Front Door RH Sub Wire and Front Door RH Wire (Front Door RH)
Bd1	Floor No.2 Wire and Floor No.2 Wire (Near the Right Rear Suspension Support)
Be1	Front Door RH Wire and Front Door RH No.2 Sub Wire (Front Door RH)
Bg1	Back Door LH Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
Bg2	