

## INSTALLATION


### 1. INSTALL FUEL PUMP FILTER TO FUEL PUMP

Install the pump filter with a new clip.

### 2. INSTALL FUEL PUMP TO FUEL PUMP BRACKET

- Install the rubber cushion to the fuel pump.
- Connect the fuel hose to the outlet port of the fuel pump.
- Install the fuel pump by pushing the lower side of the fuel pump.


### 3. INSTALL LEAD WIRE TO FUEL PUMP

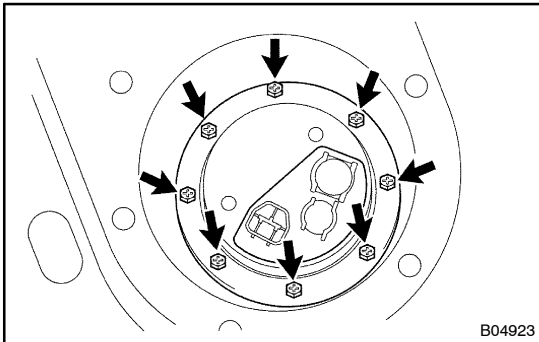

### 4. INSTALL FUEL PUMP AND SENDER GAUGE ASSEMBLY TO FUEL TANK


- Install a new gasket to the fuel suction plate.
- Insert the fuel pump and sender gauge assembly into the fuel tank.
- Install the fuel tank vent tube set plate with the 8 bolts.

**Torque: 3.5 N·m (35 kgf·cm, 31 in·lbf)**

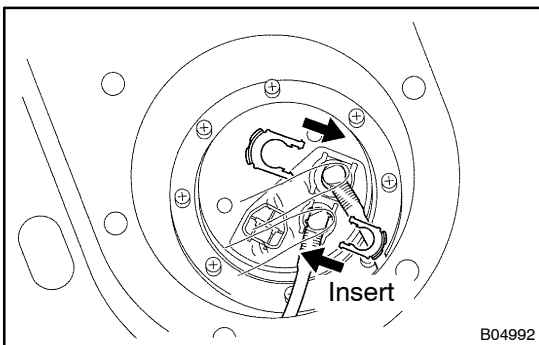

### 5. CONNECT FUEL MAIN TUBE AND RETURN TUBE (FUEL TUBE CONNECTORS) TO FUEL SUCTION PLATE

- Before installing the tube connectors, check to see the connection between the nylon tube and suction plate for the presence of foreign matters.
- Attach the fuel tube connectors to the ports of the fuel suction plate and insert the clips until you hear a click.

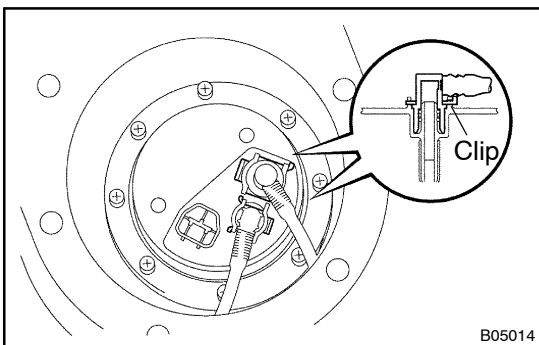

- After connection, pull out the clips to check to see that they are installed securely.

### 6. CONNECT FUEL PUMP & SENDER GAUGE CONNECTOR

### 7. CHECK FOR FUEL LEAKS (See page FI-1)

### 8. INSTALL FLOOR SERVICE HOLE COVER

- Install the service hole cover with the 2 screws.
- Cover the rear and front floor carpets.

### 9. INSTALL REAR DOOR SCUFF PLATES, STEP PLATES AND REAR SEAT LOCK COVERS

### 10. INSTALL NO.1 REAR SEATS