


DTC	C1794 / 94, C1795 / 95	Vehicle Speed Sensor Circuit
-----	------------------------	------------------------------

CIRCUIT DESCRIPTION

This circuit receiving the speed detected by the speed sensor from the ABS ECU.

DTC No.	DTC Detecting Condition	Trouble Area
C1794 / 94 C1795 / 95	Vehicle speed 12 mph (20 km/h) or higher signal does not input.	<ul style="list-style-type: none">• Right front, left front speed sensor• Each speed sensor circuit• ABS ECU• Suspension control ECU

WIRING DIAGRAM

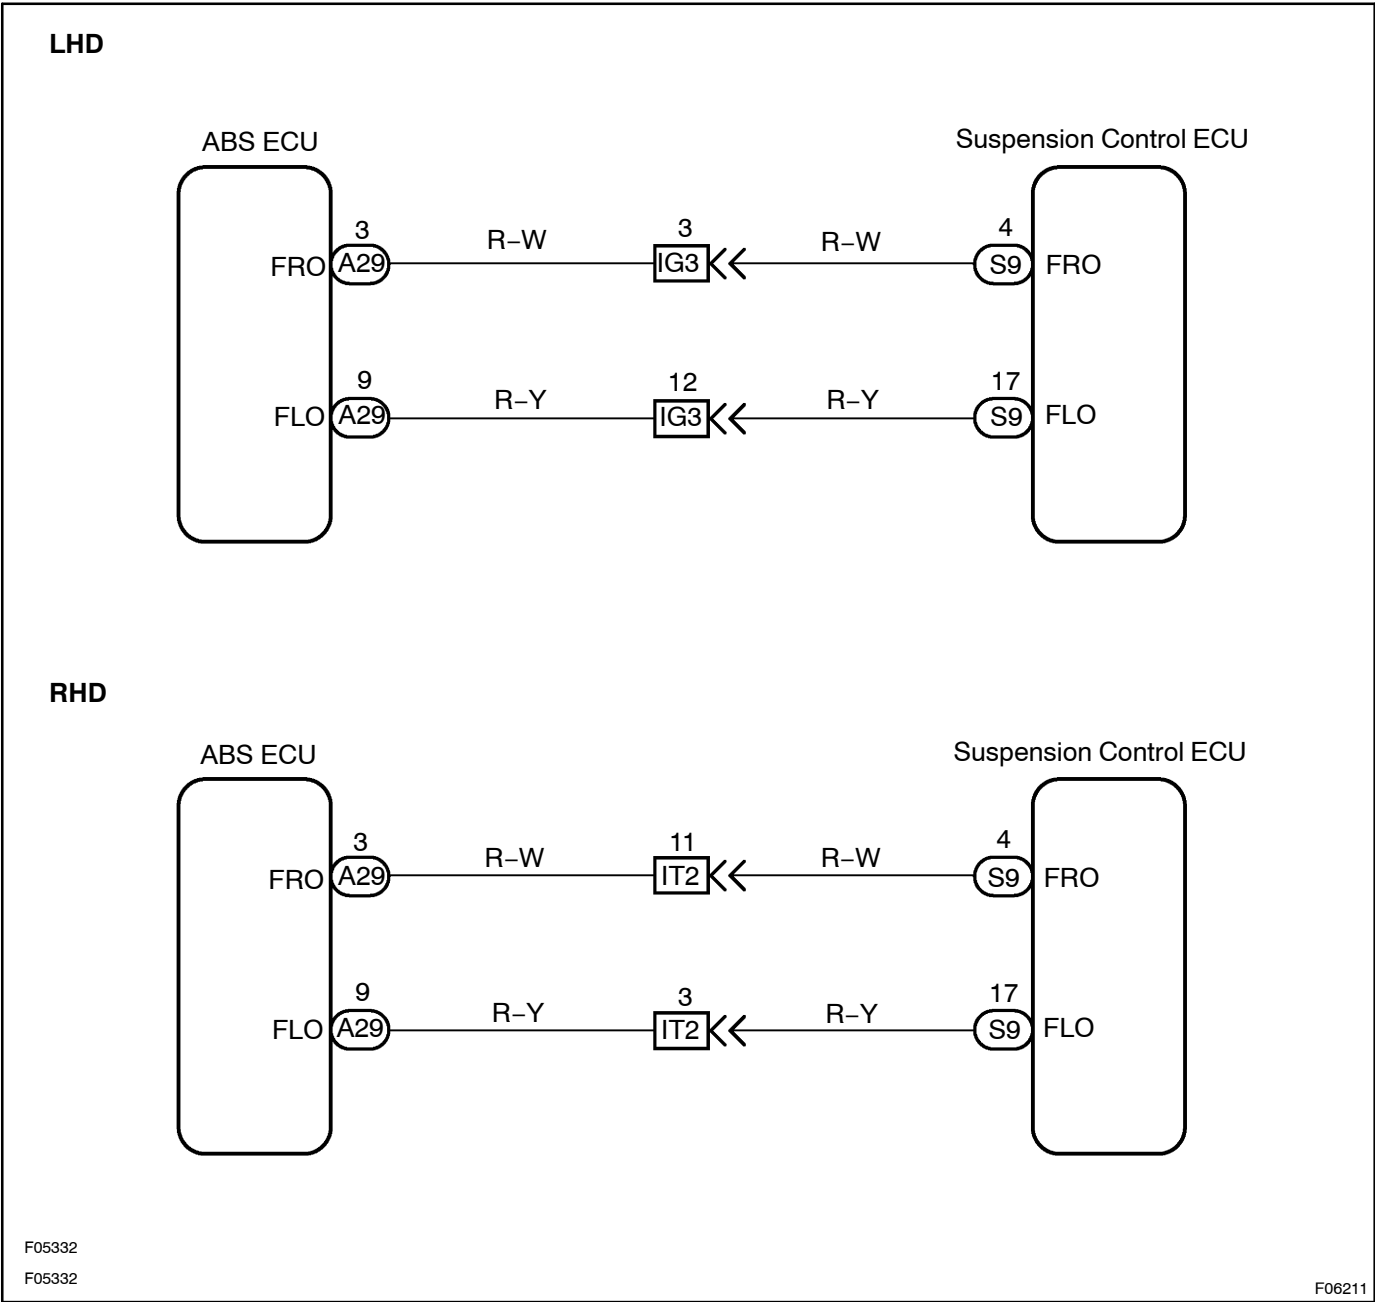

INSPECTION PROCEDURE

1 Check whether or not the ABS ECU outputs DTC 31 or 32.

Check DTC on [page DI-208](#).

YES

Check ABS speed sensor circuit.
([See page DI-325](#))

NO

2 Check for open and short circuit in harness and connector between ABS ECU and suspension control ECU ([See page IN-35](#)).

NG

Repair or replace harness or connector.

OK

Check and replace suspension control ECU.