


INSPECTION PROCEDURE

1	Check DOME and POWER fuse.
---	----------------------------

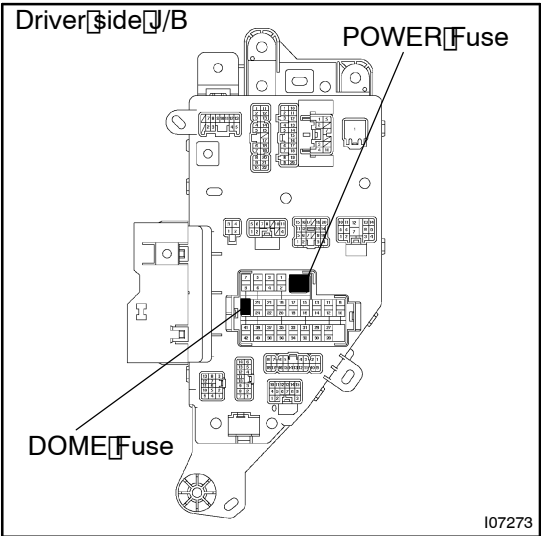

PREPARATION:
Remove DOME and POWER fuse from driver side junction block.


CHECK:
Check continuity of DOME and POWER fuse.

OK:
Continuity

NG: Check for short in all the harness and components connected to the DOME and POWER fuse (See attached wiring diagram).

OK

2	Check voltage between terminals +B1, +B2 and E of theft deterrent ECU connector.
---	--

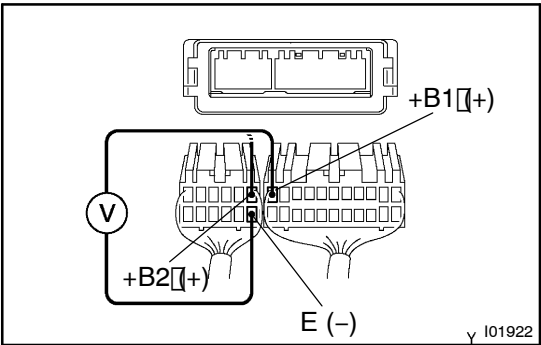

PREPARATION:
Disconnect the theft deterrent ECU connector.

CHECK:
Measure voltage between terminals +B1, +B2 and E of theft deterrent ECU connector.

OK:
Voltage: 10 - 14 V

OK: Proceed to next circuit inspection shown in problem symptom table (See page DI-637).

NG

3 Check for open in harness and connector between ECU and body ground (See page IN-35).

NG

Repair or replace harness or connector.

OK

Check and repair harness and connector between ECU and battery.