


Connector Joining Wire Harness and Wire Harness

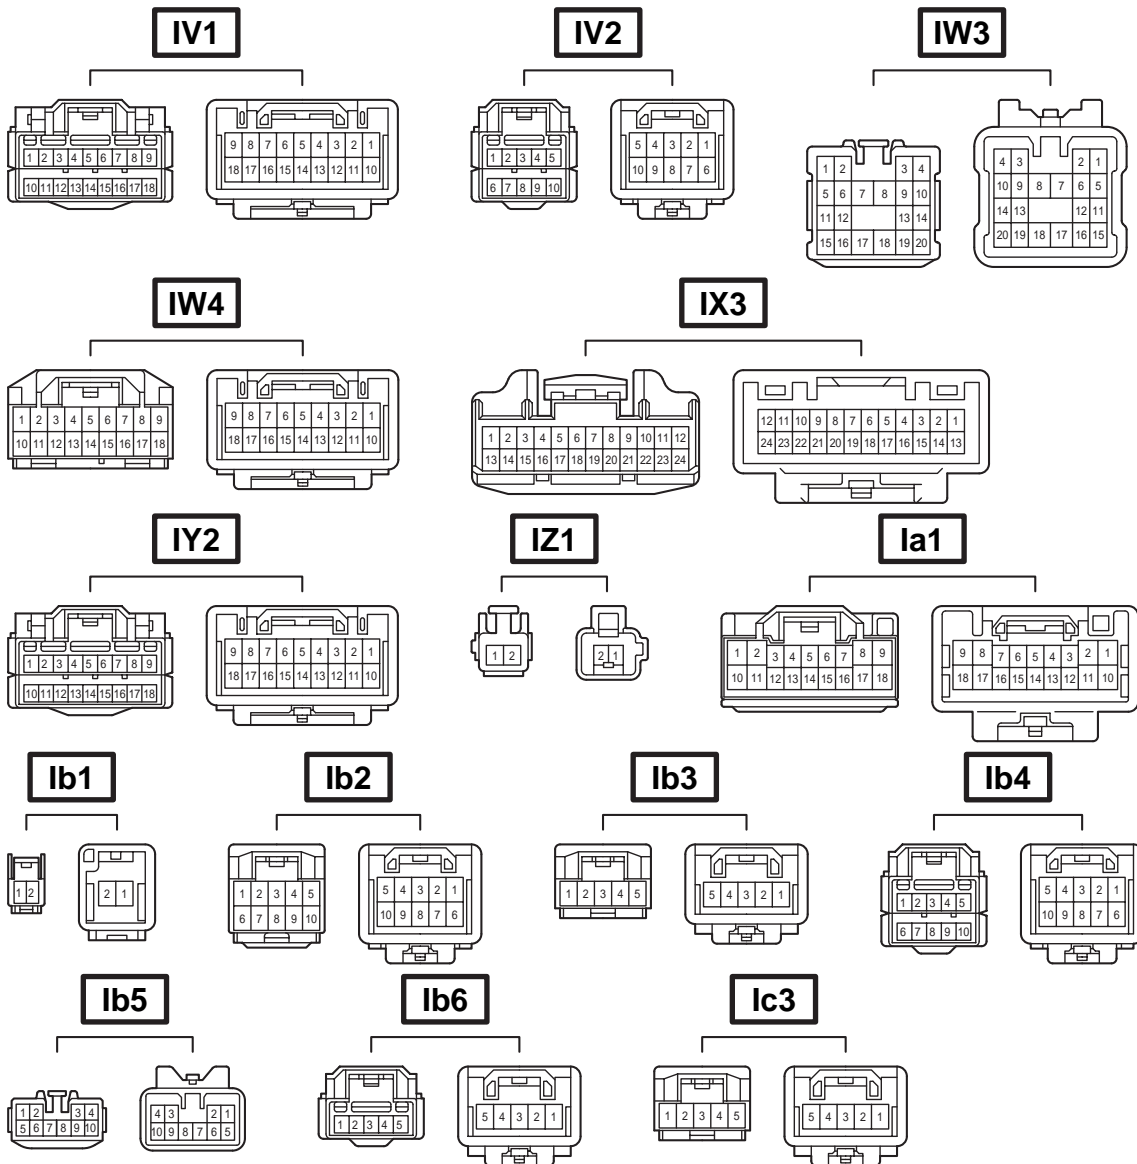

Code	Joining Wire Harness and Wire Harness (Connector Location)
IV1	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
IV2	
IW3	Front Door LH Wire and Dash Wire (Left Kick Panel)
IW4	
IX3	Rear Console Box Wire and Dash Wire (Left Side of Rear Console)
IY2	Instrument Panel Integration Wire and Instrument Panel No.2 Wire (Instrument Panel Center)
IZ1	Dash Wire and Sensor Wire (Near the Steering Column)
Ia1	Engine Room No.2 Wire and Floor No.1 Wire (Left Kick Panel)
Ib1	Dash Wire and Dash Wire (Right Side of Instrument Panel)
Ib2	Dash Wire and Dash Wire (Behind the Glove Box)
Ib3	
Ib4	Dash Wire and Dash Wire (Behind the Combination Meter)
Ib5	Dash Wire and Dash Wire (Instrument Panel Center)
Ib6	Dash Wire and Dash Wire (Behind the Glove Box)
Ic3	Dash Wire and Dash Wire (Behind the Center Panel)