


E ELECTRICAL WIRING ROUTING

☐ : Location of Connector Joining Wire Harness and Wire Harness

[RHD : Swing Type]

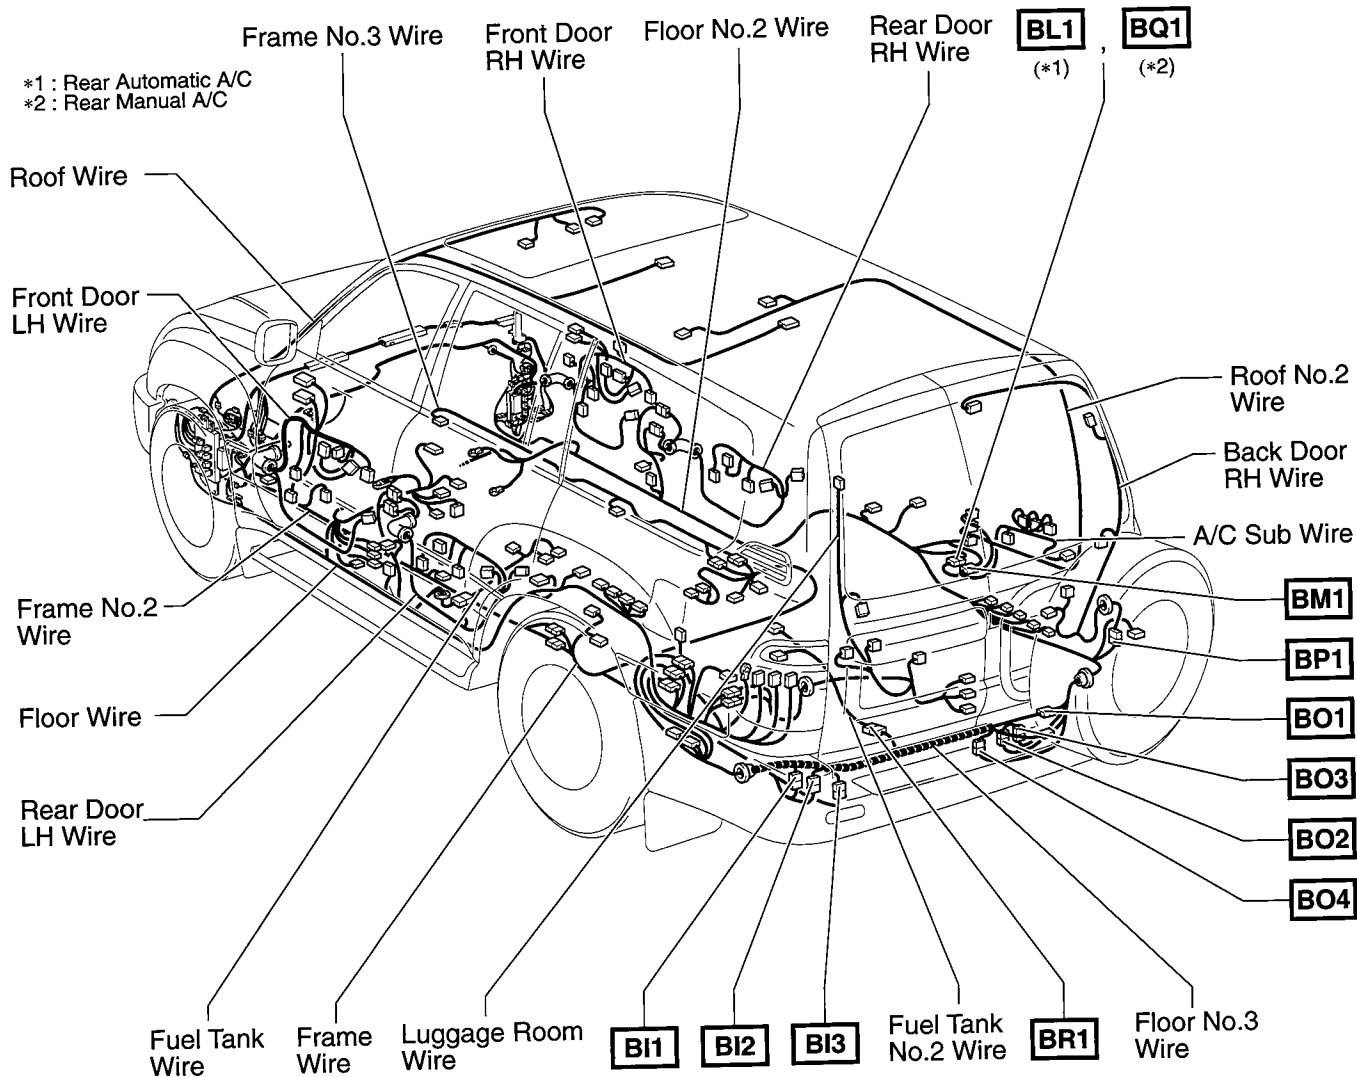

| Code | Joining Wire Harness and Wire Harness (Connector Location) |
|------|---|
| BI1 | Frame Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember) |
| BI2 | |
| BI3 | |
| BL1 | Roof No.2 Wire and Floor No.2 Wire (Right Rear Side Quarter Panel) |
| BM1 | Floor No.2 Wire and A/C Sub Wire (Right Rear Side Quarter Panel) |
| BO1 | Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember) |
| BO2 | |
| BO3 | |
| BO4 | |
| BP1 | Back Door RH Wire and Floor No.2 Wire (Back Door RH) |
| BQ1 | Floor No.2 Wire and Roof No.2 Wire (Right Rear Side Quarter Panel) |
| BR1 | Fuel Tank No.2 Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember) |