


Connector Joining Wire Harness and Wire Harness

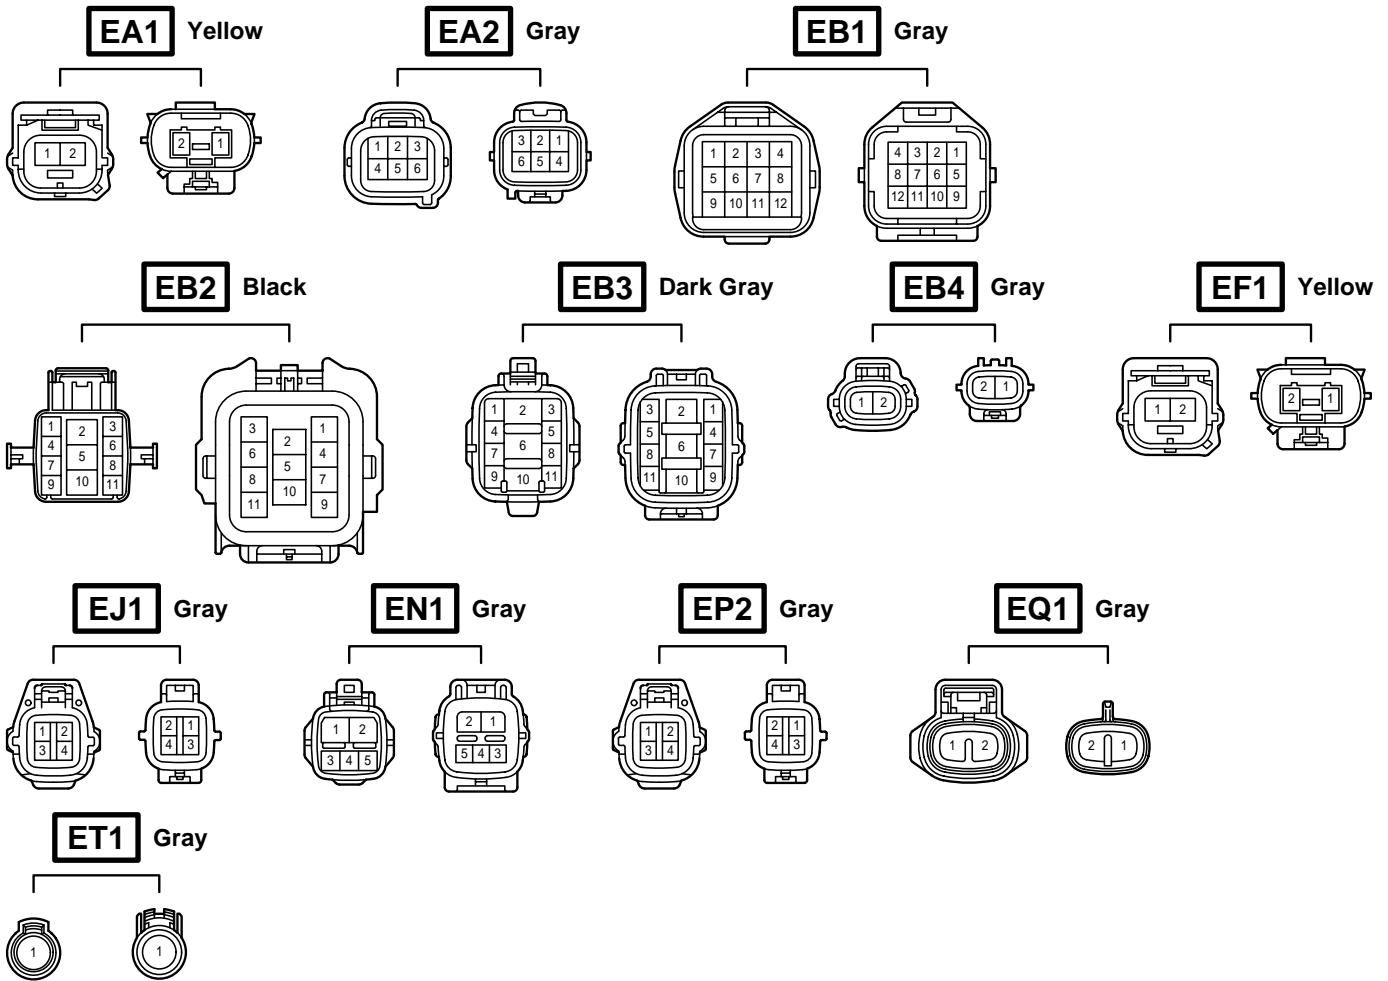

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
EA2	
EB1	
EB2	
EB3	Engine Wire and Transmission Wire (On the Transmission)
EB4	
EF1	Engine Room No.2 Wire and Engine Room Main Wire (Under the Engine Room J/B)
EJ1	Engine Room Main Wire and Alternator Wire (Near the Battery)
EN1	Engine Room No.2 Wire and Engine No.2 Wire (Near the Engine Room J/B)
EP2	Engine Wire and Engine No.2 Wire (On the Transmission)
EQ1	Engine Room No.2 Wire and Magnet SW to Winch Wire (Near the Engine Room J/B)
ET1	Engine Wire and Gauge Wire (Rear Bank of Left Cylinder Head)