


## Connector Joining Wire Harness and Wire Harness

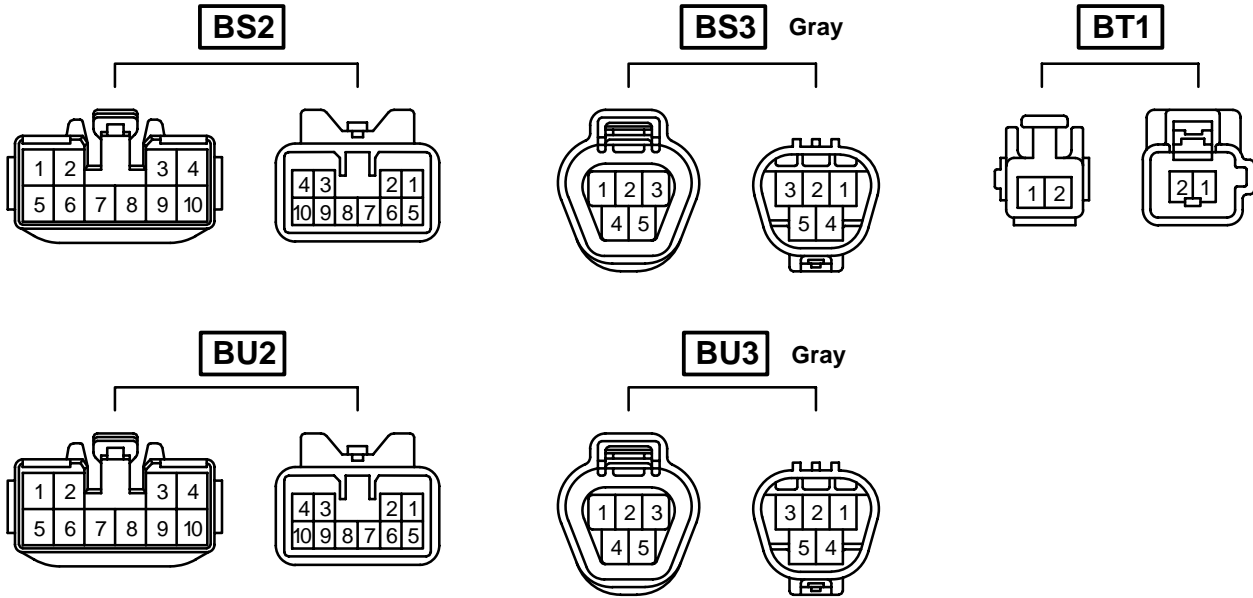

Code	Joining Wire Harness and Wire Harness (Connector Location)
BS2	Floor No.1 Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)
BS3	
BT1	Seat No.2 Wire and Front Seat LH Wire (Rear Side Under the Driver's Seat)
BU2	
BU3	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)