


REPLACEMENT

IF NECESSARY REPLACE FRONT BEARING RETAINER OIL SEAL

(a) Using a screwdriver, pry out the oil seal.

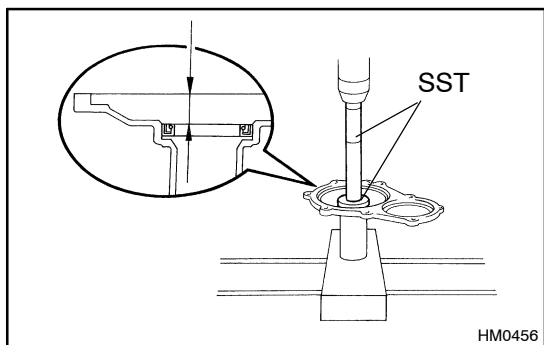

(b) Using SST and a press, drive in a new oil seal.

SST 09950-60010 (09951-00460), 09951-07150

Drive in depth: 15.4–16.2 mm (0.606–0.638 in.)