



H04095

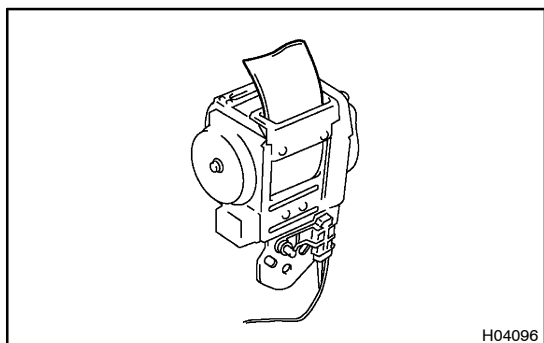

H04096

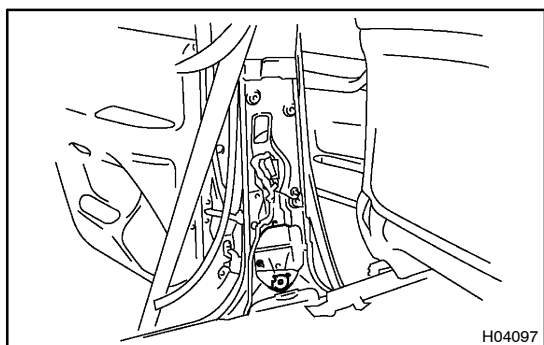

H04097

INSPECTION

1. PRETENSIONER IS NOT ACTIVATED

- (a) Perform a diagnostic system check.
(See [page DI-447](#))
- (b) Perform a visual check which includes the following items with the front seat outer belt removed from the vehicle.
 - Check for cuts and cracks in, or marked discoloration of the center pillar lower garnish.
 - Check for cuts and cracks in wire harness, and for chipping in connectors.
 - Check for deformation of the center pillar.

CAUTION:

For removal and installation of the front seat outer belt, see [page BO-212](#) and [BO-220](#).

Be sure to follow the correct procedure.

2. PRETENSIONER IS ACTIVATED

- (a) Perform a diagnostic system check.
(See [page DI-447](#))
- (b) Perform a visual check which includes the following items with the front seat outer belt removed from the vehicle.
 - Check for deformation of the center pillar.
 - Check for damage on the connector and wire harness.