


FUEL CUTOFF RPM INSPECTION

SF0YV-01

1. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

2. CONNECT TACHOMETER, HAND-HELD TESTER OR OBDII SCAN TOOL (See page EM-3)

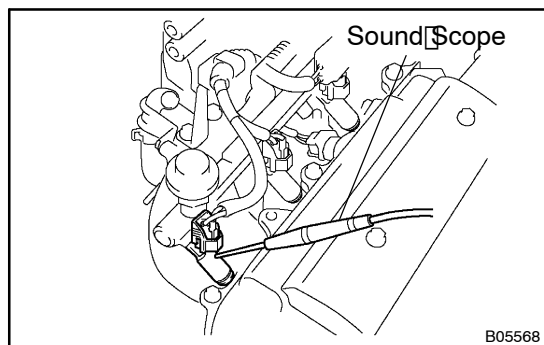

3. INSPECT FUEL CUTOFF RPM OPERATION

- Increase the engine speed to at 2,500 rpm or more.
- Check for injector operating noise.
- Check that when the throttle lever is released, injector operation noise stops momentarily and then resumes.

HINT:

- The vehicle should be stopped.
- Measure with the A/C OFF.

Fuel return speed: 1,800 rpm

4. DISCONNECT TOYOTA HAND-HELD TESTER OR OBDII SCAN TOOL