


# WATER TEMPERATURE CUT RELAY (1HZ, 1HD-T) INSPECTION

AC1U4-01

## 1. REMOVE CONDENSER FAN RELAY

- (a) Remove the front bumper cover (See page BO-4)
- (b) Disconnect the connector.
- (c) Release the claw and remove the relay.

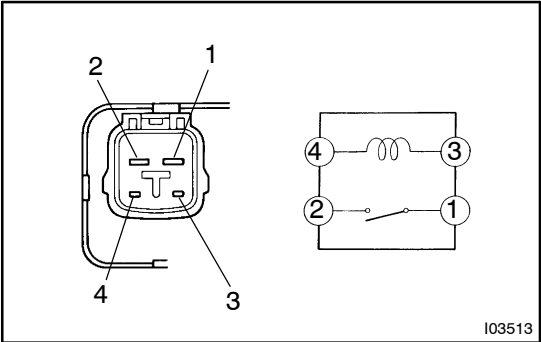

## 2. INSPECT CONDENSER FAN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	3 - 4	Continuity
Apply B+ between terminals 3 and 4.	1 - 2	Continuity

If continuity is not as specified, replace the relay.

## 3. INSTALL CONDENSER FAN RELAY