


CONDENSER FAN RELAY (Dual A/C)

INSPECTION

AC1U3-01

1. REMOVE CONDENSER FAN RELAY
- (a) Remove the front bumper cover (See page BO-4)
 - (b) Disconnect the connector.
 - (c) Release the claw and remove the relay.

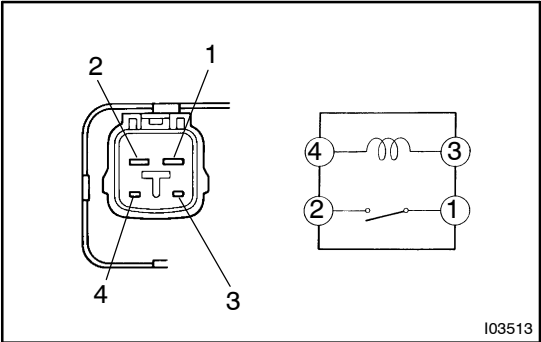

2. INSPECT CONDENSER FAN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	3 - 4	Continuity
Apply B+ between terminals 3 and 4.	1 - 2	Continuity

If continuity is not as specified, replace the relay.

3. INSTALL CONDENSER FAN RELAY