


## ADJUSTMENT

### 1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTION

Loosen the body side hinge bolts to adjust.


**Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)**

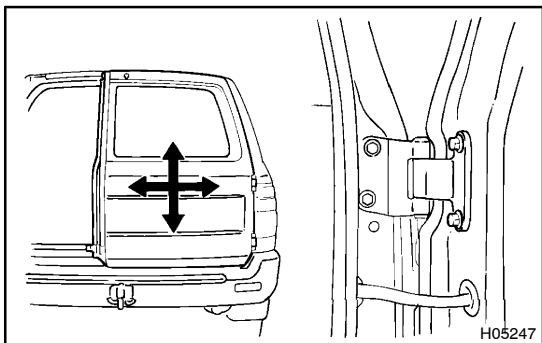

### 2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTION

Loosen the door side hinge bolts to adjust.

**Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)**

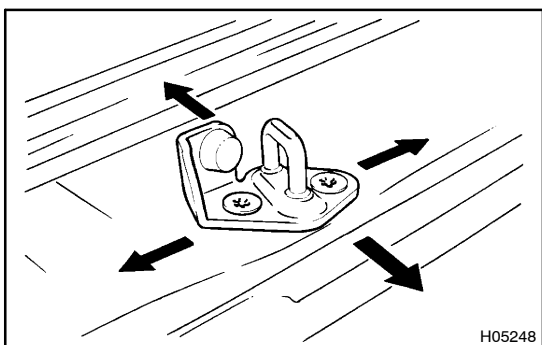

### 3. ADJUST DOOR UPPER LOCK STRIKER


(a) Check that the door fit and door lock linkages are adjusted correctly.

(b) Using a torx wrench, loosen the door lock striker mounting screws.

**Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)**

**Torque: 12 N·m (122 kgf·cm, 19 ft·lbf)**

(c) Using a plastic hammer, tap the striker to adjust.

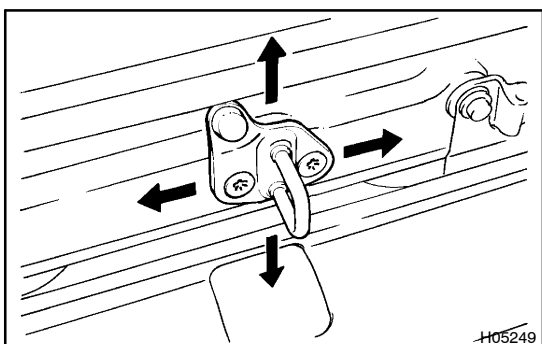

### 4. ADJUST DOOR LOWER LOCK STRIKER


(a) Check that the door fit and door lock linkages are adjusted correctly.

(b) Using a torx wrench, loosen the door lock striker mounting screws.

**Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)**

**Torque: 12 N·m (122 kgf·cm, 19 ft·lbf)**

(c) Using a plastic hammer, tap the striker to adjust.

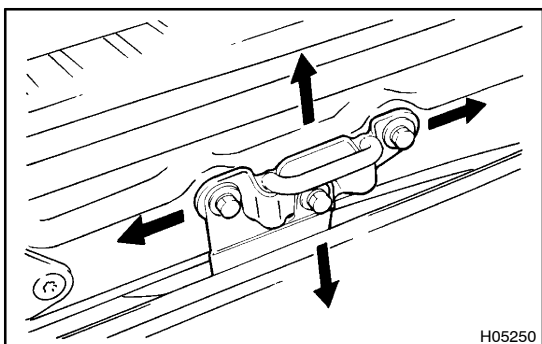

### 5. ADJUST BACK DOOR STOPPER BRACKET

(a) Check that the door fit and door stopper are adjusted correctly.

(b) Loosen the door stopper bracket mounting bolts.

**Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)**

(c) Using a plastic hammer, tap the striker to adjust.