


Height Control Indicator Light Circuit

CIRCUIT DESCRIPTION

This indicator light indicates the present vehicle height. The indicator light of the target vehicle height selected by the height select switch is flashed while the height control is operated and waited.

WIRING DIAGRAM

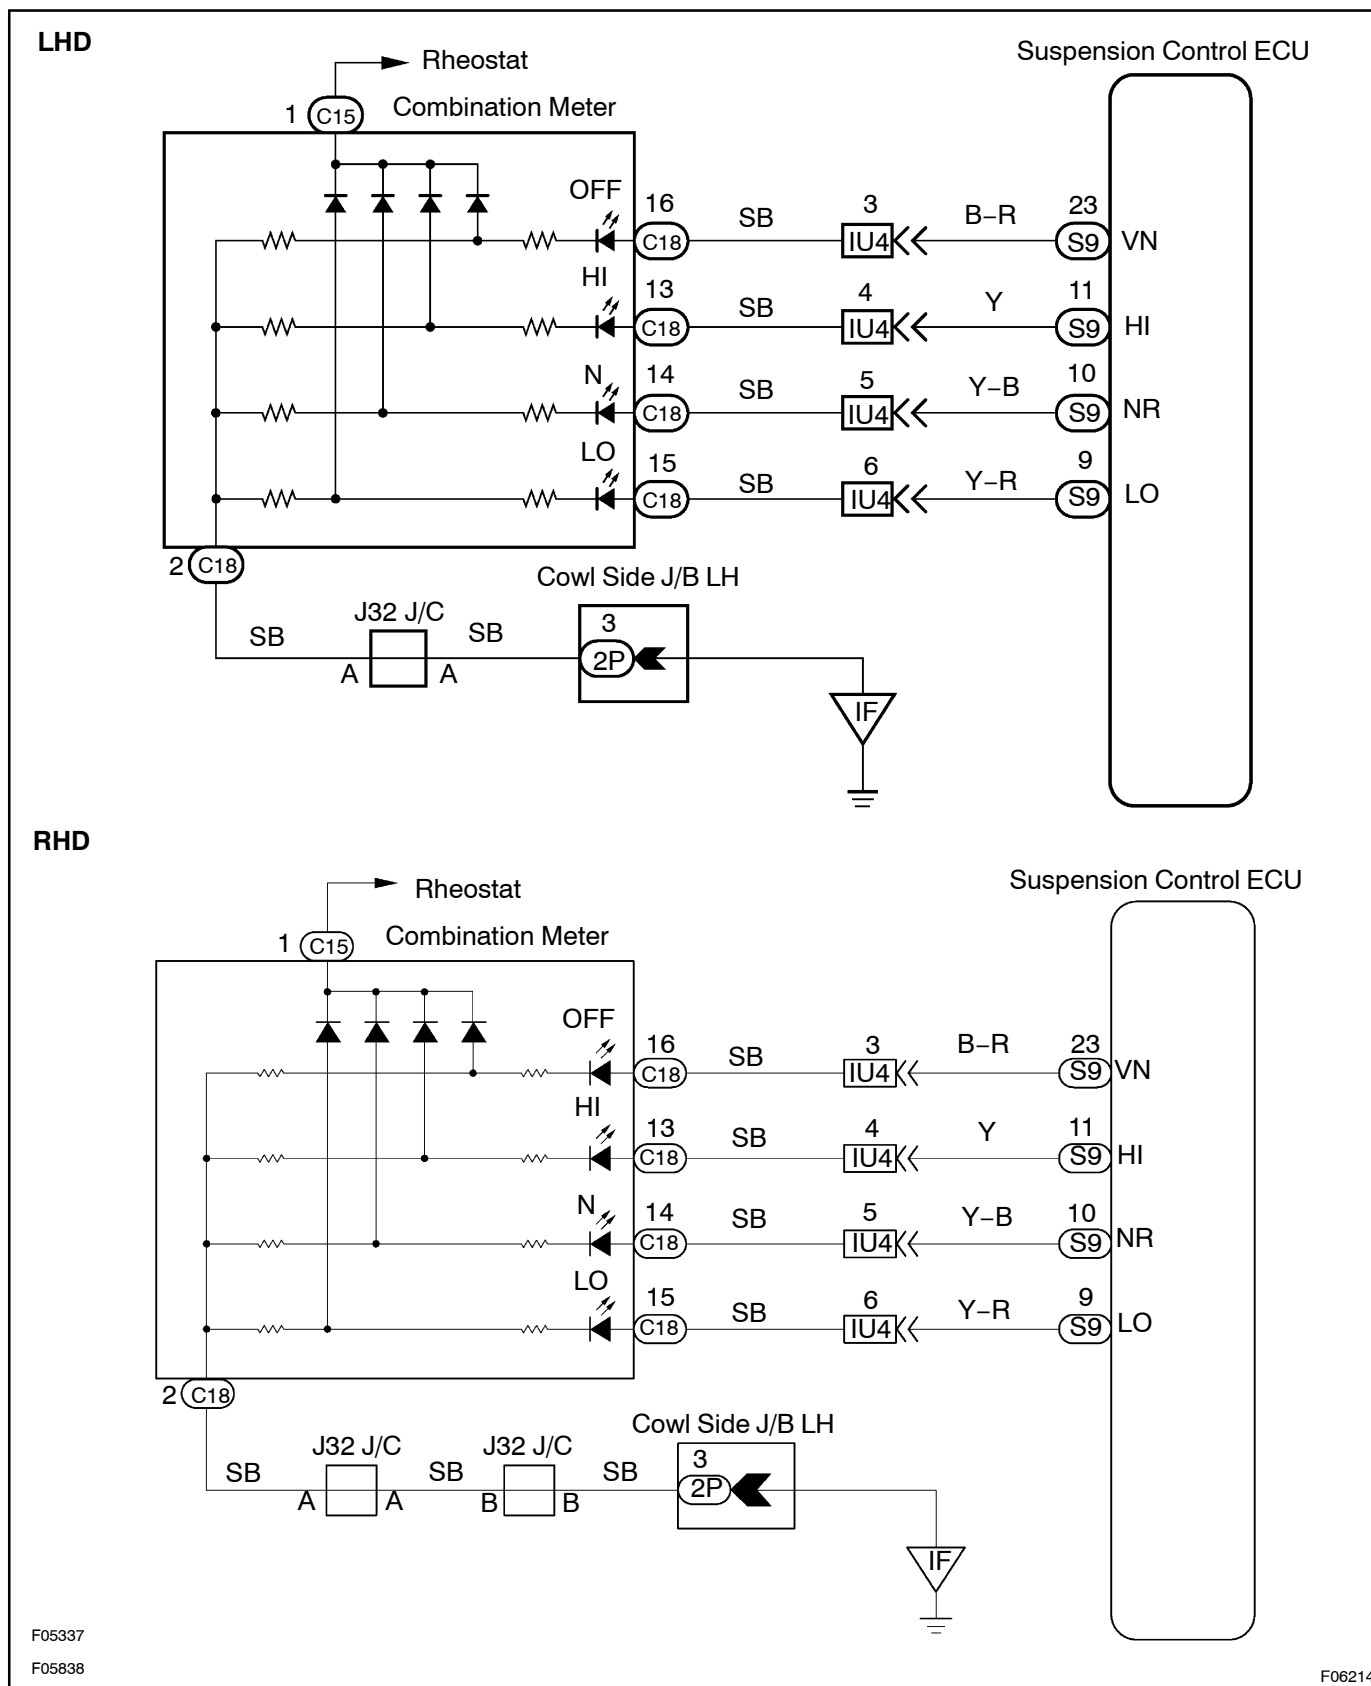

INSPECTION PROCEDURE**1 Check height control indicator light.**

See combination meter troubleshooting on [page BE-2](#).

NG**Repair bulb or combination meter assembly.****OK****2 Check for open and short circuit in harness and connector between height control indicator and suspension control ECU (See [page IN-35](#)).****NG****Repair or replace harness or connector.****OK****Check and replace suspension control ECU.**