


REMOVAL

1. REMOVE REAR WHEEL
2. REMOVE REAR AXLE SHAFT (See page SA-155)
3. DRUM BRAKE:
REMOVE DRUM
4. DISC BRAKE:
REMOVE BRAKE CALIPER AND DISC
 - (a) Remove the 2 bolts, washers and brake caliper.
 - (b) Support the brake caliper securely.
5. REMOVE REAR AXLE BEARING LOCK NUT
 - (a) Remove the 2 screws from the lock nut.

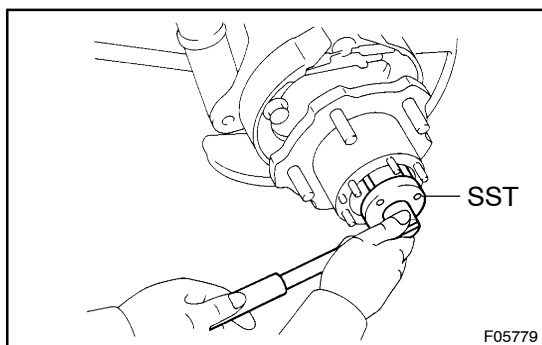

- (b) Using SST, remove the lock nut.
SST 09509-25011

6. REMOVE REAR AXLE HUB

Pull out the axle hub, remove the lock nut plate and outer bearing.