


CIRCUIT DESCRIPTION

Body ECU judges the switch position with the terminal voltage of the wiper and washer switch and runs the wiper motor.

WIRING DIAGRAM

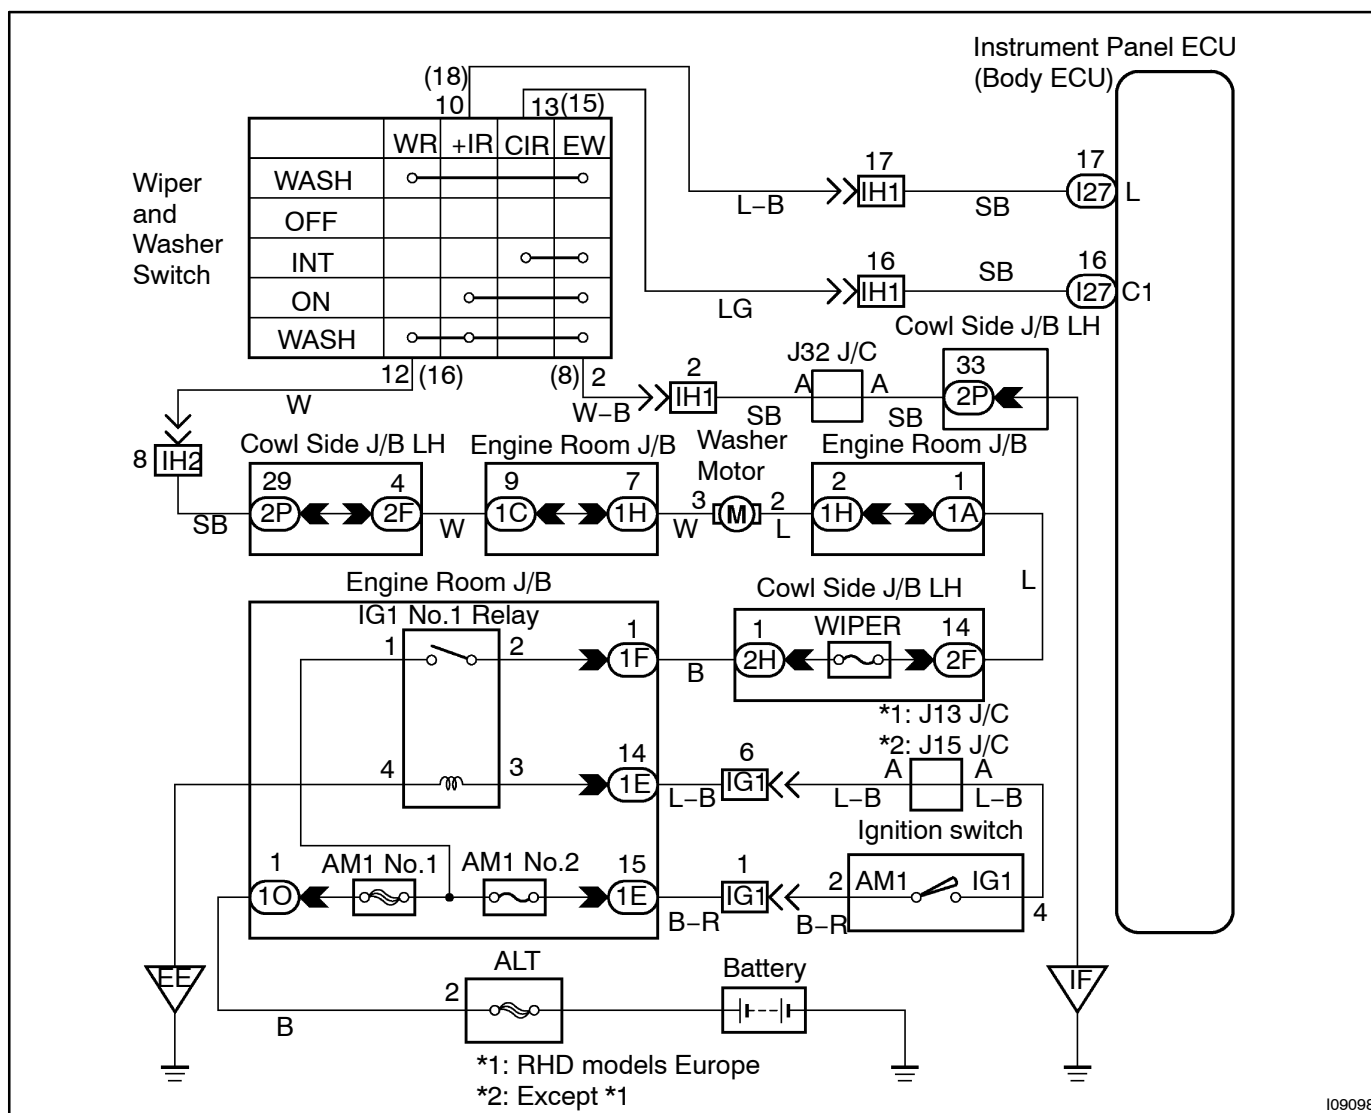

INSPECTION PROCEDURE

1 Check rear wiper and washer switch (See page BE-64)

NG

Replace the rear wiper and washer switch.

OK

2 Check wireharness and connector between rear wiper and washer switch and Body ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page DI-773)