


Taillight relay circuit


CIRCUIT DESCRIPTION

The Headlight dimmer switch sends a signal to the Body ECU.

WIRING DIAGRAM

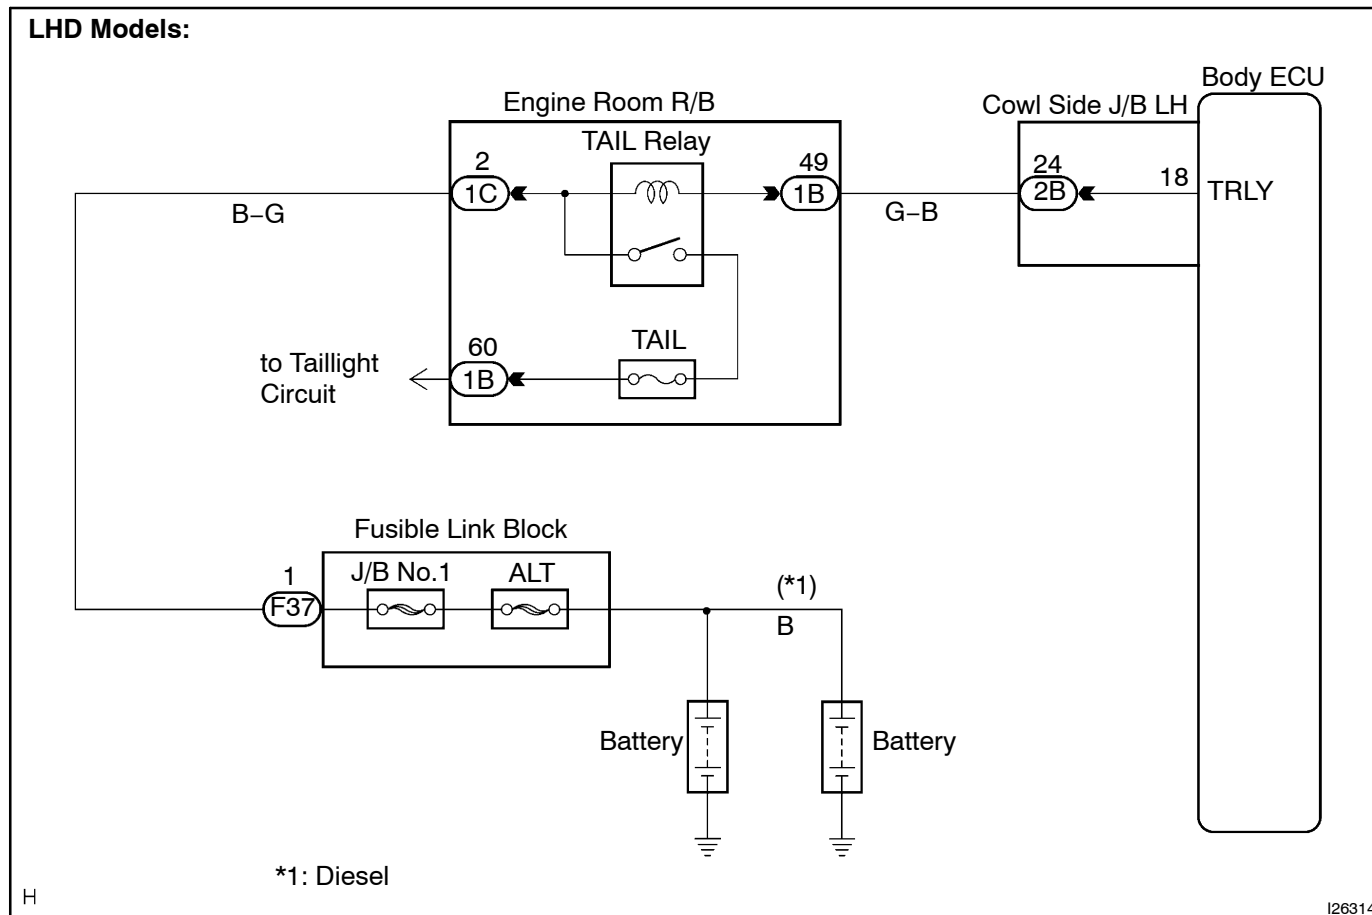

RHD Models:

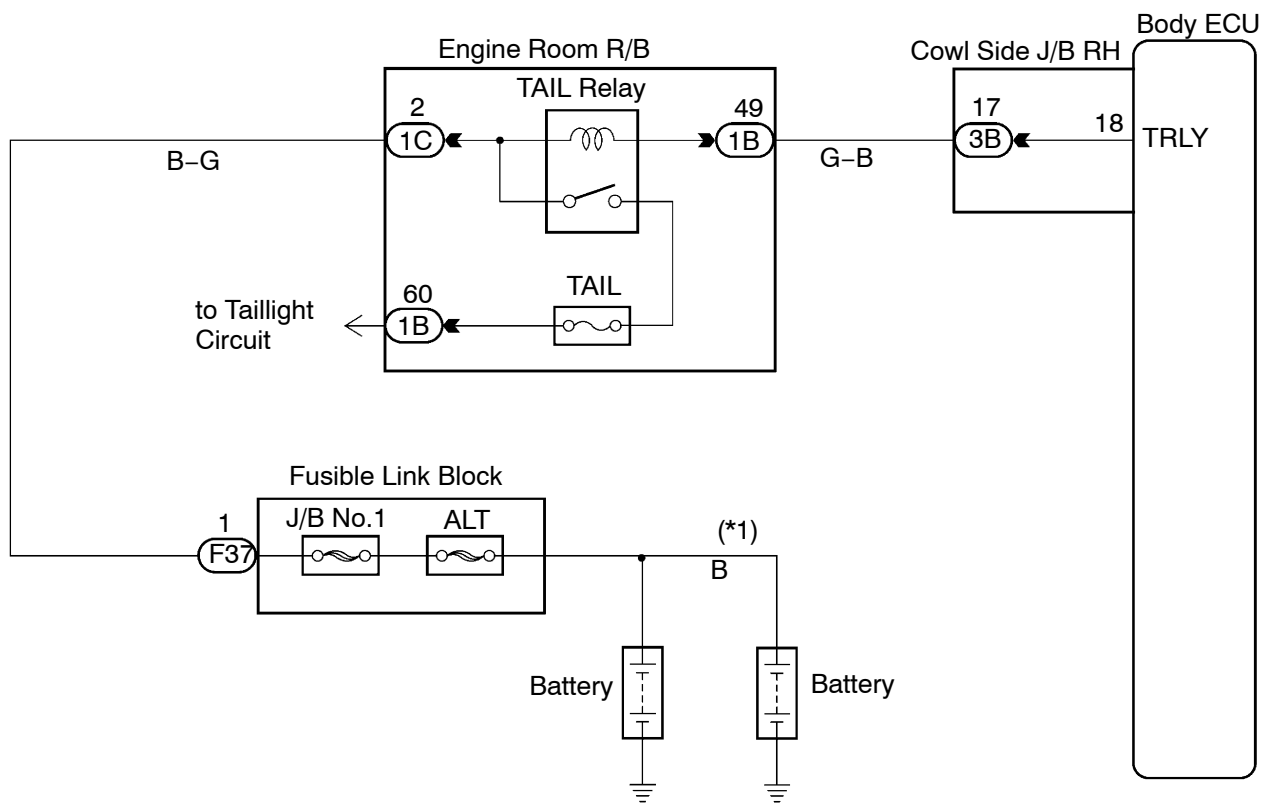

H

I26314

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1 Check taillight relay using hand-held tester.

PREPARATION:

Connect the hand-held tester to DLC3.

CHECK:

Check that the taillight relay can operate in ACTIVE TEST (See page DI-981).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-992).

NG

2 Check Taillight relay (See page BE-23).

NG

Replace engine room J/B assy with wire harness.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-992).