



## Power window motor circuit on front RH door

### CIRCUIT DESCRIPTION

The front RH power window switch receives the power window switch signal from the switch to operate the power window motor.

### WIRING DIAGRAM

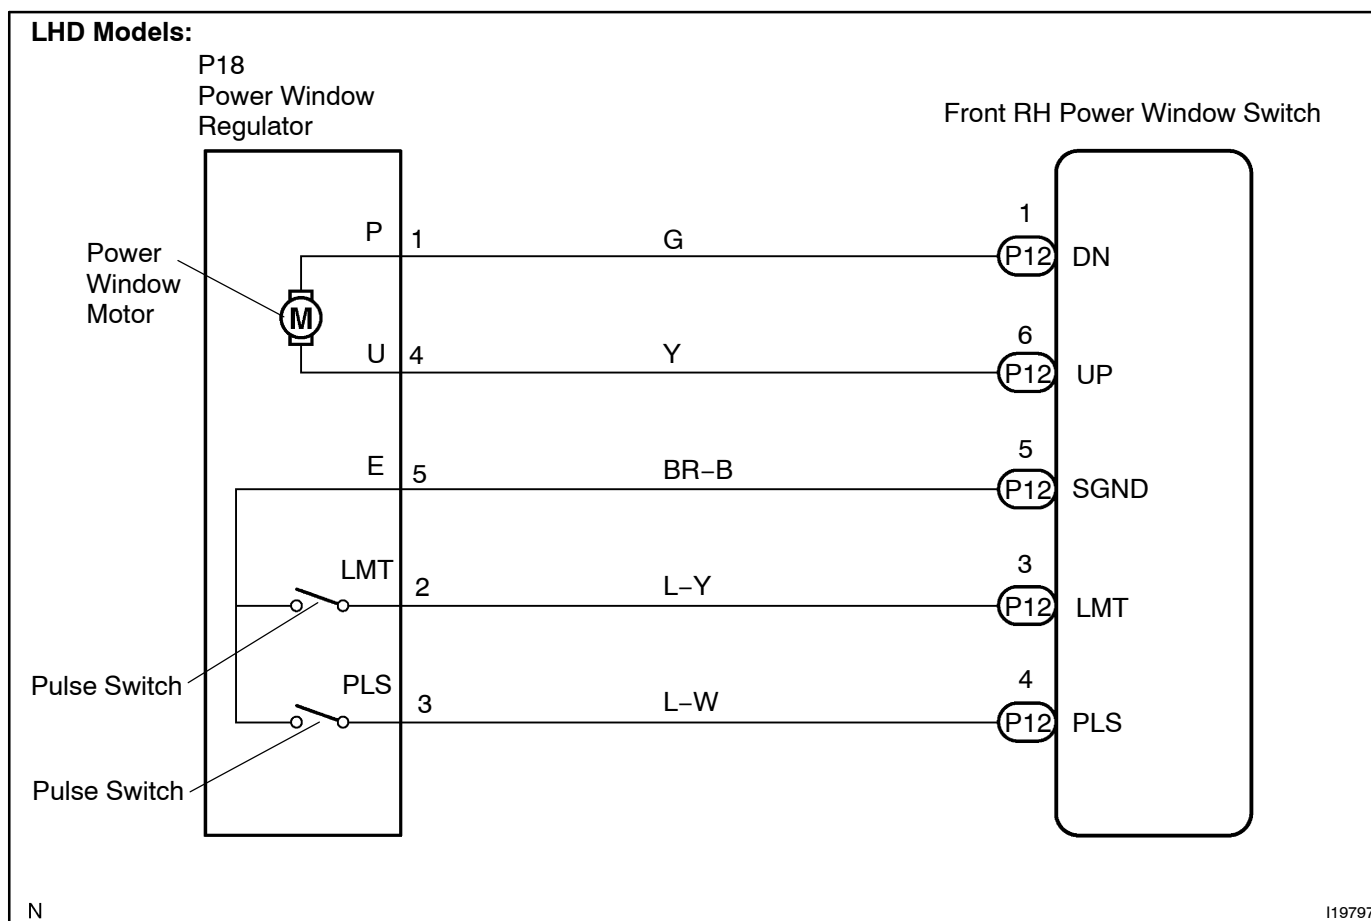

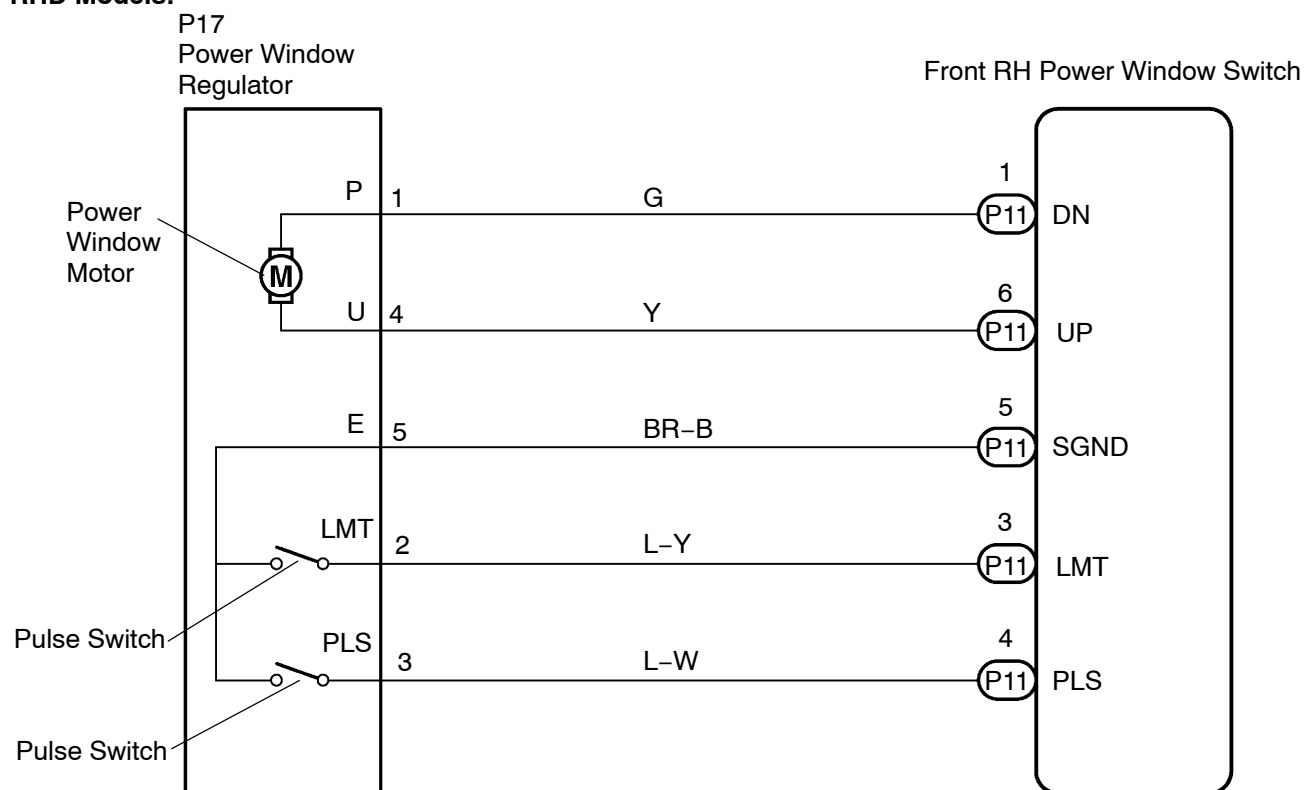**RHD Models:**

N

I19797

INSPECTION PROCEDURE

HINT:  
In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1

Check power window motor using hand-held tester.

PREPARATION:

Connect the hand-held tester to DLC3.

CHECK:

Check that the power window motor can operate in ACTIVE TEST (See page DI-981).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1063).

NG

2

Check power window motor (See page BE-51).

NG

Replace power window motor.

OK

3

Check wire harness and connector between power window motor and front RH power window switch (See page N-38).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1063).