

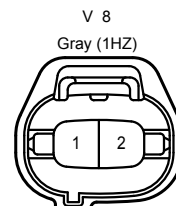
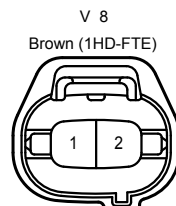
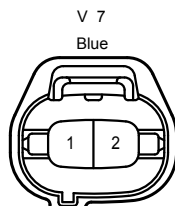
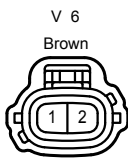
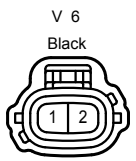
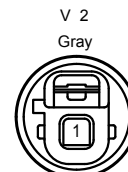
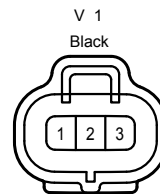
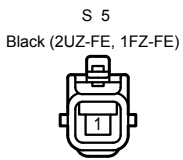
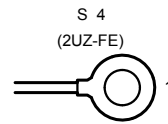
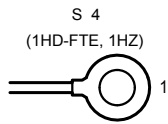
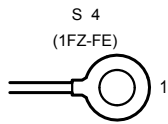
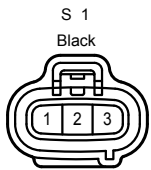
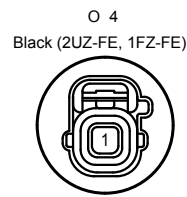
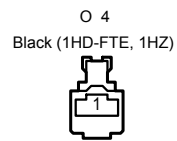
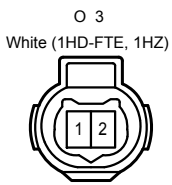

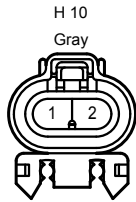
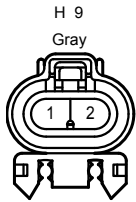
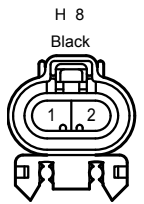
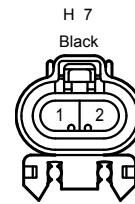
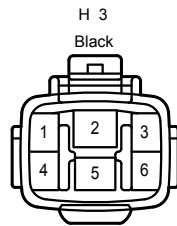


H	1	Headlight Beam Level Control Actuator LH
H	2	Headlight Beam Level Control Actuator RH
H	3	Headlight Cleaner Control Relay
H	4	Headlight Cleaner Motor
H	7	Headlight LH (High)
H	8	Headlight RH (High)
H	9	Headlight LH (Low)
H	10	Headlight RH (Low)
H	17	Horn LH
H	18	Horn RH
N	6	Noise Filter (ABS)
O	3	Oil Level Sensor
O	4	Oil Pressure Sender
P	1	Pick-Up Sensor
S	1	Speed Sensor (Combination Meter)
S	4	Starter
S	5	Starter
T	2	Theft Deterrent Horn
T	24	Throttle Position Sensor and Timing Control Valve
V	1	Vacuum Sensor
V	2	Vacuum SW
V	6	VRV (EGR)
V	7	VSV (A/C Idle-Up)
V	8	VSV (EGR Cut)
V	15	VSV (BACS)
W	2	Washer Motor
W	3	Water Temp. Sender
W	4	Water Temp. Sensor (Glow Plug)
W	5	Water Temp. SW (A/C)
W	7	Winch Main Relay
W	8	Winch Main Relay
W	9	Winch Main Relay
W	10	Winch Motor and Magnetic SW
W	11	Winch Motor and Magnetic SW

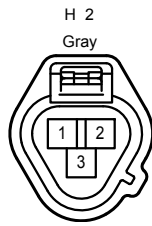

Position of Parts in Engine Compartment <LHD 1HZ>

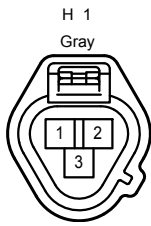