


## Power window motor circuit on driver door

### CIRCUIT DESCRIPTION

The power window master switch receives the power window switch signal from the master switch to operate the power window motor.

### WIRING DIAGRAM

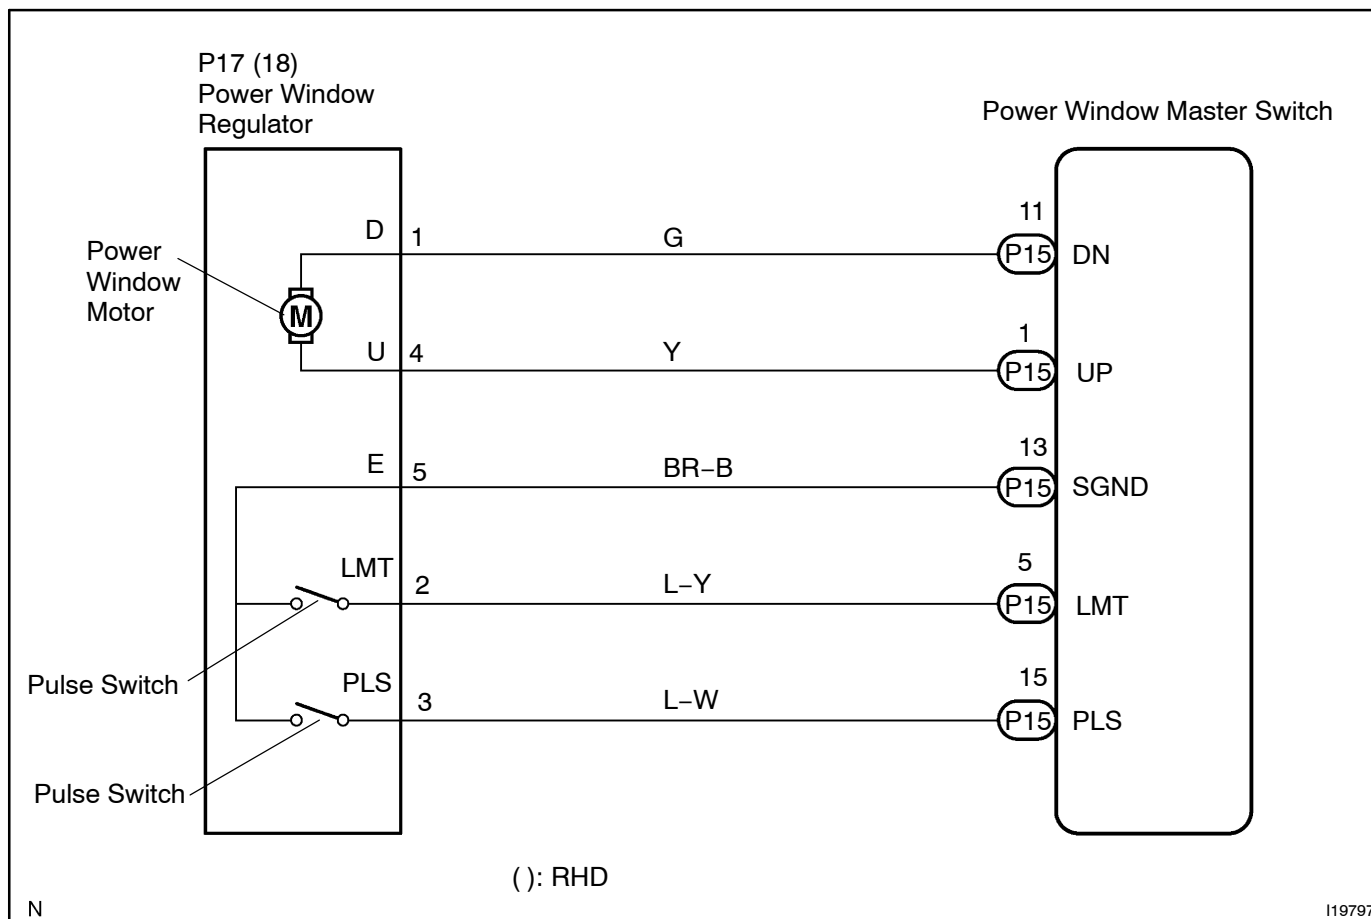

## INSPECTION PROCEDURE

### HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

**1** Check power window motor using hand-held tester.

### PREPARATION:

Connect the hand-held tester to DLC3.

### CHECK:

Check that the power window motor can operate in ACTIVE TEST (See page DI-981).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1063).

NG

**2** Check power window motor (See page BE-51).

NG

Replace power window motor.

OK

**3** Check wire harness and connector between power window motor and power window master switch (See page IN-38).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1063).