


## Connector Joining Wire Harness and Wire Harness

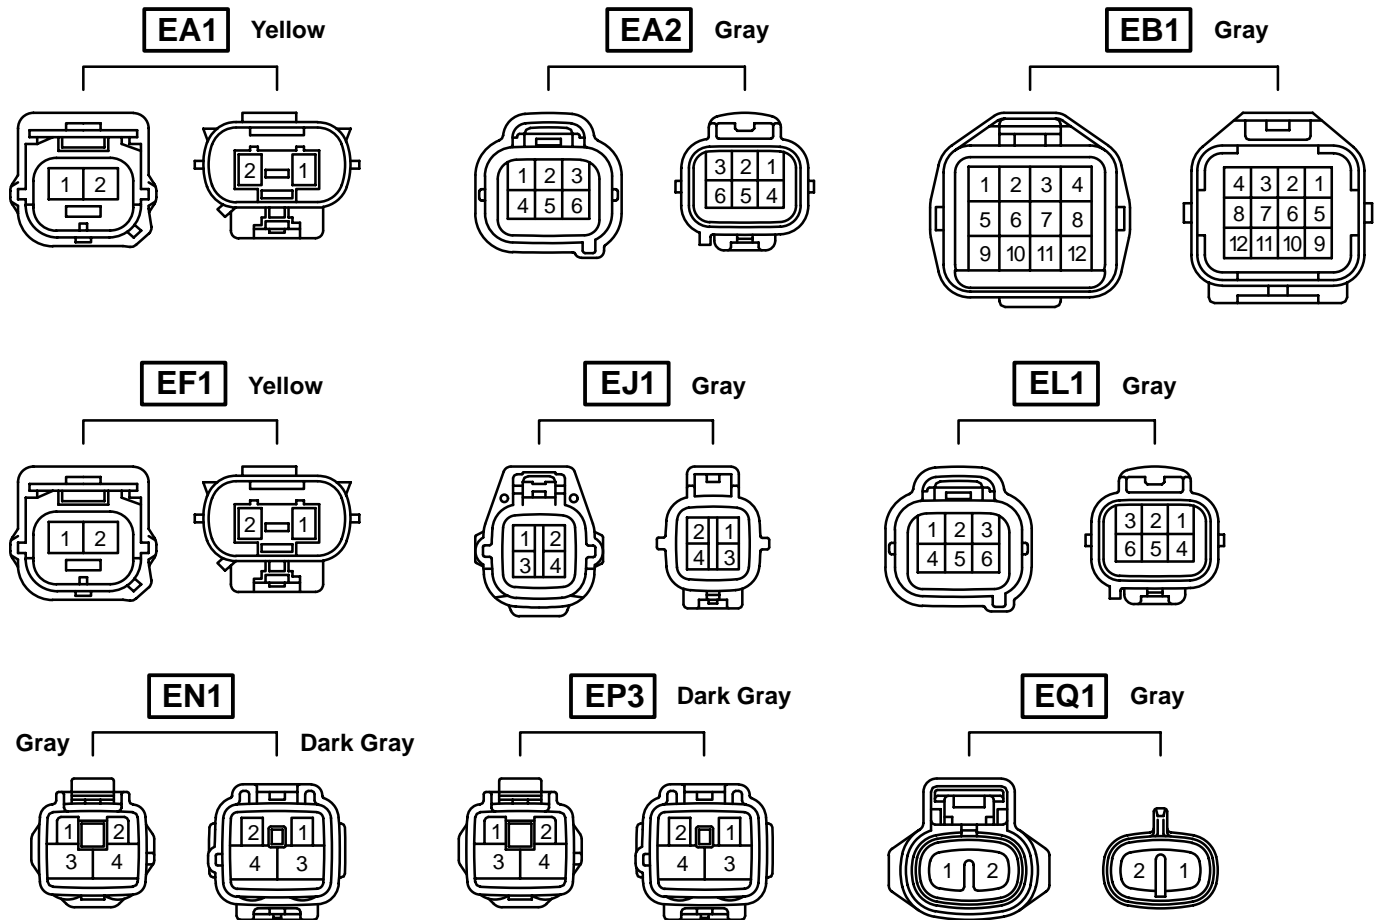

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
EA2	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
EB1	Engine Wire and Transmission Wire (On the Transmission)
EF1	Engine Room No.2 Wire and Engine Room Main Wire (Under the Engine Room J/B)
EJ1	Engine Room Main Wire and Alternator Wire (Near the Battery)
EL1	Engine Room No.2 Wire and Differential Wire (Engine Compartment Right)
EN1	Engine Room No.2 Wire and Engine No.2 Wire (Near the Engine Room J/B)
EP3	Engine Wire and Engine No.2 Wire (On the Transmission)
EQ1	Engine Room No.2 Wire and Magnet SW to Winch Wire (Near the Engine Room J/B)