


REMOVAL

1. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
2. w/Airbag:
REMOVE STEERING WHEEL PAD
(See page SR-13)
3. w/Airbag:
REMOVE STEERING WHEEL
(See page SR-13)
4. LHD:
REMOVE LH FRONT FENDER APRON SEAL
Remove the 9 clips.
5. RHD:
REMOVE RH FRONT FENDER APRON SEAL
Remove the 11 clips.

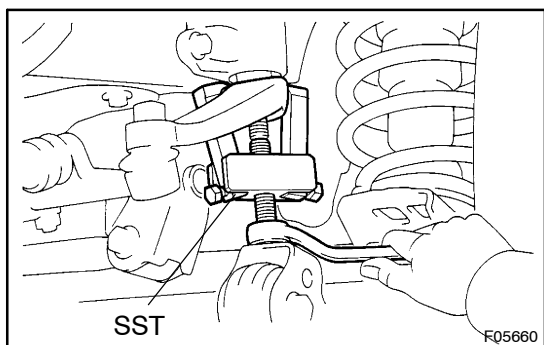


6. DISCONNECT PITMAN ARM
 - (a) Remove the nut and spring washer.
 - (b) Using SST, disconnect the pitman arm with relay rod from the gear assembly.
SST 09628-62011

7. REMOVE JOINT COVER

Remove the 2 bolts.

8. DISCONNECT SLIDING YOKE

(See page SR-13)

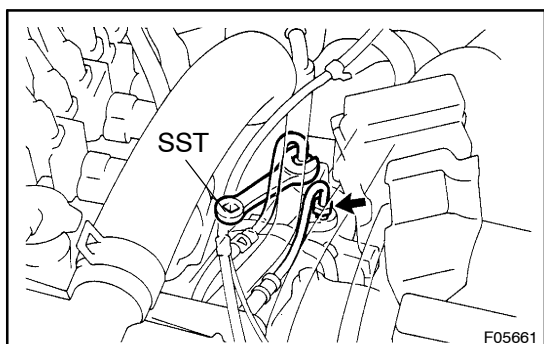

9. DISCONNECT PRESSURE FEED AND RETURN TUBES

Using SST, disconnect the tube.

SST 09631-22020

10. REMOVE PS GEAR ASSEMBLY

Remove the 4 bolts and nuts.