


## REMOVAL


1. DISCONNECT HIGH-TENSION CORDS FROM IGNITION COILS
2. DISCONNECT IGNITION COIL CONNECTORS FROM IGNITION COILS

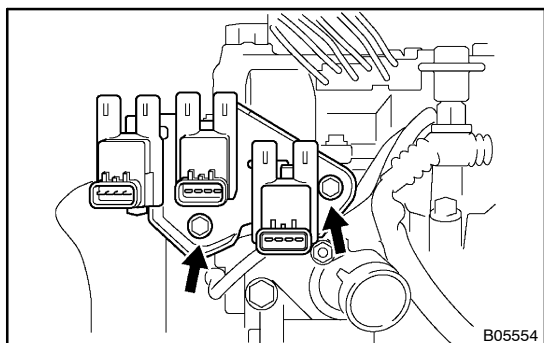

### 3. REMOVE IGNITION COIL AND BRACKET ASSEMBLIES

Remove the bolt and ignition coil and bracket assembly. Remove the 3 ignition coil and bracket assemblies.


**Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)**

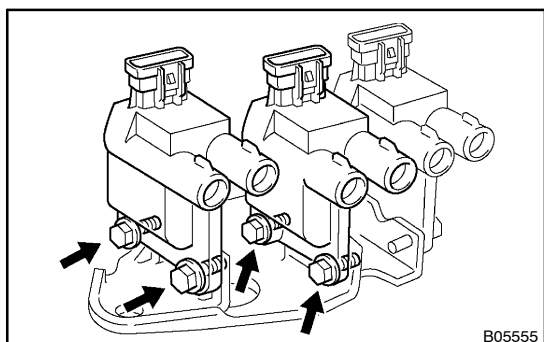

### 4. REMOVE IGNITION COIL FROM BRACKET

- (a) Remove the 4 bolts and ignition coil.

**Torque: 9.8 N·m (100 kgf·cm, 85 in·lbf)**

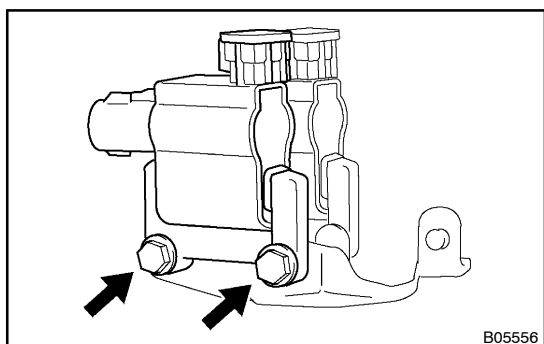

- (b) Remove the 2 bolts and ignition coil.

**Torque: 9.8 N·m (100 kgf·cm, 85 in·lbf)**