


## Connector Joining Wire Harness and Wire Harness

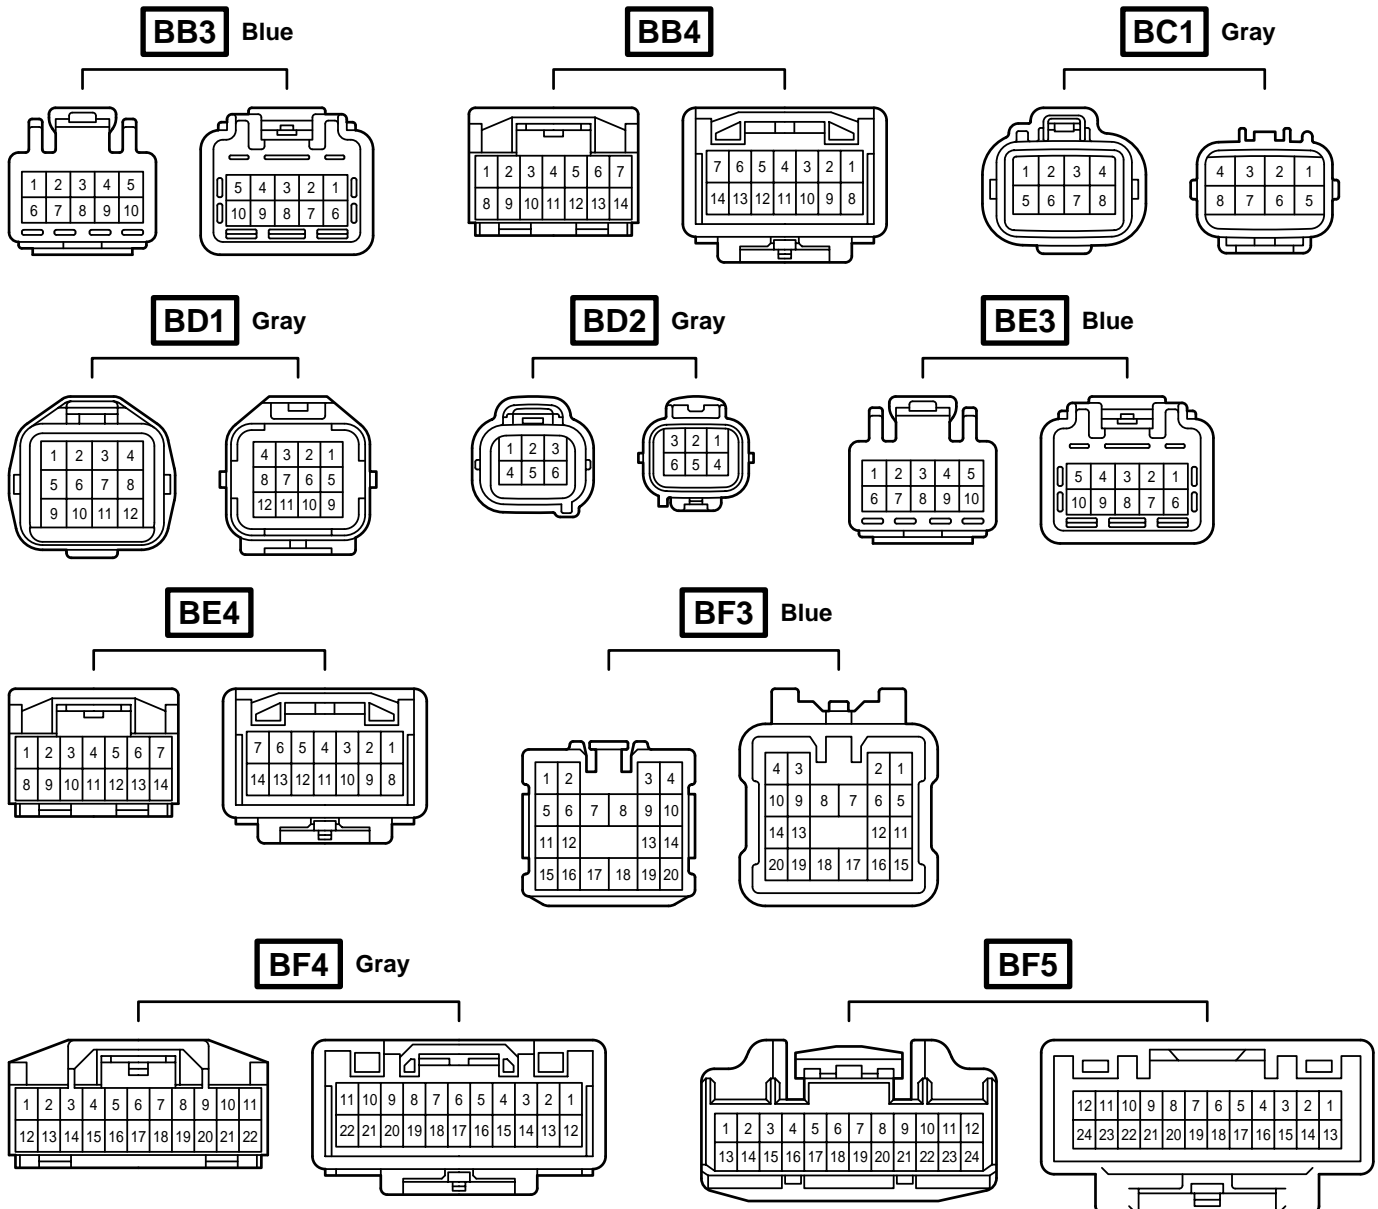

Code	Joining Wire Harness and Wire Harness (Connector Location)
BB3	Rear Door LH Wire and Floor No.1 Wire (Left Side of Center Pillar)
BB4	
BC1	Floor No.1 Wire and Fuel Tank Wire (Near the Fuel Tank)
BD1	
BD2	Frame No.2 Wire and Frame Wire (Near the Left Rear Suspension Support)
BE3	
BE4	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)
BF3	
BF4	Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BF5	