


\* 5:w/o Moon Roof

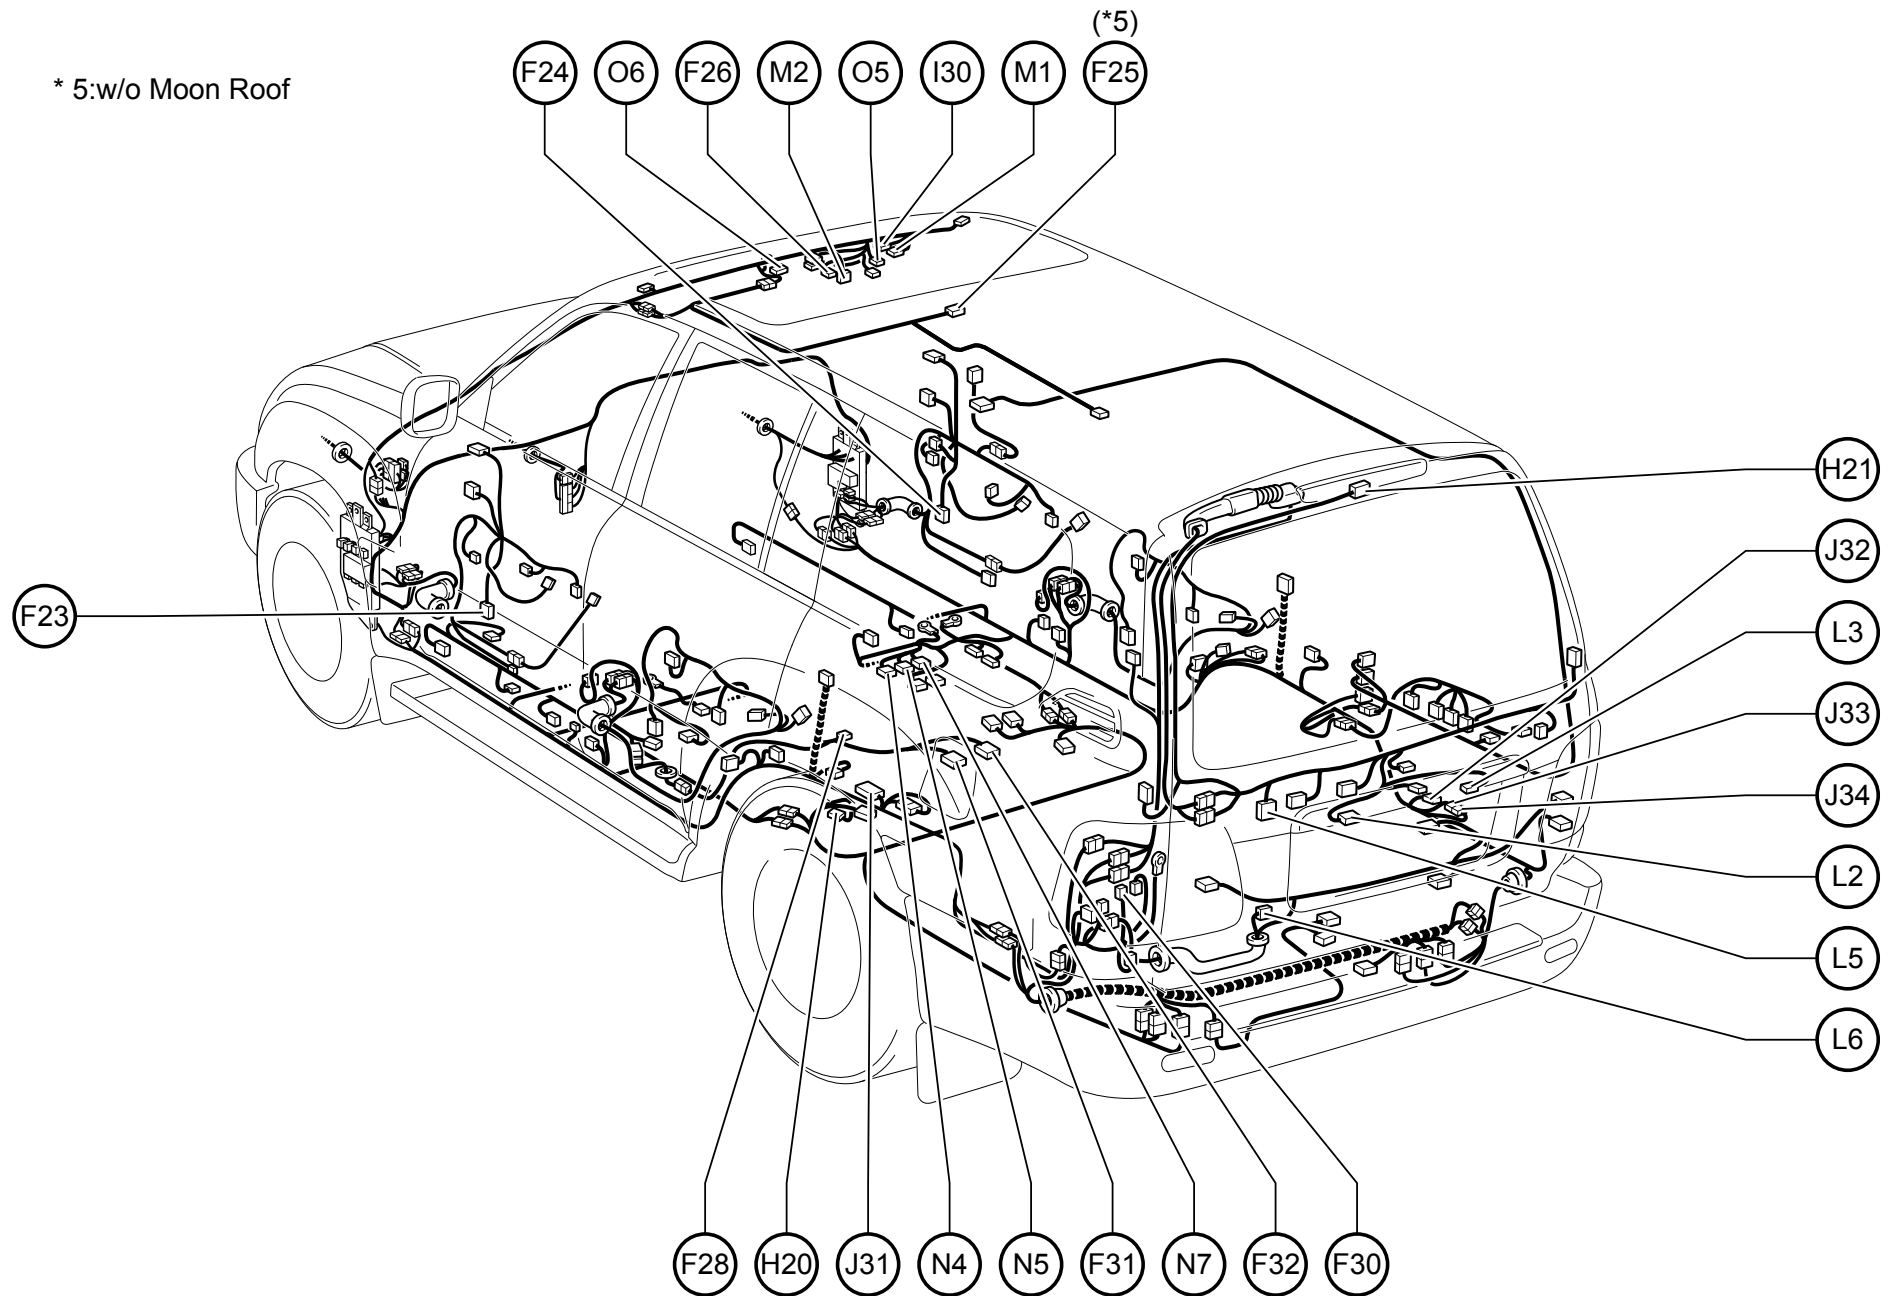

- F 23 Front Door Speaker LH
- F 24 Front Door Speaker RH
- F 25 Front Interior Light
- F 26 Front Personal Light
- F 28 Fuel Pump , Fuel Sender
- F 30 Fuel Pump Select Relay
- F 31 Fuel Solenoid Valve 1
- F 32 Fuel Solenoid Valve 2
  
- H 20 Height Control Sensor Rear
- H 21 High Mounted Stop Light
  
- I 30 Inner Mirror
  
- J 31 Junction Connector
- J 32 Junction Connector
- J 33 Junction Connector
- J 34 Junction Connector
  
- L 2 License Plate Light LH
- L 3 License Plate Light RH
- L 5 License Plate Light No.1
- L 6 License Plate Light No.2
  
- M 1 Moon Roof Control ECU
- M 2 Moon Roof Control SW
  
- N 4 Navigation ECU
- N 5 Navigation ECU
- N 7 Navigation ECU
  
- O 5 Overhead J/B
- O 6 Overhead J/B

Position of Parts in Body <RHD Liftgate Type>

