


Connector Joining Wire Harness and Wire Harness

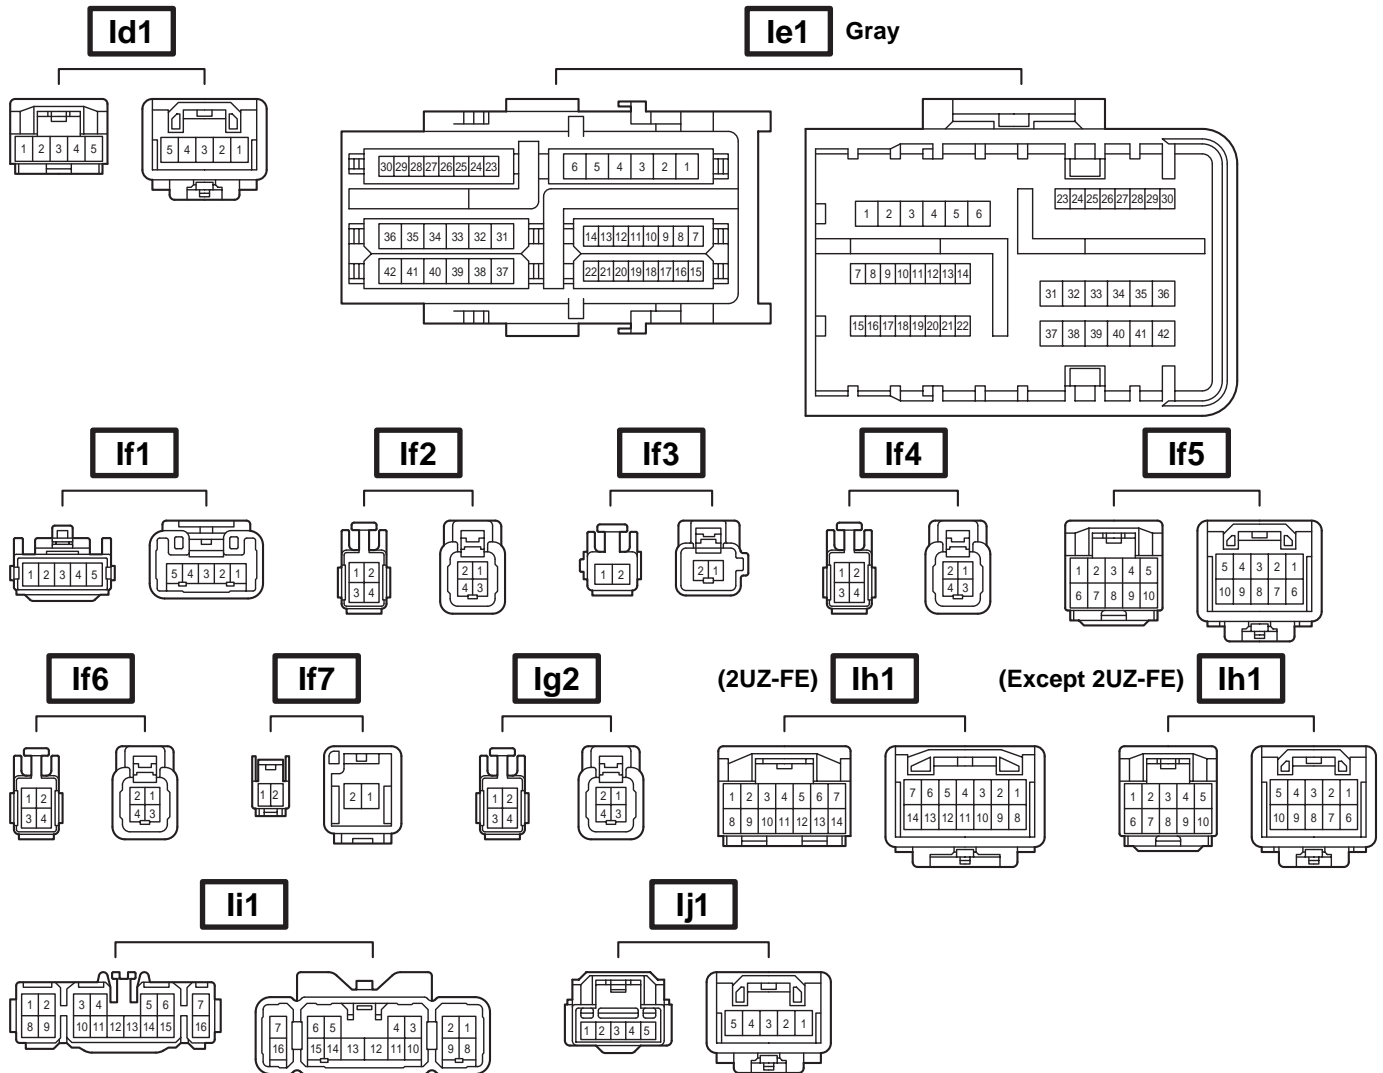

Code	Joining Wire Harness and Wire Harness (Connector Location)
Id1	Dash Wire and Dash Wire (Behind the Front Console)
Ie1	Dash Wire and Floor No.2 Wire (Right Side of Front Console)
If1	Dash Wire and Dash Wire (Instrument Panel Center)
If2	
If3	
If4	
If5	
If6	Dash Wire and Dash Wire (Behind the Glove Box)
If7	
Ig2	Dash Wire and Dash Wire (Behind the Glove Box)
Ih1	Engine Wire and Engine Wire (Behind the Glove Box)
Ii1	Dash Wire and Computer No.2 Wire (Behind the Glove Box)
Ij1	Instrument Panel Integration Wire and Instrument Panel No.3 Wire (Right Side of Instrument Panel)