


## REMOVAL

### 1. REMOVE FRONT HEIGHT CONTROL SENSOR

- (a) Remove the front wheel.

**Torque: 131 N·m (1,340 kgf·cm, 97 ft·lbf)**

- (b) Disconnect the connector.

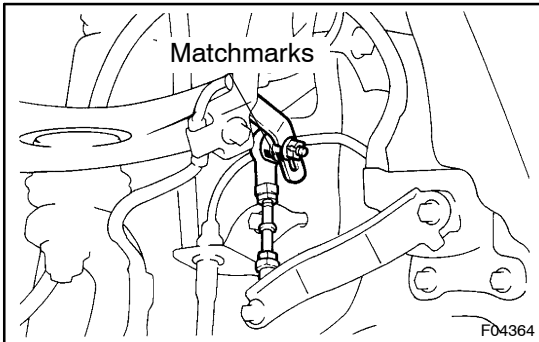

- (c) Remove the front height control sensor.

- (1) Place matchmarks on the height control sensor link and front upper suspension arm.

- (2) Remove the nut and disconnect the height control sensor link.

**Torque: 5.6 N·m (57 kgf·cm, 49 in·lbf)**

- (3) Remove the 2 bolts and height control sensor.


**Torque: 28 N·m (285 kgf·cm, 21 ft·lbf)**

### 2. REMOVE REAR HEIGHT CONTROL SENSOR

- (a) Remove the rear wheel.

**Torque: 131 N·m (1,340 kgf·cm, 97 ft·lbf)**

- (b) Disconnect the connector.

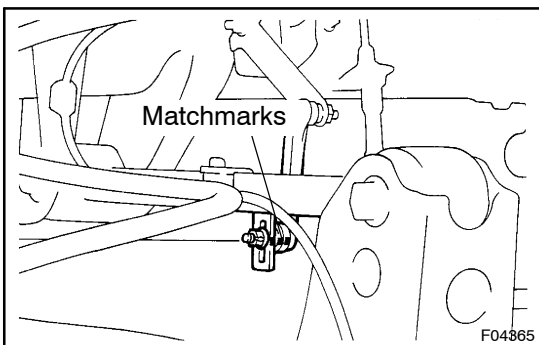

- (c) Remove the rear height control sensor.

- (1) Place matchmarks on the height control sensor link and rear upper control arm.

- (2) Remove the nut and disconnect the height control sensor link from the rear upper control arm.

**Torque: 5.6 N·m (57 kgf·cm, 49 in·lbf)**

- (3) Remove the 2 bolts and height control sensor.

**Torque: 28 N·m (285 kgf·cm, 21 ft·lbf)**