


## INSTALLATION

### NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

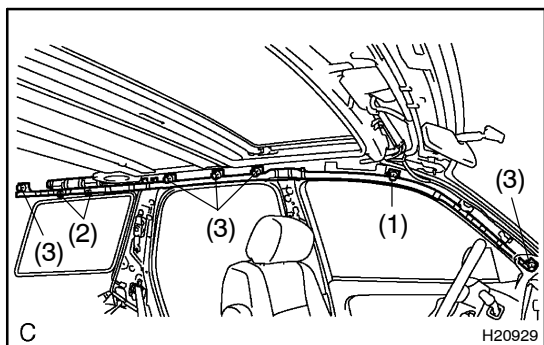

### 1. INSTALL CURTAIN SHIELD AIRBAG ASSEMBLY

(a) In the order shown in the illustration, install the curtain shield airbag with the 8 bolts.

Torque: 9.8 N·m (100 kgf·cm, 86 in·lbf)

### CAUTION:

Pay due attention not to twist the deployment section of the curtain shield airbag assembly.

### NOTICE:

- Make sure that the curtain shield airbag assembly is installed to the specified torque.
  - If the curtain shield airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the curtain shield airbag assembly with a new one.
  - When installing the curtain shield airbag assembly, take care it is not pinched between other parts.
- (b) Connect the connector of the curtain shield airbag assembly.

### 2. INSTALL ROOF HEADLINING (See page BO-97)

### 3. INSPECT SRS WARNING LIGHT (See page DI-432)