

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 3 Headlight Cleaner Control Relay
H 4 Headlight Cleaner Motor
H 7 Headlight LH (High)
H 8 Headlight RH (High)
H 9 Headlight LH (Low)
H 10 Headlight RH (Low)
H 17 Horn LH
H 18 Horn RH
H 22 Heated Oxygen Sensor

I 1 Ignition Coil and Igniter No.1
I 2 Ignition Coil and Igniter No.2
I 3 Ignition Coil and Igniter No.3
I 10 Injector No.1
I 11 Injector No.2
I 12 Injector No.3
I 13 Injector No.4
I 14 Injector No.5
I 15 Injector No.6
I 18 Intake Air Temp. Sensor
I 23 ISC Valve

K 1 Knock Sensor (Bank 1)
K 2 Knock Sensor (Bank 2)

N 2 Noise Filter (Ignition)
N 6 Noise Filter (ABS)

O 4 Oil Pressure Sender
























S 1 Speed Sensor (Combination Meter)
S 4 Starter
S 5 Starter

T 2 Theft Deterrent Horn
T 4 Throttle Position Sensor

V 1 Vacuum Sensor
V 3 Variable Resistor

W 2 Washer Motor
W 3 Water Temp. Sender
W 7 Winch Main Relay
W 8 Winch Main Relay
W 9 Winch Main Relay
W 10 Winch Motor and Magnetic SW
W 11 Winch Motor and Magnetic SW

Position of Parts in Engine Compartment <RHD 1FZ-FE>

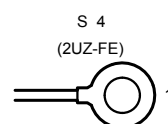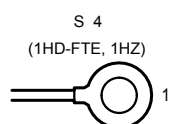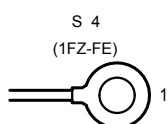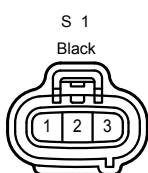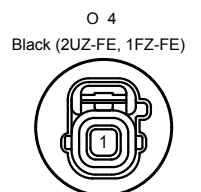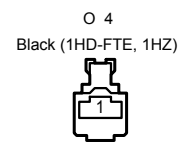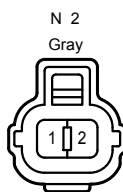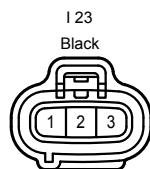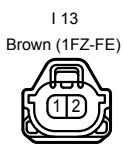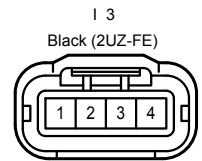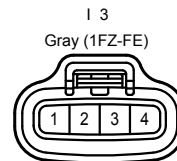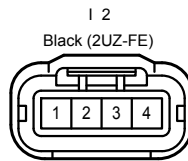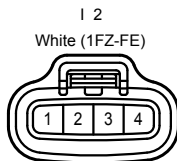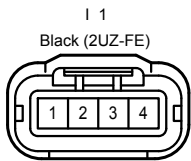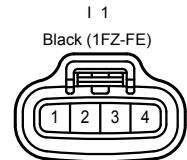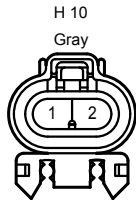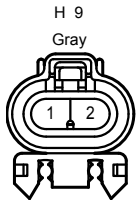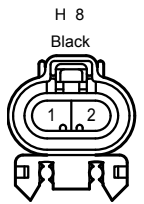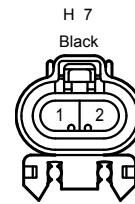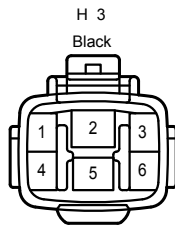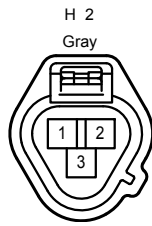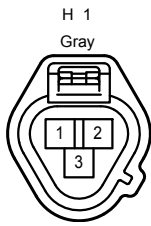

Position of Parts in Engine Compartment <RHD 1FZ-FE>

S 5
Black (2UZ-FE, 1FZ-FE)




T 2
Black



T 4
Black



V 1
Black

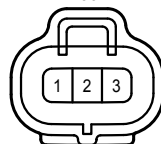

V 3
Black



W 2
Gray



W 3
Gray



W 7
Dark Gray



W 8
1



W 9
1



W 10
Dark Gray



W 11
1

