


## REMOVAL

### 1. REMOVE THESE PARTS:

- (a) Wiper arms
- (b) Hood to cowl top seal

### 2. REMOVE COWL TOP VENTILATOR LOUVER

- (a) Remove the RH cowl top ventilator louver.
- (b) Remove the LH cowl top ventilator louver.

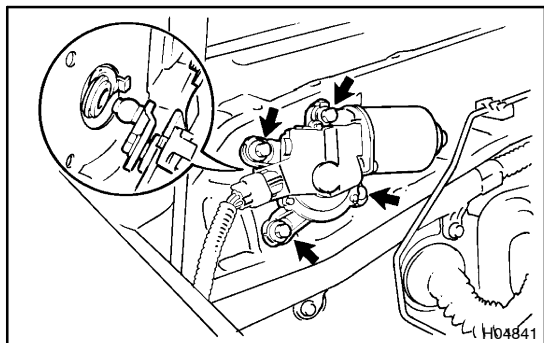


### 3. REMOVE WIPER MOTOR

- (a) Disconnect the connector, unfasten the 4 bolts.
- (b) Disconnect the wiper motor from the wiper link, then remove the wiper motor.

### 4. REMOVE WIPER LINK

- (a) Remove the 6 bolts.
- (b) Remove the wiper link through the service hole.

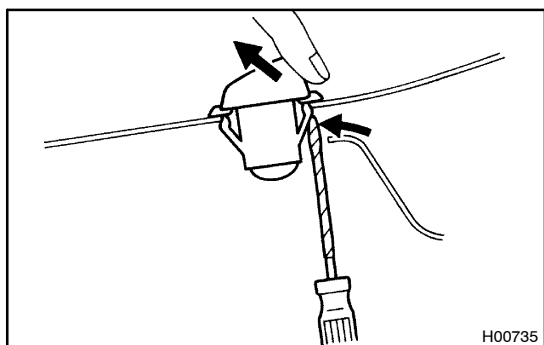

### 5. REMOVE WASHER NOZZLE

- (a) Disconnect the washer hoses.
- (b) Using a screwdriver, remove the washer nozzles.

#### HINT:

Tape the screwdriver tip before use.