


## E ELECTRICAL WIRING ROUTING

### Position of Parts in Engine Compartment

[LHD : 1HZ]

\* 1:Center Diff. Lock  
\* 2:Except \*1

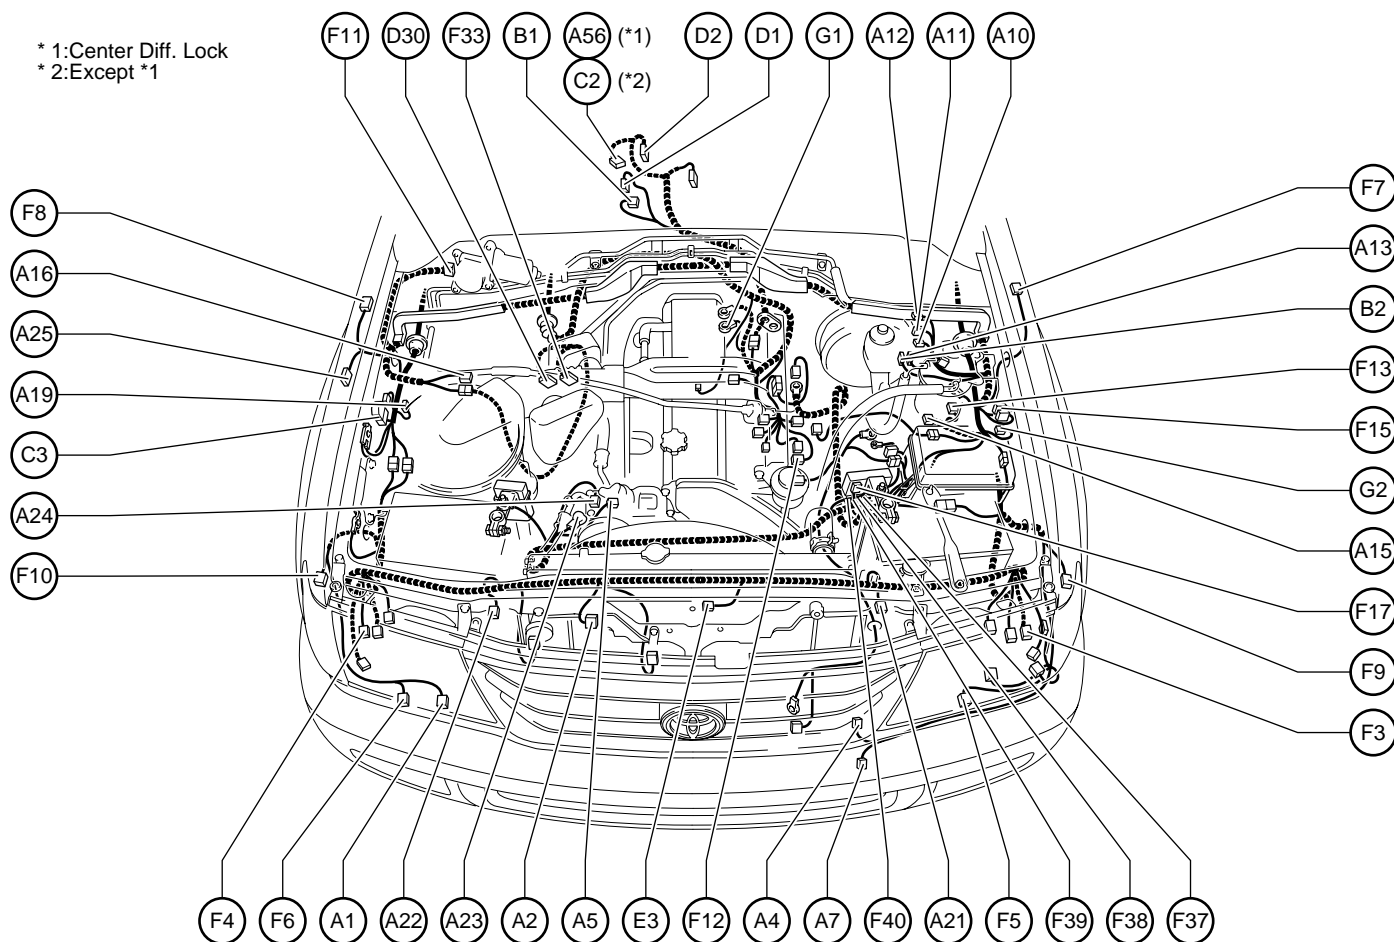

A 1 A/C Ambient Temp. Sensor  
A 2 A/C Condenser Fan Motor  
A 4 Pressure SW  
A 5 A/C Magnetic Clutch  
A 7 A/C Magnetic Valve  
A10 ABS Actuator  
A11 ABS Actuator  
A12 ABS Actuator  
A13 ABS Actuator  
A15 ABS Speed Sensor Front LH  
A16 ABS Speed Sensor Front RH  
A19 Air Cleaner Warning Sensor  
A21 Airbag Sensor Front LH  
A22 Airbag Sensor Front RH  
A23 Alternator  
A24 Alternator  
A25 Auto Antenna Motor  
A56 ADD Control Motor

B 1 Back-Up Light SW  
B 2 Brake Fluid Level Warning SW

C 2 Center Diff. Lock Control Motor  
C 3 Check Connector

D 1 Detection SW (Center Diff. Lock)  
D 2 Detection SW (Transfer L Position)  
D30 Detection SW (Front Diff. Lock)

E 3 Engine Hood Courtesy SW

F 3 Front Clearance Light LH  
F 4 Front Clearance Light RH  
F 5 Front Fog Light LH  
F 6 Front Fog Light RH  
F 7 Front Side Turn Signal Light LH  
F 8 Front Side Turn Signal Light RH  
F 9 Front Turn Signal Light LH  
F10 Front Turn Signal Light RH  
F11 Front Wiper Motor  
F12 Fuel Cut Valve Controller  
F13 Fuel Heater SW  
F15 Fuel Sediment SW  
F17 Fusible Link Block  
F33 Front Diff. Lock Motor  
F37 Fusible Link Block  
F38 Fusible Link Block  
F39 Fusible Link Block  
F40 Fusible Link Block

G 1 Glow Plug  
G 2 Glow Plug Relay