


# Wiper Control ECU Power Source Circuit

## CIRCUIT DESCRIPTION

This circuit provides power to operate the Wiper Control ECU.  
This circuit is the power supply for the BEAN drive circuit.

## WIRING DIAGRAM

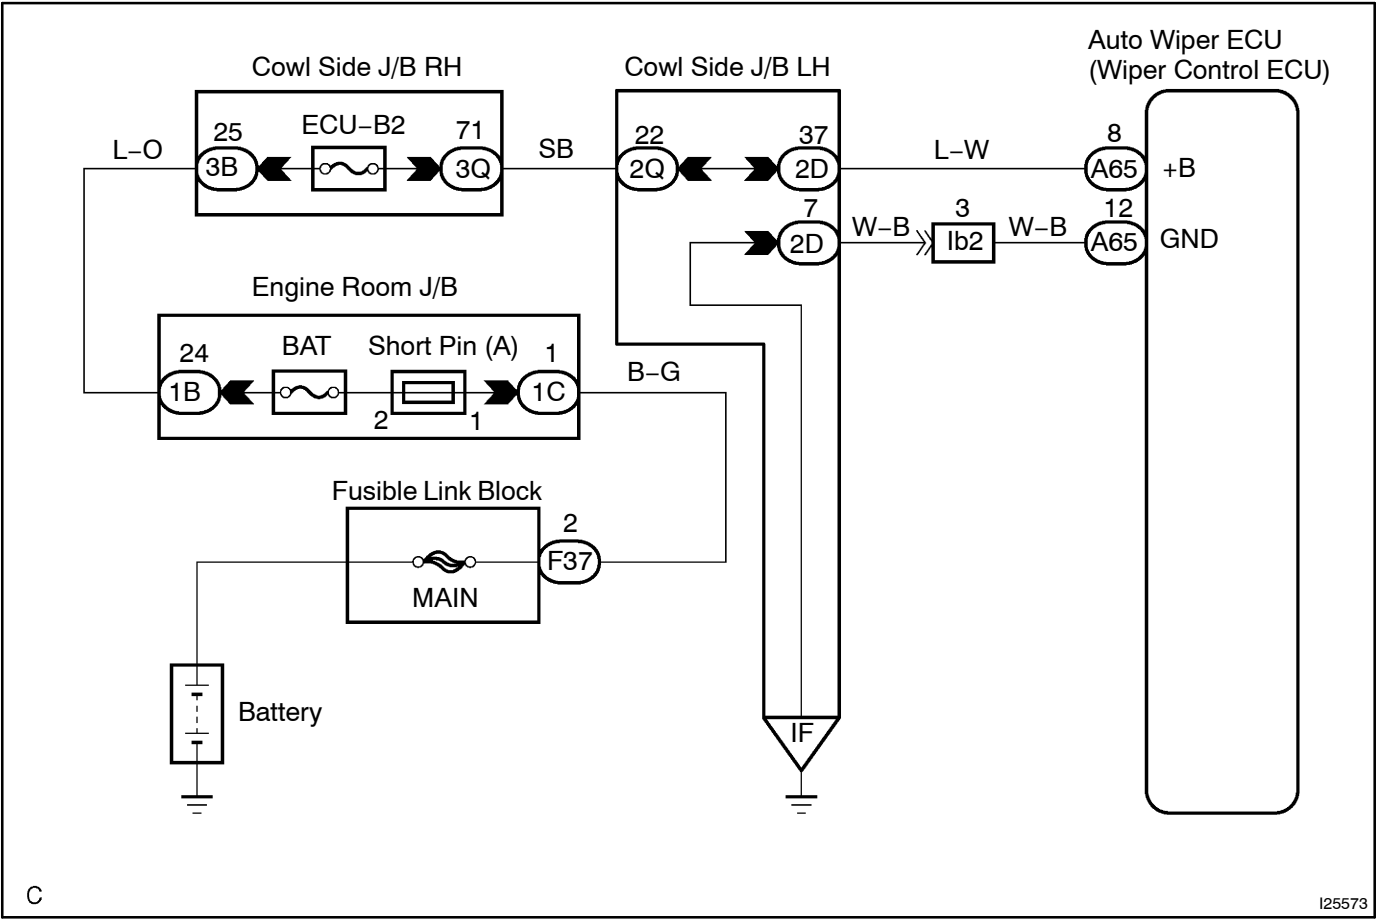

C

I25573

## INSPECTION PROCEDURE

## 1 Check ECU-B2 fuse.

**CHECK:**

Check continuity of ECU-B2 fuse.

**OK:**

Continuity

NG

Replace the failure fuse.

OK

## 2 Check voltage between terminal +B and GND of Wiper Control ECU.

**CHECK:**

Measure voltage between terminals +B and GND of Wiper Control ECU with connector being connected.

**OK:**

Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-930).

NG

## 3 Check wire harness and connector between Wiper Control ECU and body ground (See page N-38).

NG

Repair or replace wire harness or connector.

OK

Check and repair wire harness and connector between ECU and battery.