


■ MANUAL HEAD LIGHT LEVELING SYSTEM

When the vehicle posture is changed in accordance with the number (weight) of passengers and volume of luggage, this system enable to adjust the LO beam level (5-step) of the headlights manually to the appropriate level by adjusting headlight beam level control switch from driver. The beam level of the headlights can be adjusted with the actuators that are integrated in the headlight units.

► System Diagram ◀

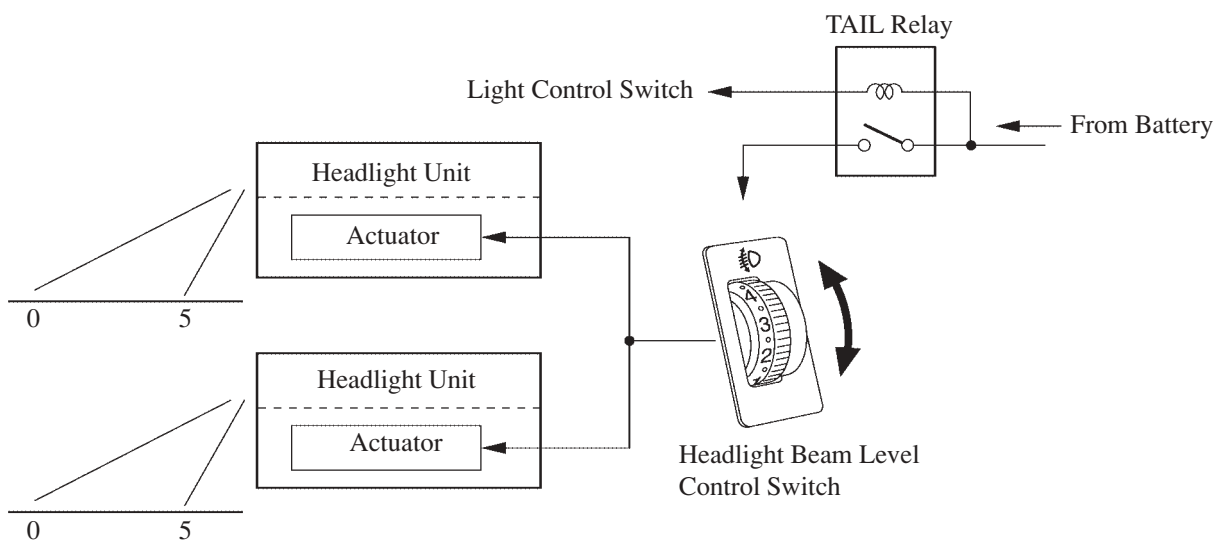

240BE22

– MEMO –