


Neutral Start Switch Circuit

CIRCUIT DESCRIPTION

The neutral start switch detects the shift lever position P and sends signals to the Body ECU.

WIRING DIAGRAM

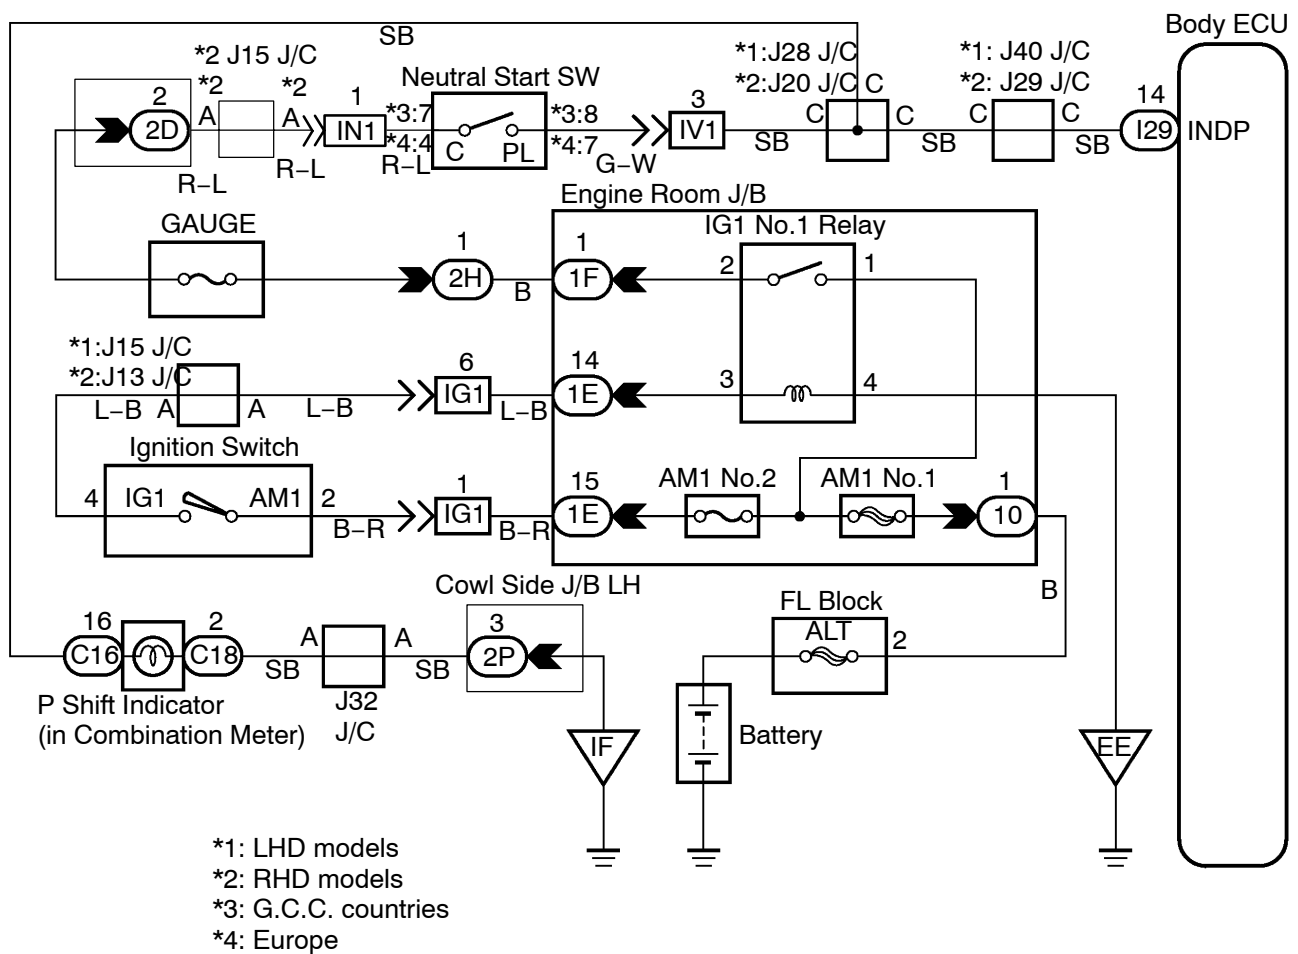

I08809

INSPECTION PROCEDURE**1** Check A/T shift operation.**CHECK:**

Check that the A/T shift operates normally.

NG**Proceed to A/T troubleshooting.**
(A343F: [See page DI-1](#))
(A442F: [See page DI-77](#))**OK****2** Check harness and connector between Body ECU and neutral start switch ([See page IN-35](#)).**NG****Repair or replace harness or connector.****OK****Check and replace Body ECU ([See page IN-35](#)).**