


## REMOVAL

1. REMOVE OIL PAN (See page LU-9)

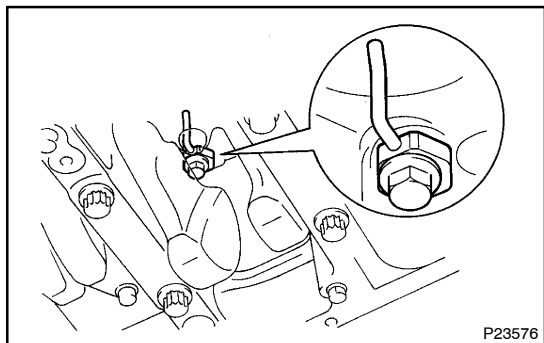

2. REMOVE CHECK VALVE AND OIL NOZZLE

Remove the 6 check valves and 6 oil nozzle.