


NEW FEATURES


■ HEADLIGHT LEVEL CONTROL SYSTEM

- Headlight level control system is used on all models as the standard equipment headlight system.
- This system adjusts the LO beam of the headlights adjusted in an appropriate level in accordance with the number (weight) of passengers and volume of luggage.
- When the driver operates the headlight beam level control switch, this system actuates the headlight leveling actuator that is integrated in the headlight unit, in order to change the headlight reflector angle.

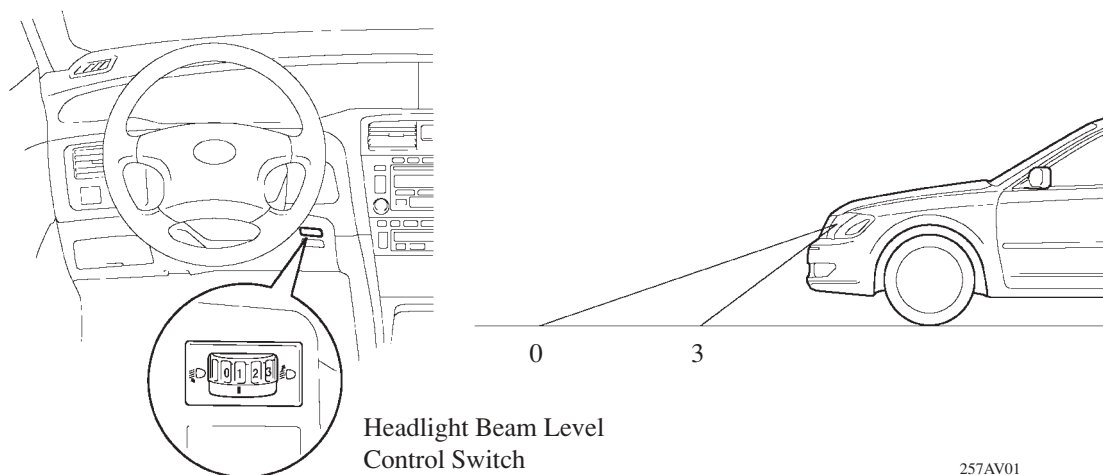

257AV01

► Wiring Diagram ◀

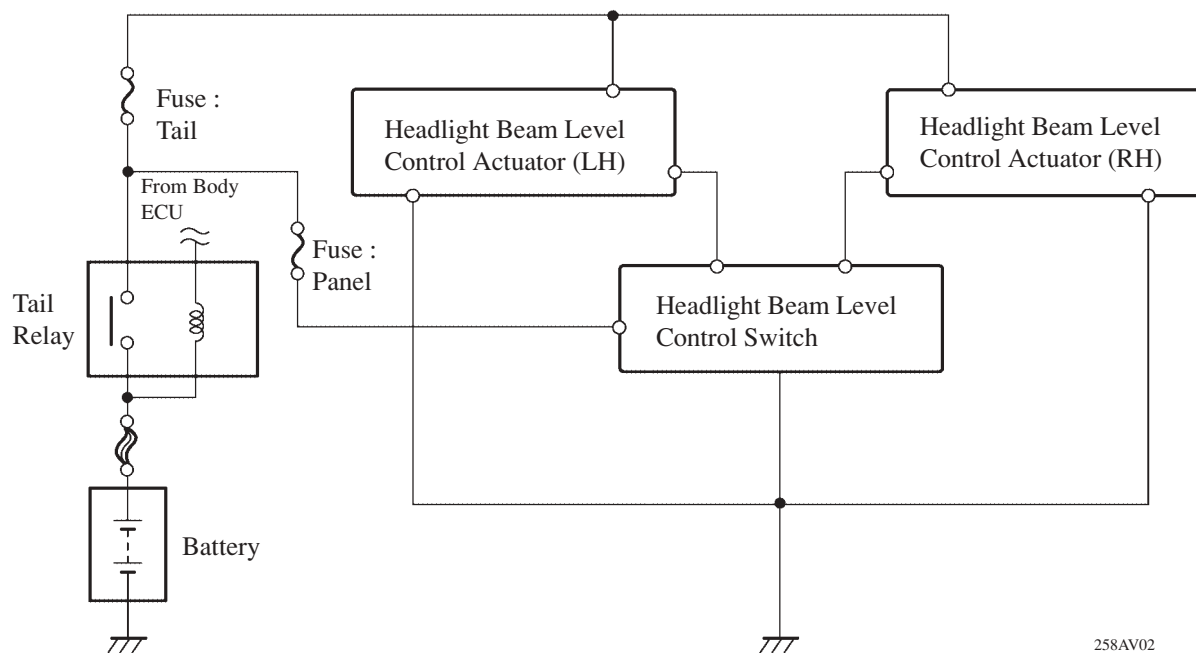

258AV02