



## REMOVAL

1. REMOVE TRANSFER SHIFT LEVER KNOB
2. REMOVE UPPER CONSOLE PANEL (See page [BO-79](#))

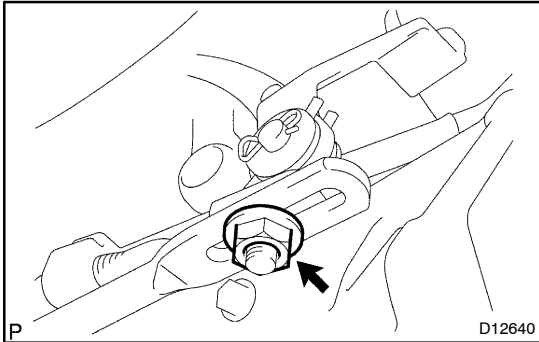

### 3. SEPARATE NO. 1 FLOOR SHIFT GEAR SHIFTING ROD

- (a) Shift into the N position.
- (b) Remove the nut and separate the No. 1 floor shift gear shifting rod from the connecting rod swivel.

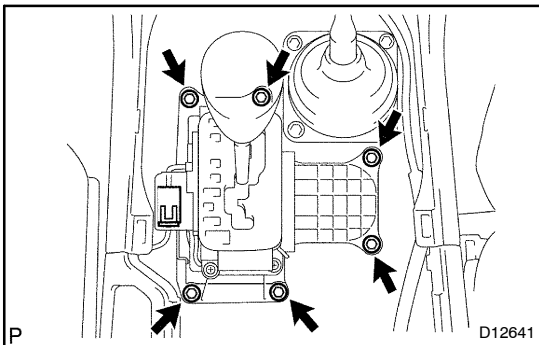

### 4. REMOVE FLOOR SHIFT LEVER ASSEMBLY

- (a) Disconnect the connector.
- (b) Remove the 6 bolts.  
**Torque: 8.3 N·m (85 kgf·cm, 73 in.·lbf)**
- (c) Remove the floor shift lever assembly.