

Power Source

Center Differential Lock

1 2 B SB

ACC
IG1 4 L-B

2 AM1
I26
IGNITION SW

J13
JUNCTION
CONNECTOR

A A

L-B 6 IG1 L-B

C15 (A), C17 (C)
CENTER DIFF.
LOCK INDICATOR
LIGHT
[COMB. METER]

15 1E 1 1F 14 1E

20A AM1 NO. 2

80A AM1 NO. 1

1 10

B

F17
FUSIBLE LINK
BLOCK

140A ALT

BATTERY

EE Front left side
of fender apron

SB

J30
JUNCTION
CONNECTOR

15 A 16 C

SB

J27
JUNCTION
CONNECTOR

D D

15 IV1

P-B

4 EB1

P-B

2 D 1 DETECTION SW
(Center Diff.
Lock)

1 W-B

W-B

5 EB1

W-B

EC Rear bank of right
cylinder head

From ABS ECU <740-6>
From Suspension
Control ECU <747-4>

P-B

1 3A 2 3I

From Engine and ECT ECU
<710-5>

Y-G (A/T)

4 IV1

Y-G (A/T)

Y-G (A/T)

8 EB1

Y-G (A/T)

2 D 3 DETECTION SW
(Transfer Neutral
Position)

1 W-B

W-B


W-B

W-B

Center Differential Lock

- * 1 : Front/Rear Diff. Lock
- * 2 : Rear Diff. Lock
- * 3 : 1HZ, 1HD-T and 1HD-FTE A/T

- * 4 : Except *3
- * 5 : 1FZ-FE

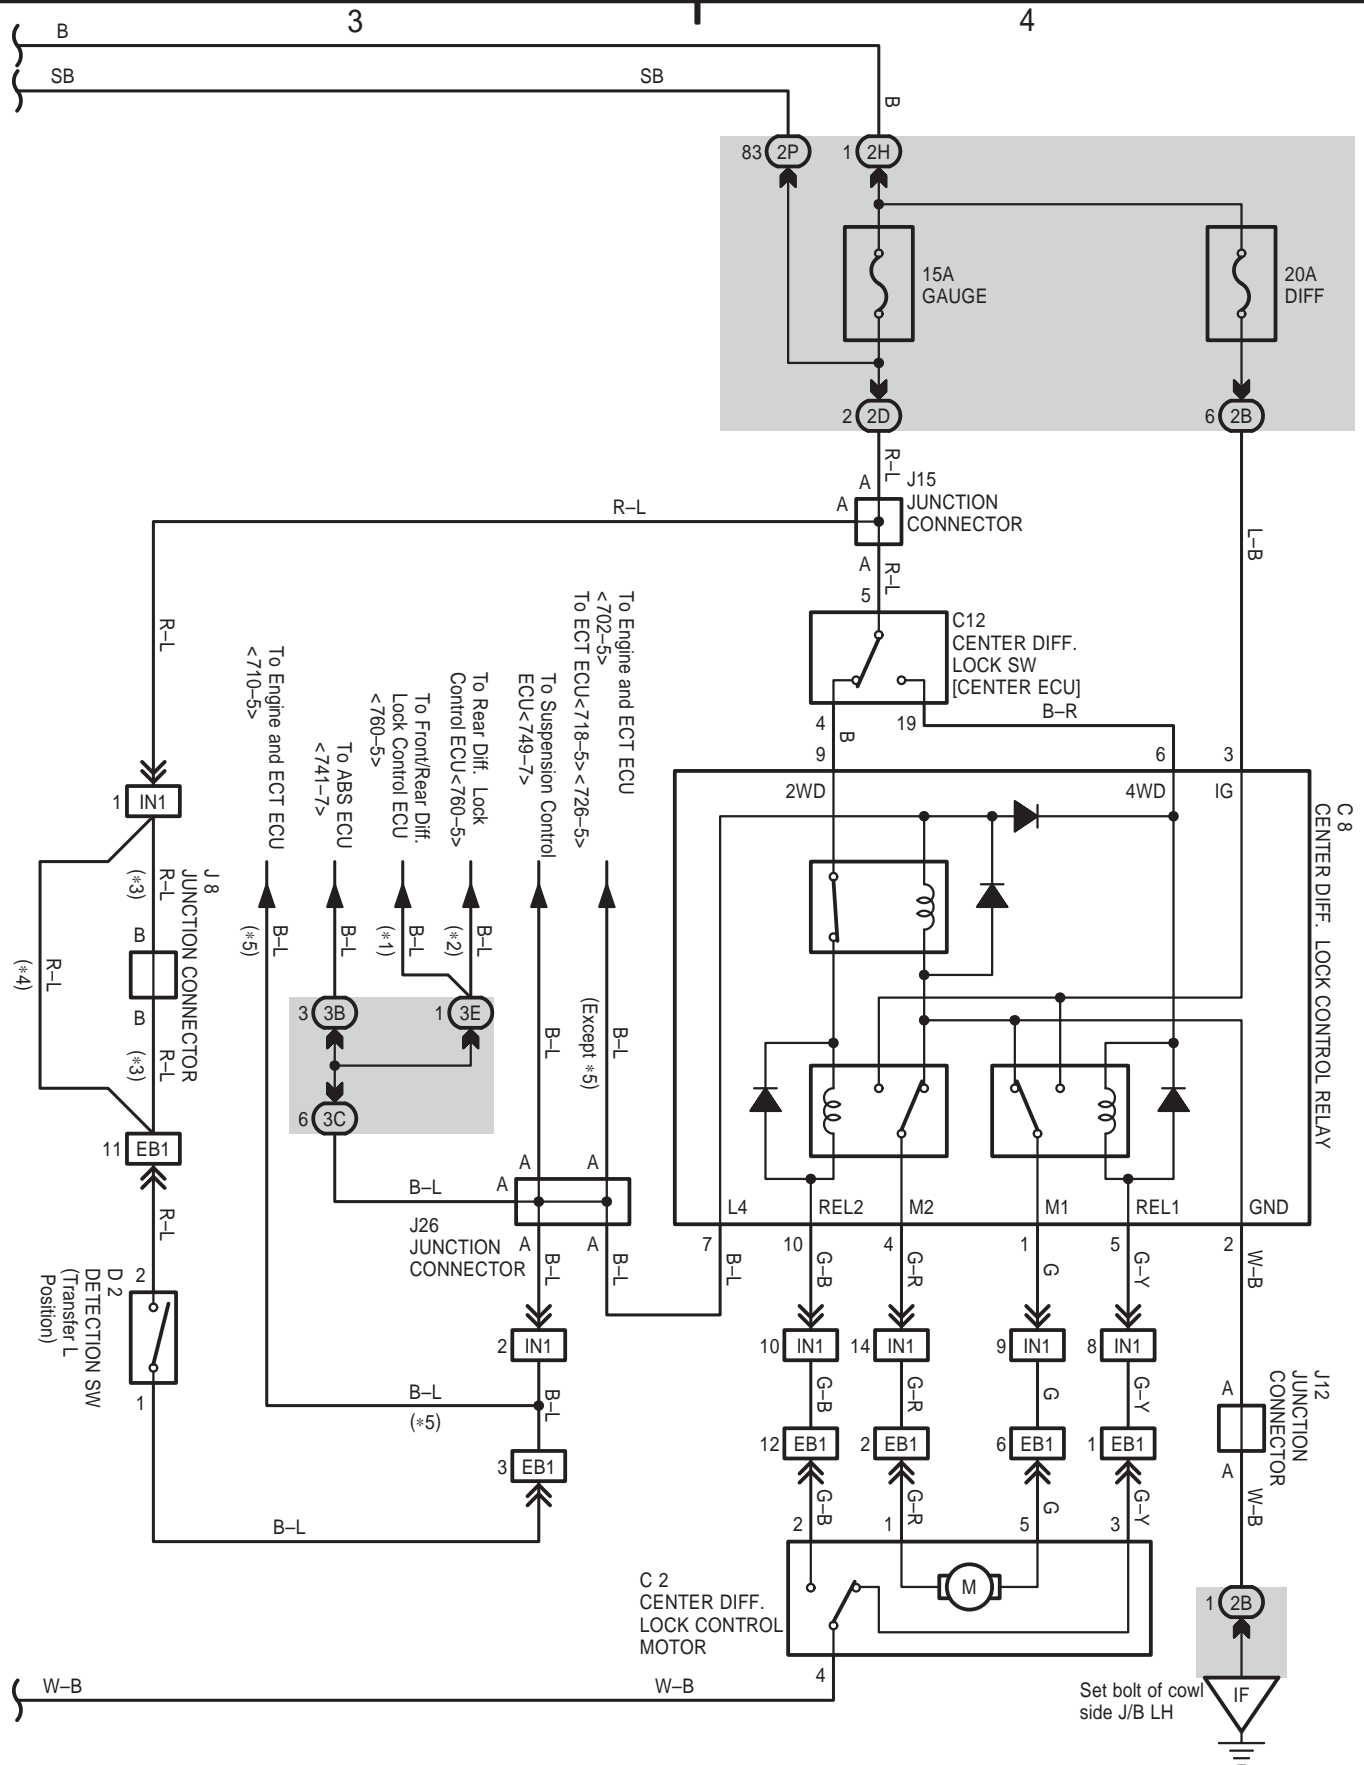

RHD