


FRONT WHEEL HUB BOLT (Independent Front Suspension) REPLACEMENT

1. REMOVE FRONT AXLE HUB (See page SA-21)

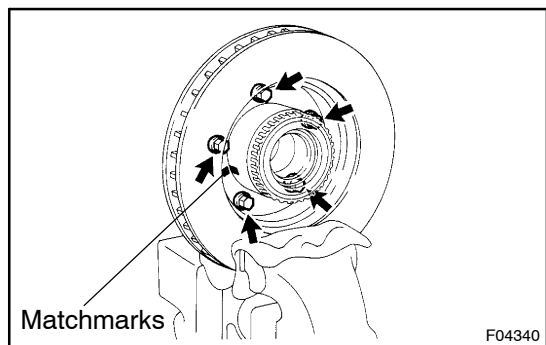

2. REMOVE HUB BOLT


(a) Mount the axle hub with the disc in a soft jaw vice.

NOTICE:


Close vice until it holds disc, do not tighten further.

(b) Place matchmarks on the axle hub and disc.

(c) Remove the 5 bolts and separate the axle hub from the disc.

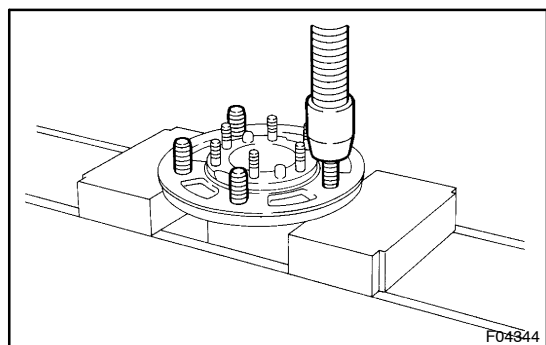


(d) Using a press, remove the hub bolt.

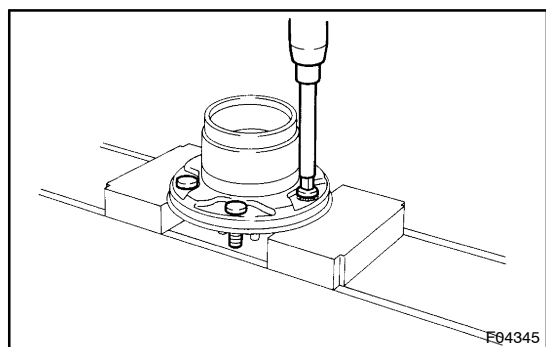

3. INSTALL HUB BOLT

(a) Using an extension bar and press, install a new hub bolt.

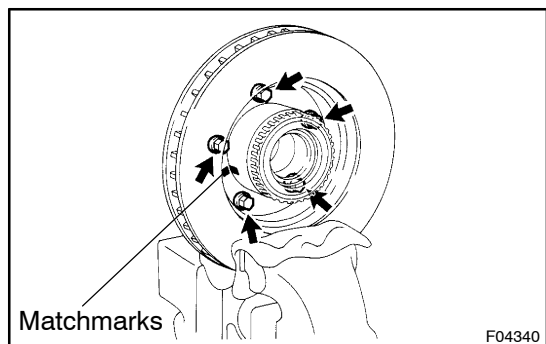

(b) Align the matchmarks and install the axle hub to the disc, and install the 5 bolts.

Torque: 74 N·m (750 kgf·cm, 54 ft·lbf)

4. INSTALL FRONT AXLE HUB (See page SA-25)