


Memory switch circuit (W/ memory)


WIRING DIAGRAM

LHD Models

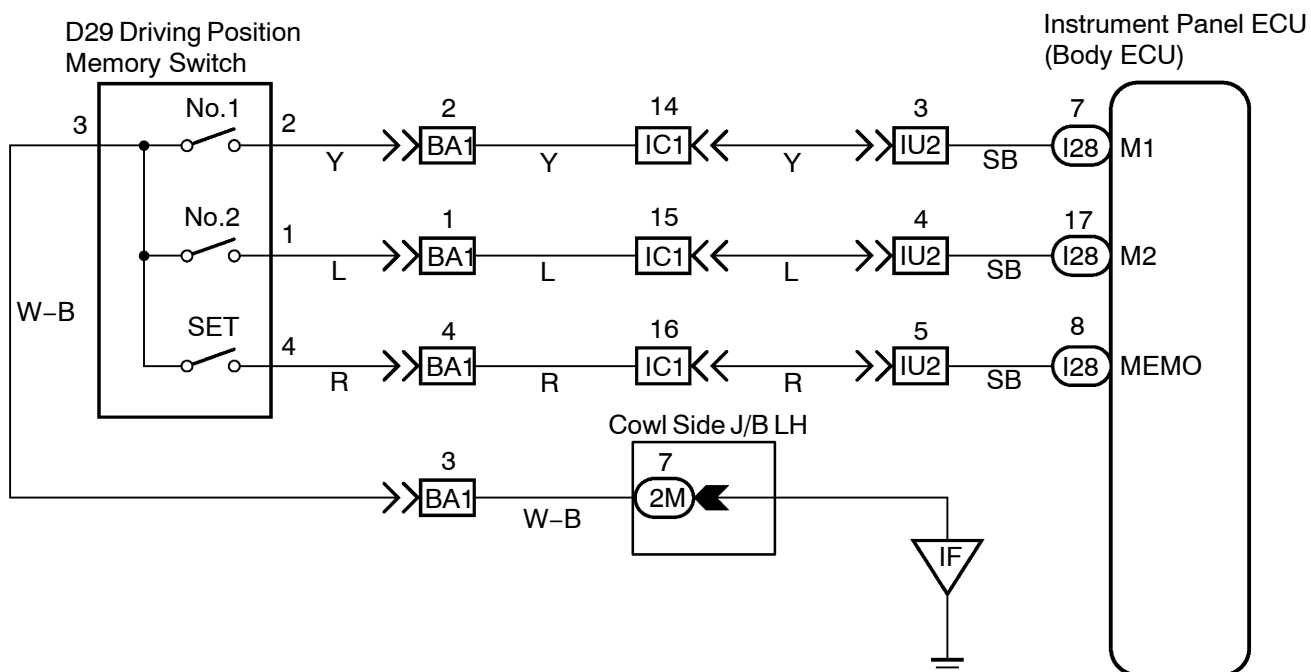

I07491

RHD Models

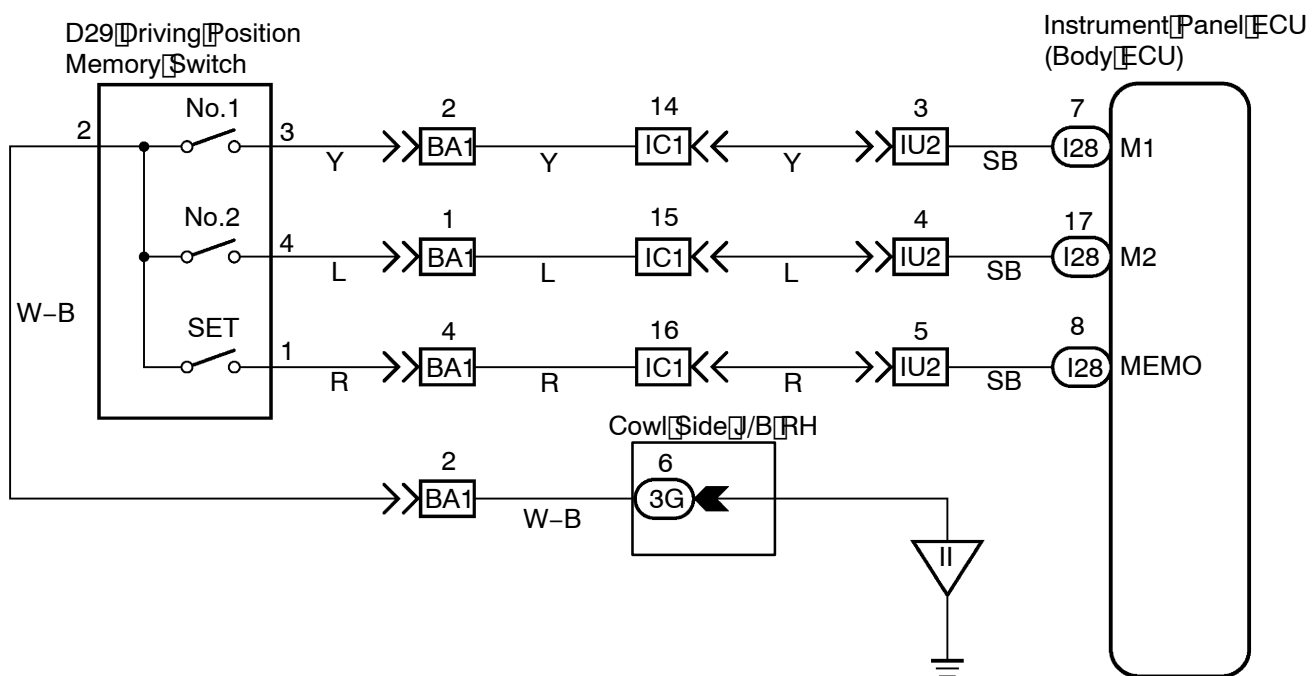

I07491

INSPECTION PROCEDURE

1 Check memory switch. (See page BE-130)

NG

Replace the memory switch.

OK

2 Check wireharness and connector between memory switch and Body ECU.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on
problem symptoms table.
(See [page DI-773](#))