

## REMOVAL

### 1. REMOVE ROOF HEADLINING REAR TRIM


Using a screwdriver, remove the roof headlining rear trim.

HINT:

Tape up the screwdriver tip before use.

### 2. w/ Rear No.2 Seat:

#### REMOVE REAR NO.2 SEAT

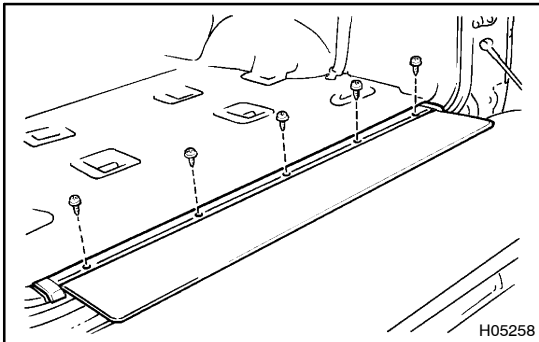


### 3. REMOVE REAR MAT SET PLATE

(a) Remove the 5 screws.

(b) Using a screwdriver, remove the rear mat set plate.

HINT:

Tape up the screwdriver tip before use.

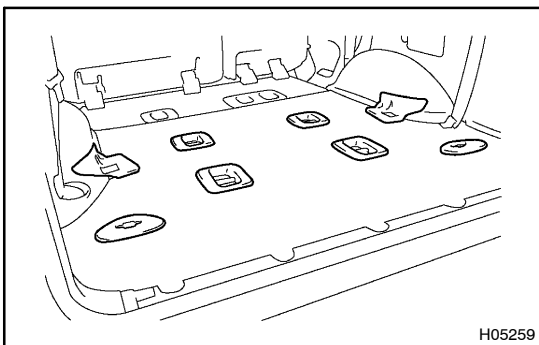

### 4. w/ Rear No.2 Seat (Forward-Facing Type):

#### REMOVE STRIKER PLATE

(a) Remove the 6 screws.

(b) Using a screwdriver, remove the striker plates.

HINT:

Tape up the screwdriver tip before use.

### 5. w/ TONNEAU COVER:

#### REMOVE TONNEAU COVER

### 6. REMOVE REAR MAT

### 7. w/ Rear No.2 Seat (Forward-Facing Type):

#### REMOVE REAR NO. 2 SEAT OUTER BELT FLOOR ANCHOR


Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

### 8. REMOVE REAR NO. 1 SEAT OUTER BELT FLOOR ANCHOR

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

### 9. REMOVE REAR DOOR SCUFF PLATE

### 10. REMOVE REAR DOOR OPENING TRIM

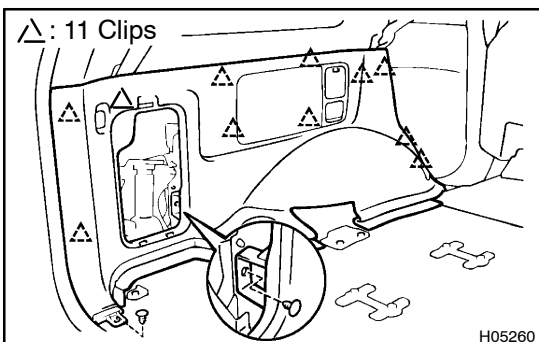


### 11. REMOVE LH QUARTER TRIM PANEL

(a) Remove the quarter trim jack cover.

(b) Using a clip remover, remove the 2 clips.

(c) Remove the LH quarter trim panel, then disconnect the connector.

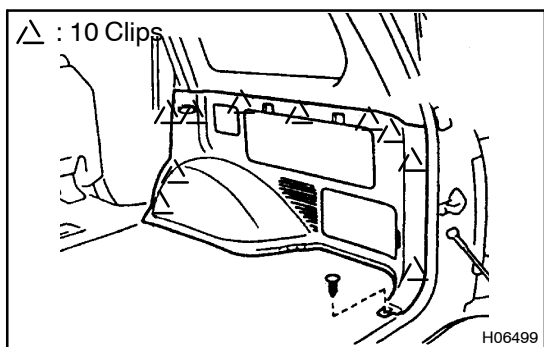**12. REMOVE RH QUARTER TRIM PANEL**

- (a) Using a clip remover, remove the clip.
- (b) Remove the RH quarter trim panel.

**13. w/ Rear No.2 Seat (Forward-Facing Type):  
REMOVE REAR NO. 2 SEAT OUTER BELT SHOULDER ANCHOR**

**Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)**

**14. REMOVE REAR NO. 1 SEAT OUTER BELT SHOULDER ANCHOR**

**Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)**

**15. REMOVE UPPER ROOF SIDE INNER GARNISH**

- (a) w/ Rear No.2 Seat:  
Using a screwdriver, remove the 2 assist grip plugs, then remove the 2 screws and the rear assist grips.

**HINT:**

Tape up the screwdriver tip before use.

- (b) Using a clip remover, remove the clip.
- (c) Using a screwdriver, remove the upper roof side inner garnishes.

**HINT:**

Tape up the screwdriver tip before use.

- (d) Use the same manner described above to the other side.



**16. REMOVE FRONT DOOR SCUFF PLATES****17. REMOVE COWL SIDE TRIMS****18. REMOVE FRONT DOOR OPENING TRIMS****19. REMOVE FRONT ASSIST GRIP**

- (a) Using a screwdriver, remove the 2 assist grip plugs, then remove the 2 screws and front assist grip.

**HINT:**

Tape up the screwdriver tip before use.

- (b) Use the same manner described above to the other side.

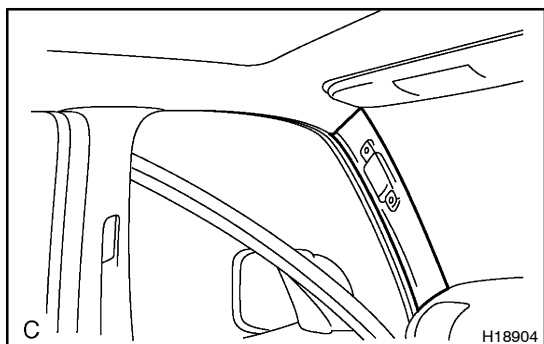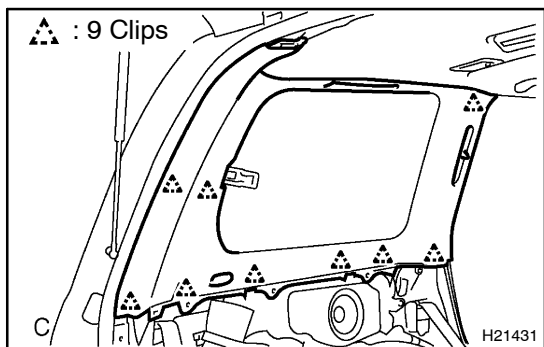
**20. REMOVE FRONT PILLAR GARNISH**

- (a) Using a screwdriver, remove the front pillar garnish.

**HINT:**

Tape up the screwdriver tip before use.


- (b) Use the same manner described above to the other side.

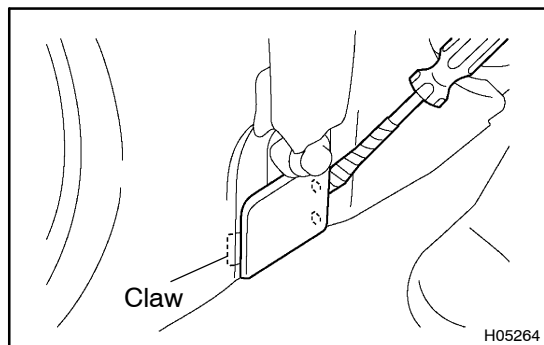**21. REMOVE CENTER PILLAR LOWER GARNISH**

- (a) Using a screwdriver, remove the center pillar garnish covers.

**HINT:**

Tape up the screwdriver tip before use.

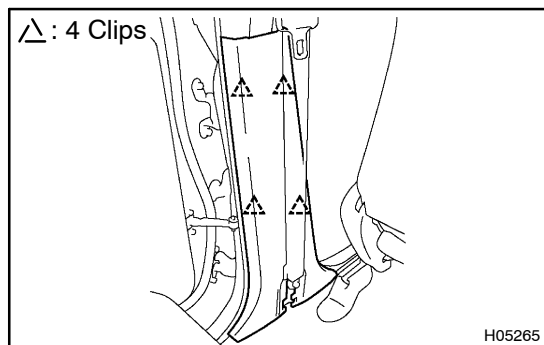


- (b) Using a screwdriver, remove the center pillar lower garnish as shown in the illustration.

**HINT:**

Tape up the screwdriver tip before use.

- (c) Use the same manner described above to the other side.

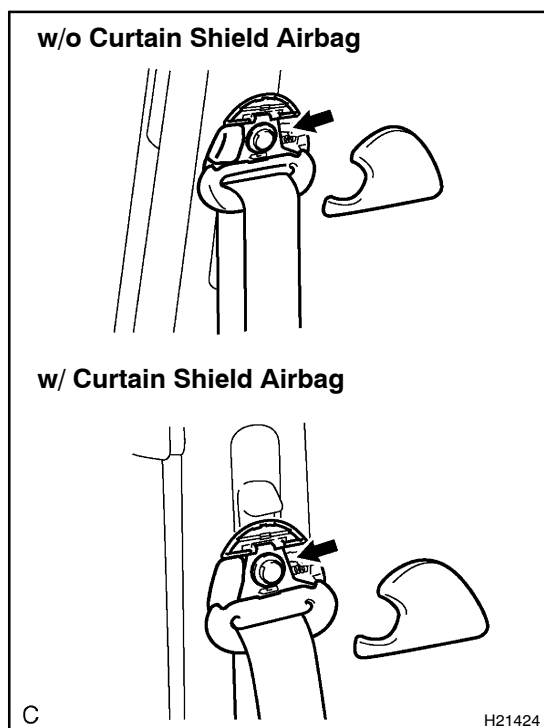**22. REMOVE CENTER PILLAR GARNISH**


- (a) Using a screwdriver, remove the seat belt anchor cover cap.

**HINT:**

Tape up the screwdriver tip before use.

- (b) Remove the bolt and the front seat outer belt shoulder anchor.

**Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)**

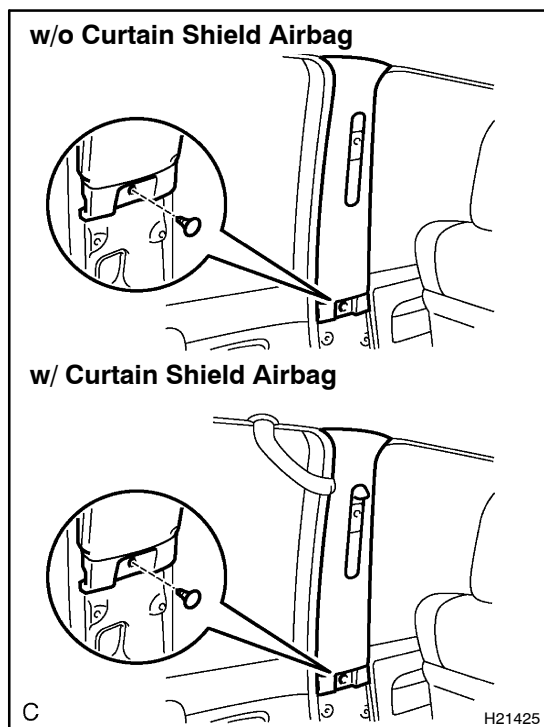

- (c) Using a clip remover, remove the clip.
  - (d) Using a screwdriver, remove the center pillar garnish.
- HINT:

Tape up the screwdriver tip before use.

- (e) Use the same manner described above to the other side.

### 23. REMOVE SUN VISOR

- (a) Using a screwdriver, remove the caps.

HINT:

Tape up the screwdriver tip before use.


- (b) Remove the screws, then disconnect the connectors.
- (c) Remove the sun visors.

### 24. REMOVE DOUBLE VISOR

Remove the screws and the double visors.

### 25. REMOVE HOLDER

Remove the screws and the holders.

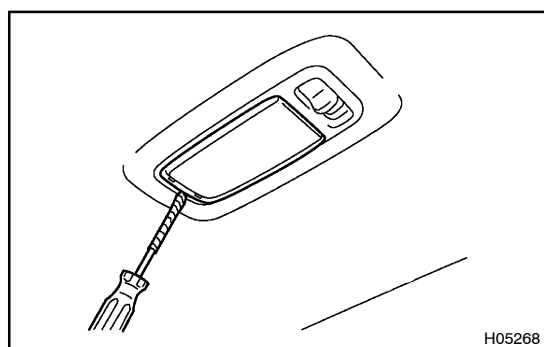


### 26. REMOVE DOME LIGHT

- (a) Using a screwdriver, remove the lens as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

- (b) Remove the 4 screws and dome light, then disconnect the connector.

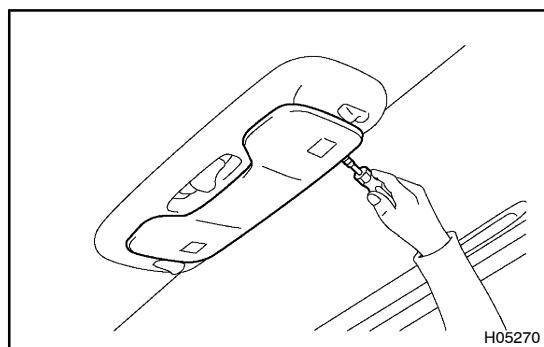


### 27. w/ sliding Roof: REMOVE MAP LIGHT

- (a) Using a screwdriver, remove the lens as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

- (b) Remove the 4 screws and map light, then disconnect the connector.

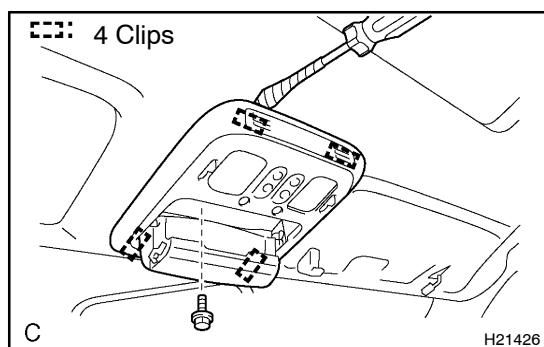


### 28. w/ Sliding Roof: REMOVE OVERHEAD CONSOLE BOX

- (a) Remove the bolt.
- (b) Using a screwdriver, remove the overhead console box, then disconnect the connector.

HINT:


Tape up the screwdriver tip before use.

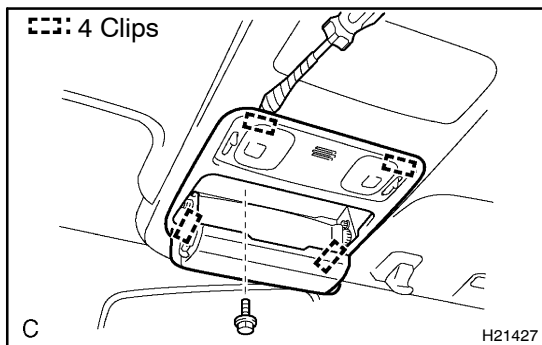**29. w/o Sliding Roof:****REMOVE OVERHEAD CONSOLE BOX**

- (a) Remove the bolt.
- (b) Using a screwdriver, remove the map light assembly, then disconnect the connector.

HINT:


Tape up the screwdriver tip before use.

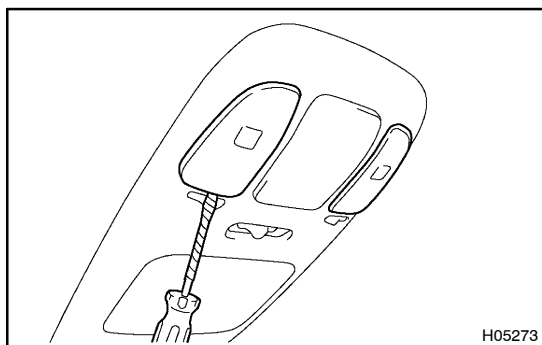

- (c) Using a screwdriver, remove the 2 lenses.

HINT:

Tape up the screwdriver tip before use.

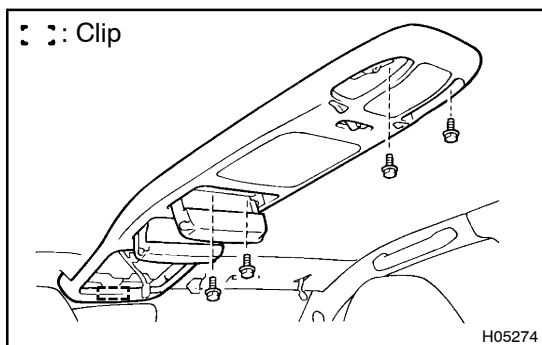

- (d) Remove the 4 bolts.

- (e) Using a screwdriver, remove the overhead console box, then disconnect the connector.

HINT:

Tape up the screwdriver tip before use.

**30. REMOVE REAR A/C CONTROL PANEL**

Using a screwdriver, release the 4 claws and pull out the rear A/C control panel, then disconnect the connector.

HINT:


Tape up the screwdriver tip before use.

**31. REMOVE ROOM TEMPERATURE SENSOR**

Using a screwdriver, pull out the room temperature sensor, then disconnect the connector.

HINT:

Tape up the screwdriver tip before use.

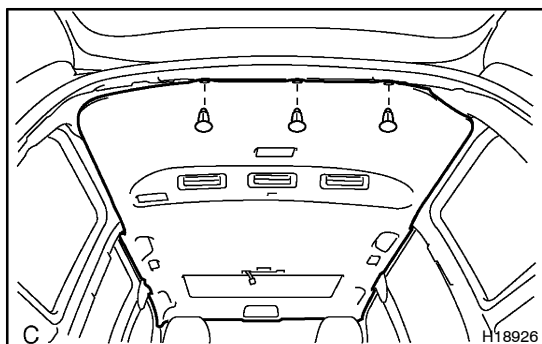**32. REMOVE ASSIST GRIPS****33. w/o Curtain Shield Airbag:****REMOVE CENTER ASSIST GRIPS****34. REMOVE ROOF HEADLINING**

Using a clip remover, remove the 3 clips and the roof headlining.

**35. REMOVE REAR A/C REGISTER****36. w/ Curtain Shield Airbag:****REMOVE ADJUSTABLE ANCHOR**

Remove the 2 bolts and the adjustable anchor.

**Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)**

**37. w/ Curtain Shield Airbag:****REMOVE CENTER ASSIST GRIPS**