


## Connector Joining Wire Harness and Wire Harness

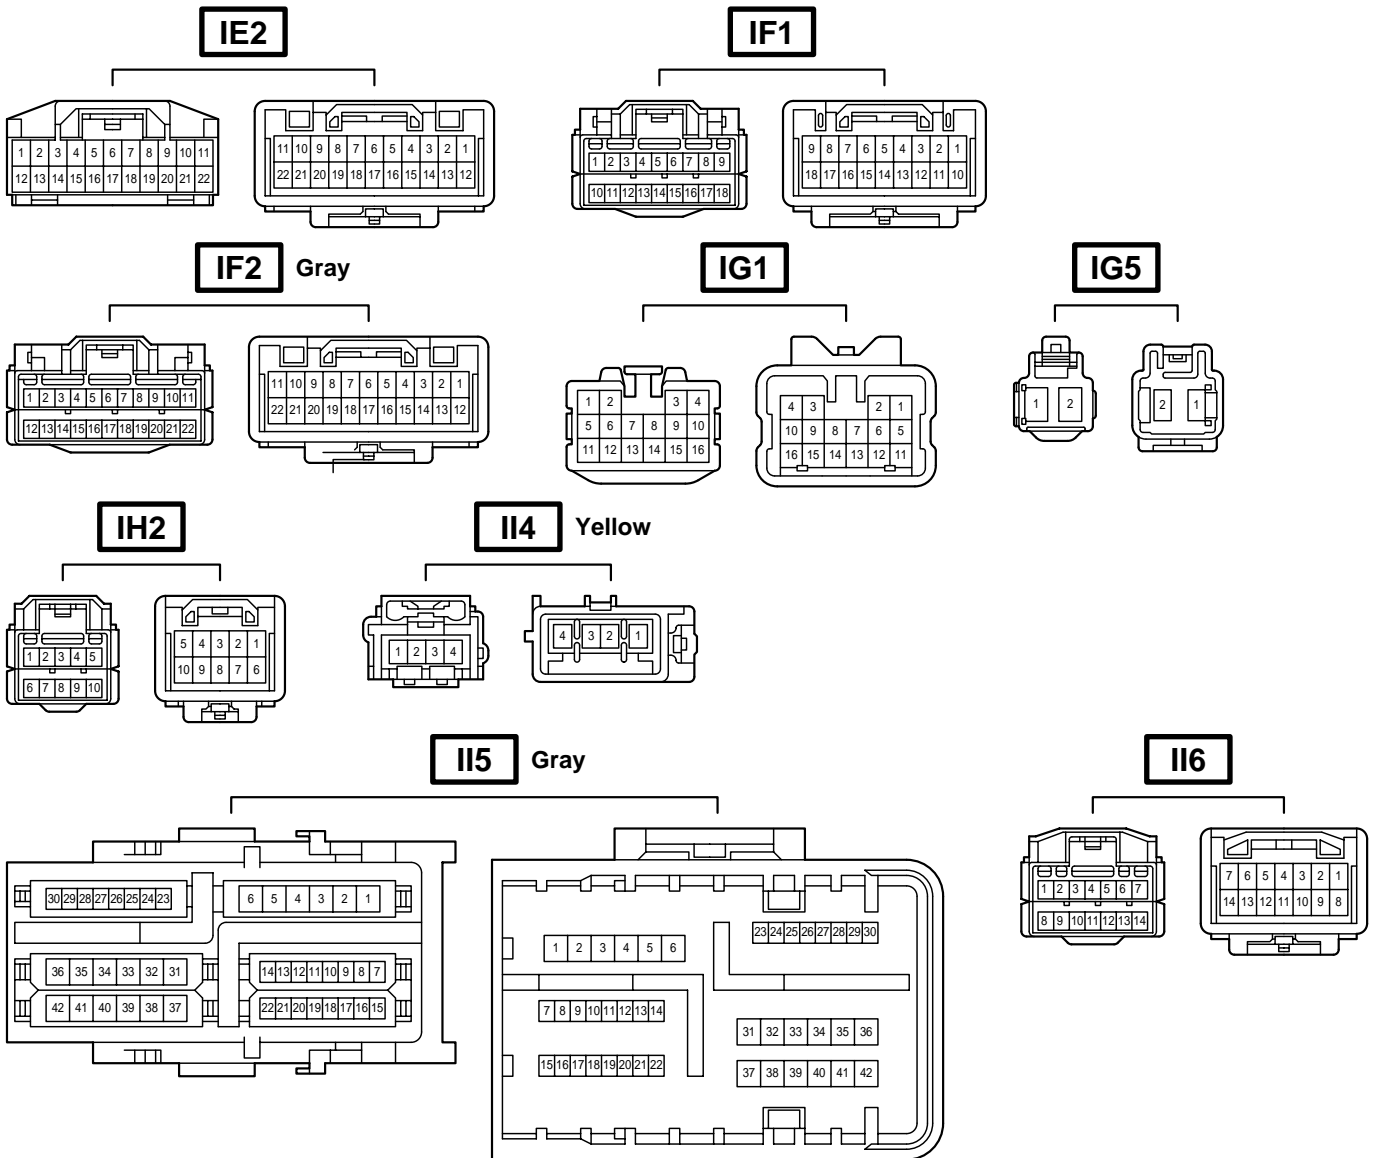

| Code | Joining Wire Harness and Wire Harness (Connector Location)                                   |
|------|--|
| IE2  | Dash Wire and Roof Wire (Left Kick Panel)  |
| IF1  | Instrument Panel Integration Wire and Instrument Panel Wire (Right Side of Instrument Panel) |
| IF2  |  |
| IG1  | Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)                                   |
| IG5  |  |
| IH2  | Instrument Panel Integration Wire and Column Wire (Near the Steering Column)                 |
| II4  | Dash Wire and Column Wire (Near the Steering Column)   |
| II5  |  |
| II6  |  |