


## Connector Joining Wire Harness and Wire Harness

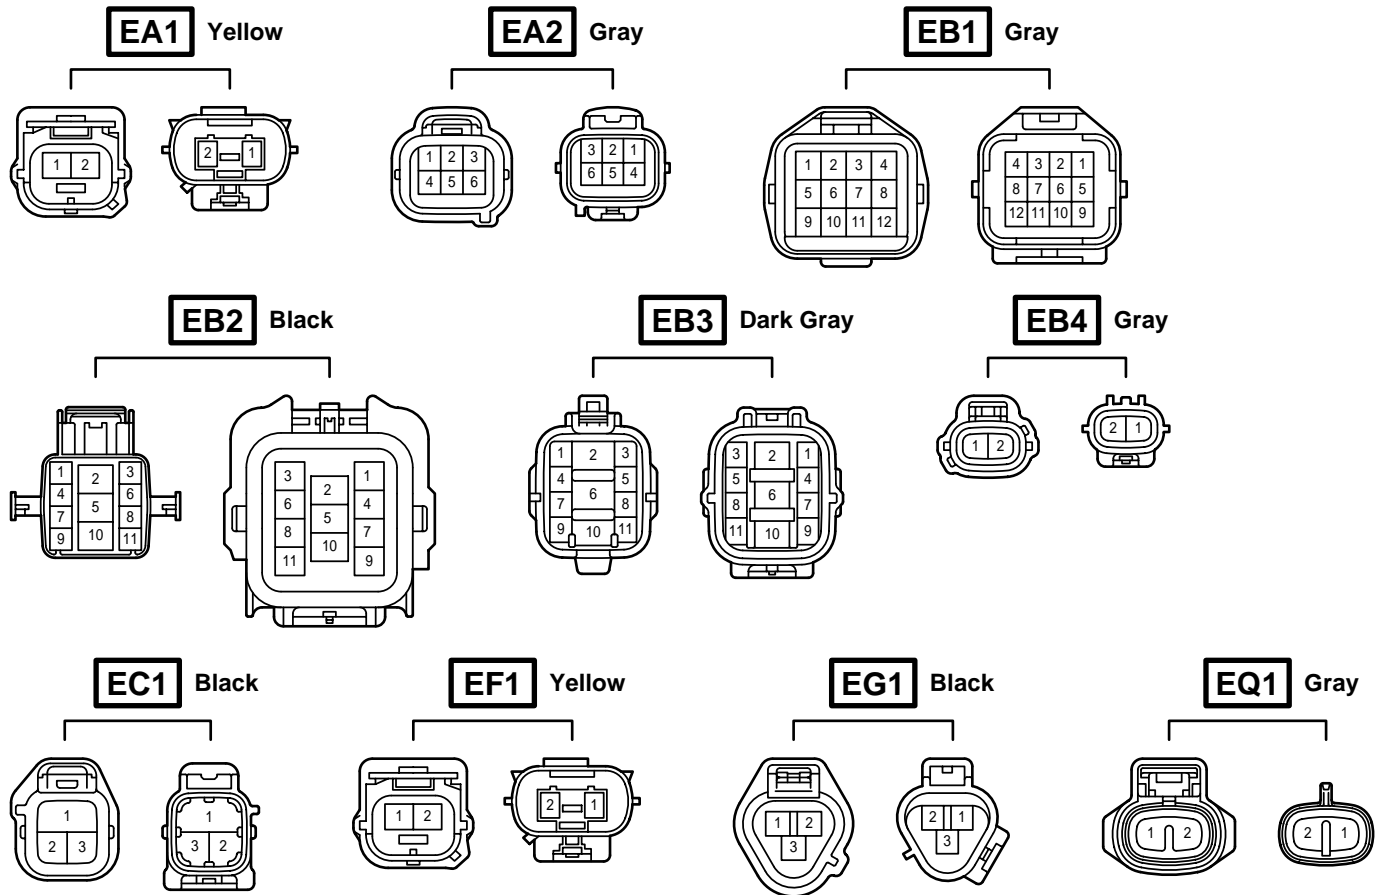

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
EA2	
EB1	
EB2	Engine Wire and Transmission Wire (On the Transmission)
EB3	
EB4	
EC1	Engine No.2 Wire and Engine Wire (Rear Side of Intake Manifold)
EF1	Engine Room No.2 Wire and Engine Room Main Wire (Under the Engine Room J/B)
EG1	Engine Room Main Wire and Alternator Wire (Near the Battery)
EQ1	Engine Room No.2 Wire and Magnet SW to Winch Wire (Near the Engine Room J/B)