


Connector Joining Wire Harness and Wire Harness

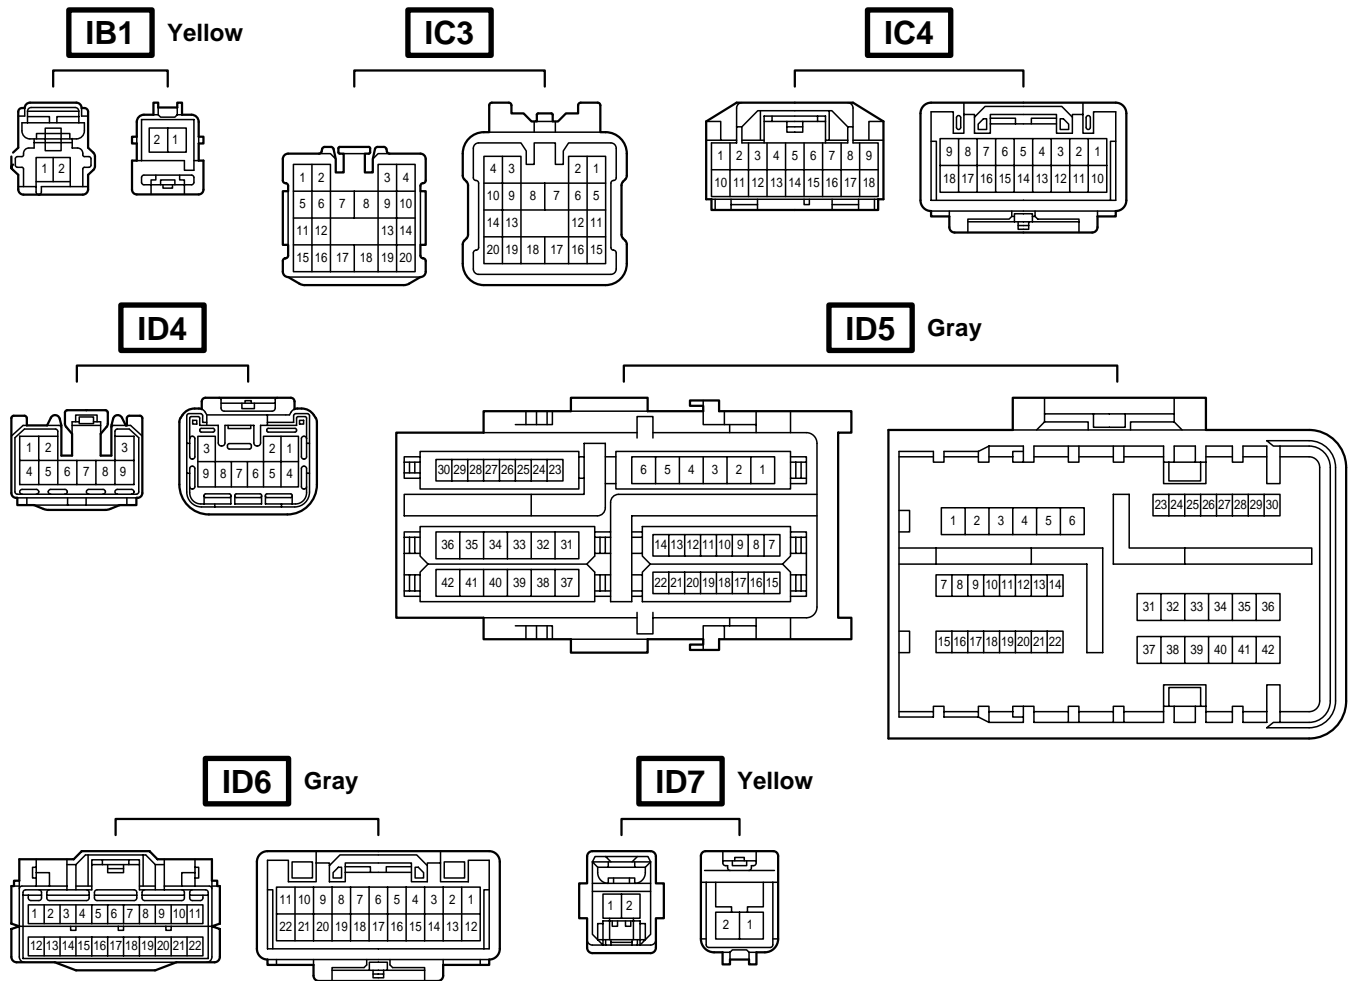

Code	Joining Wire Harness and Wire Harness (Connector Location)
IB1	Engine Room No.2 Wire and Dash Wire (Left Kick Panel)
IC3	Front Door RH Wire and Dash Wire (Right Kick Panel)
IC4	
ID4	Dash Wire and Floor Wire (Left Kick Panel)
ID5	
ID6	
ID7	