


## Connector Joining Wire Harness and Wire Harness

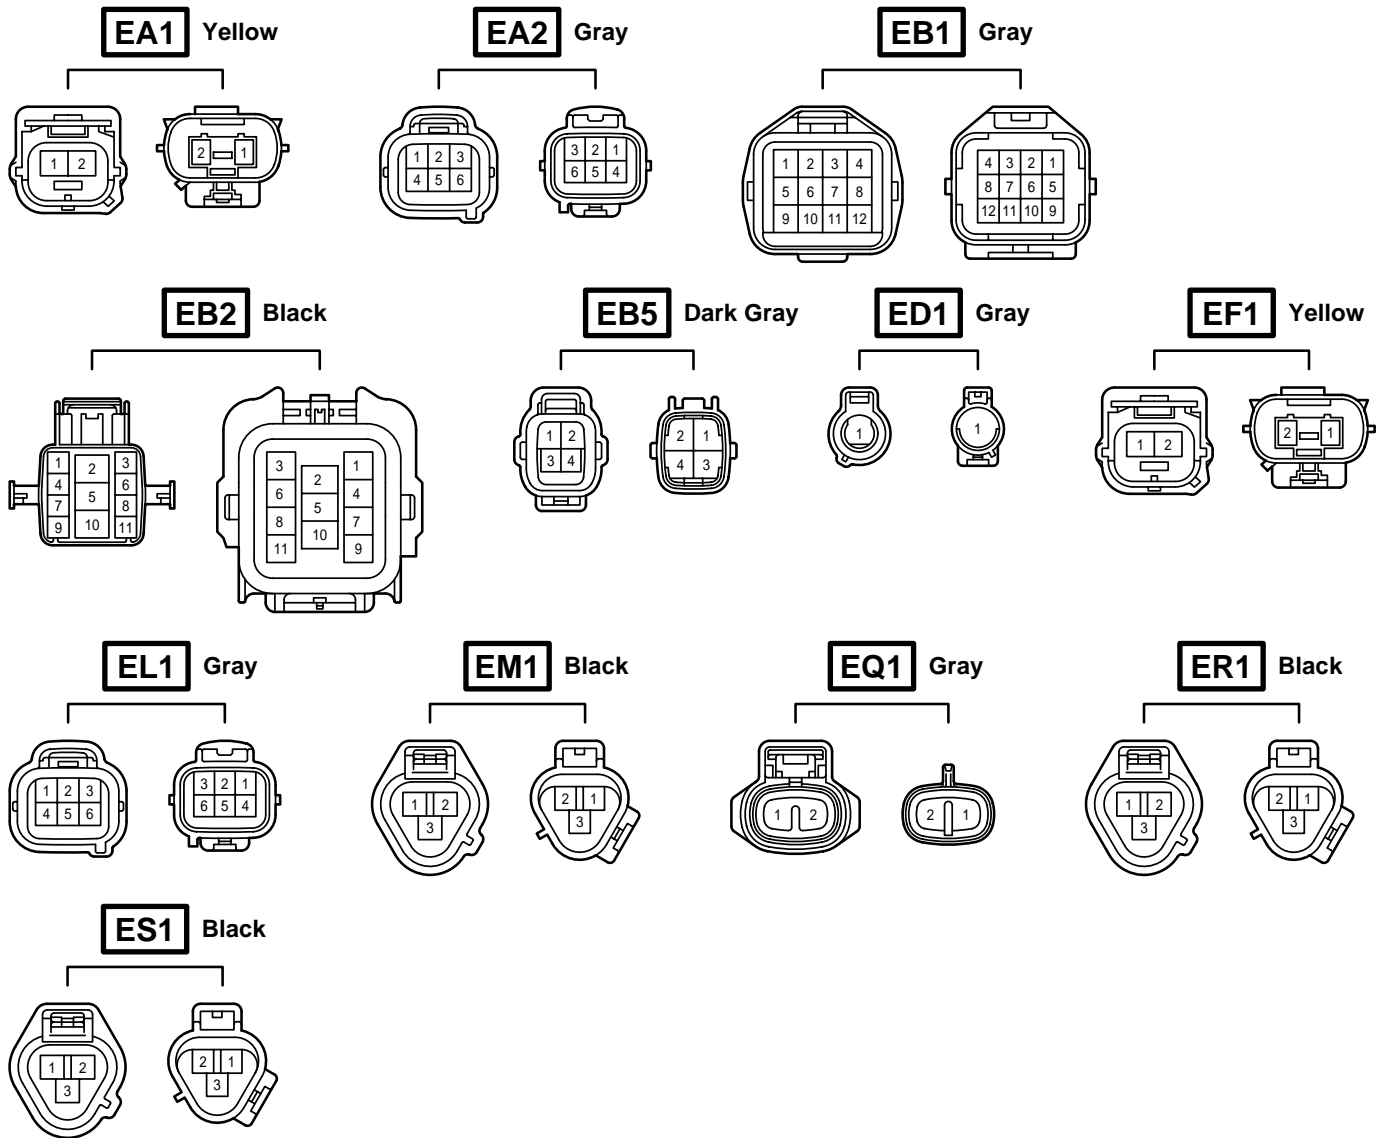

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
EA2	
EB1	
EB2	Engine Wire and Transmission Wire (On the Transmission)
EB5	
ED1	Engine No.2 Wire and Engine Room No.2 Wire (Near the Engine Room J/B)
EF1	Engine Room No.2 Wire and Engine Room Main Wire (Under the Engine Room J/B)
EL1	Engine Room No.2 Wire and Differential Wire (Engine Compartment Right)
EM1	Oil Pressure Switch Wire and Engine Room No.2 Wire (Engine Compartment Right)
EQ1	Engine Room No.2 Wire and Magnet SW to Winch Wire (Near the Engine Room J/B)
ER1	Engine Room Main Wire and Engine No.2 Wire (Near the Battery)
ES1	Engine Room Main Wire and Engine No.3 Wire (Near the Battery)