


* 5:w/o Moon Roof

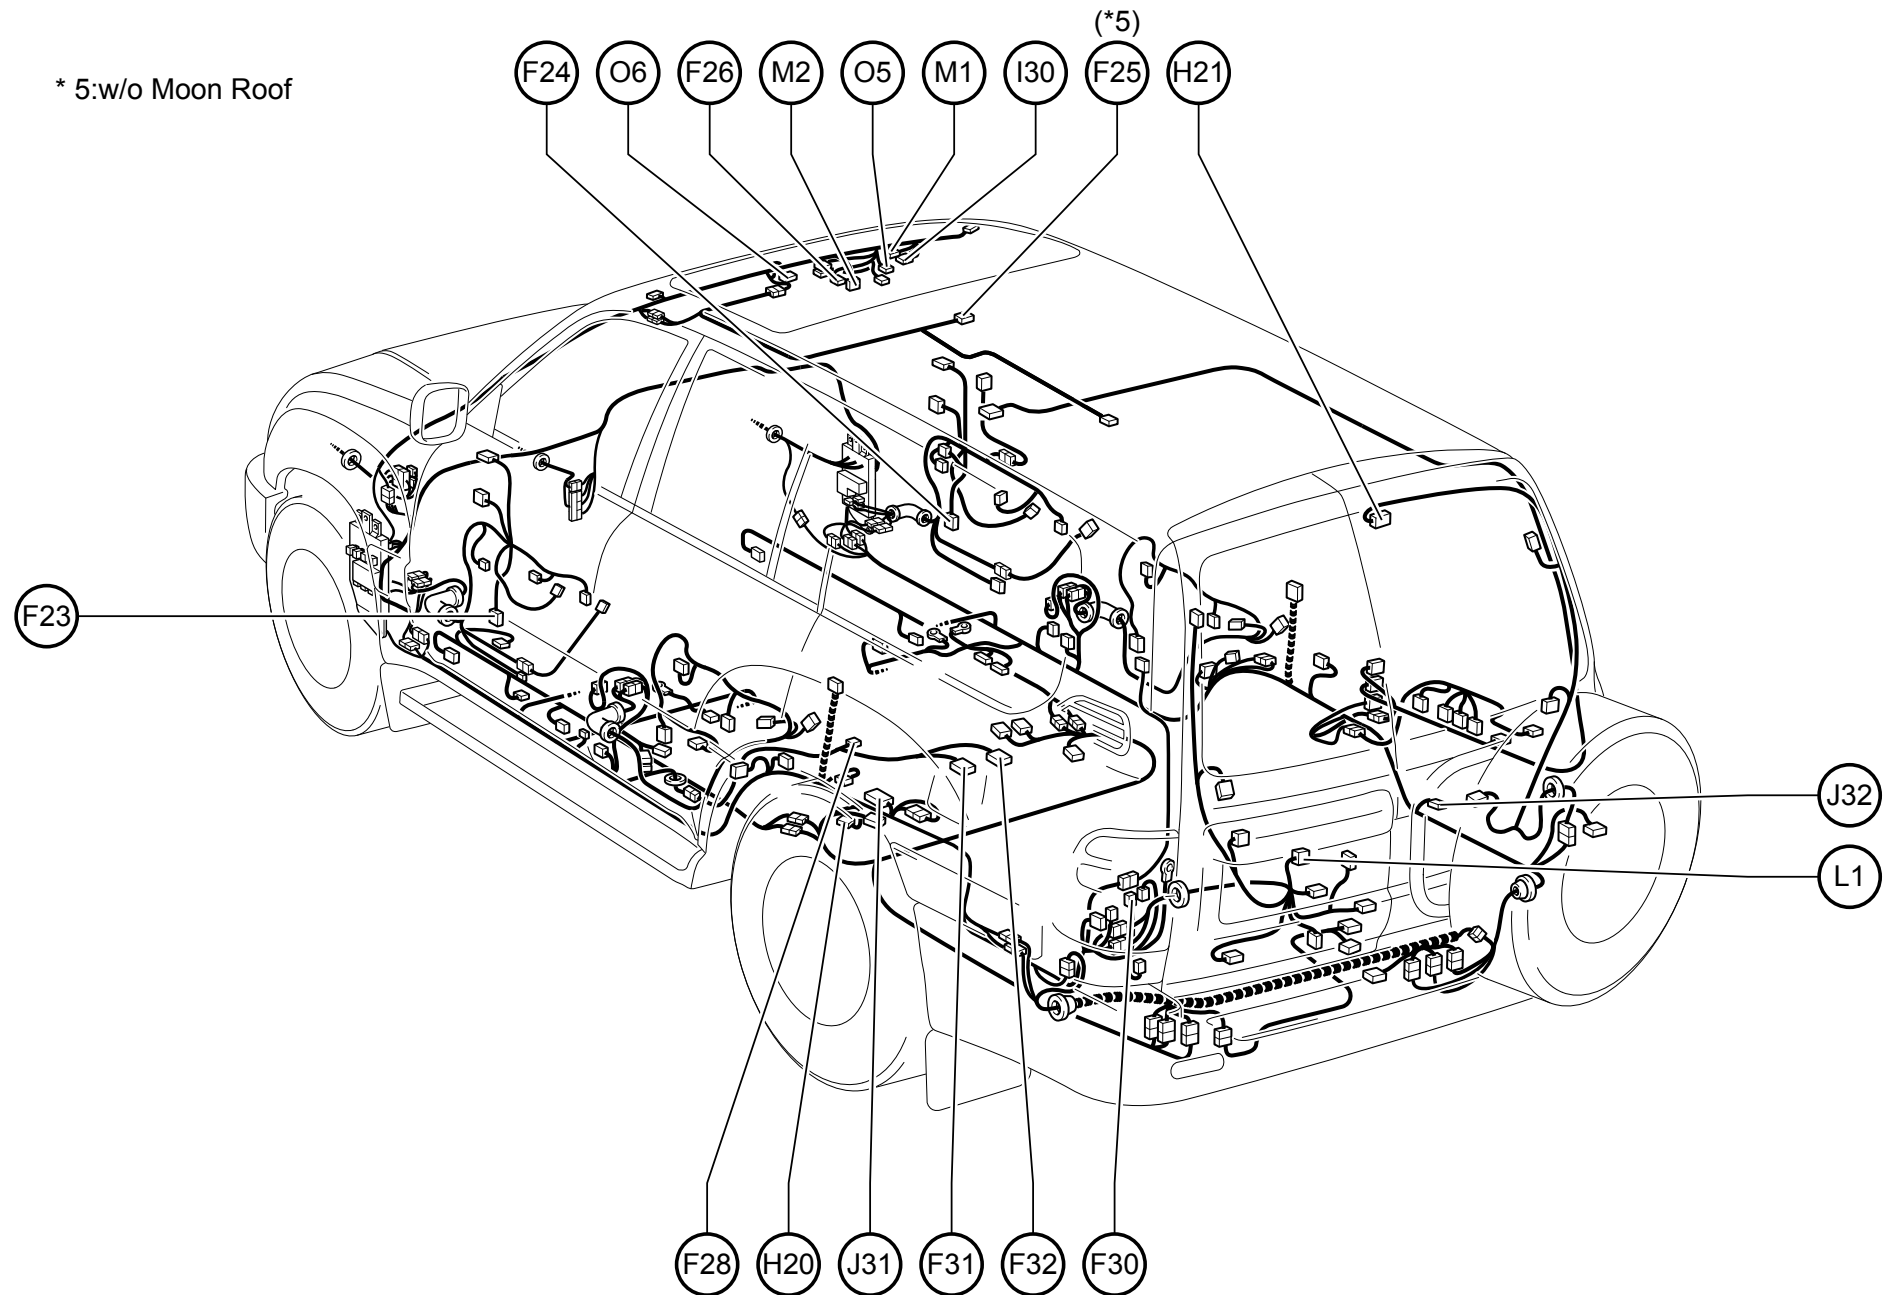

- F 23 Front Door Speaker LH
- F 24 Front Door Speaker RH
- F 25 Front Interior Light
- F 26 Front Personal Light
- F 28 Fuel Pump , Fuel Sender
- F 30 Fuel Pump Select Relay
- F 31 Fuel Solenoid Valve 1
- F 32 Fuel Solenoid Valve 2

- H 20 Height Control Sensor Rear
- H 21 High Mounted Stop Light

- I 30 Inner Mirror

- J 31 Junction Connector
- J 32 Junction Connector

- L 1 License Plate Light

- M 1 Moon Roof Control ECU
- M 2 Moon Roof Control SW

- O 5 Overhead J/B
- O 6 Overhead J/B

Position of Parts in Body <RHD Swing Type>

