


## Connector Joining Wire Harness and Wire Harness

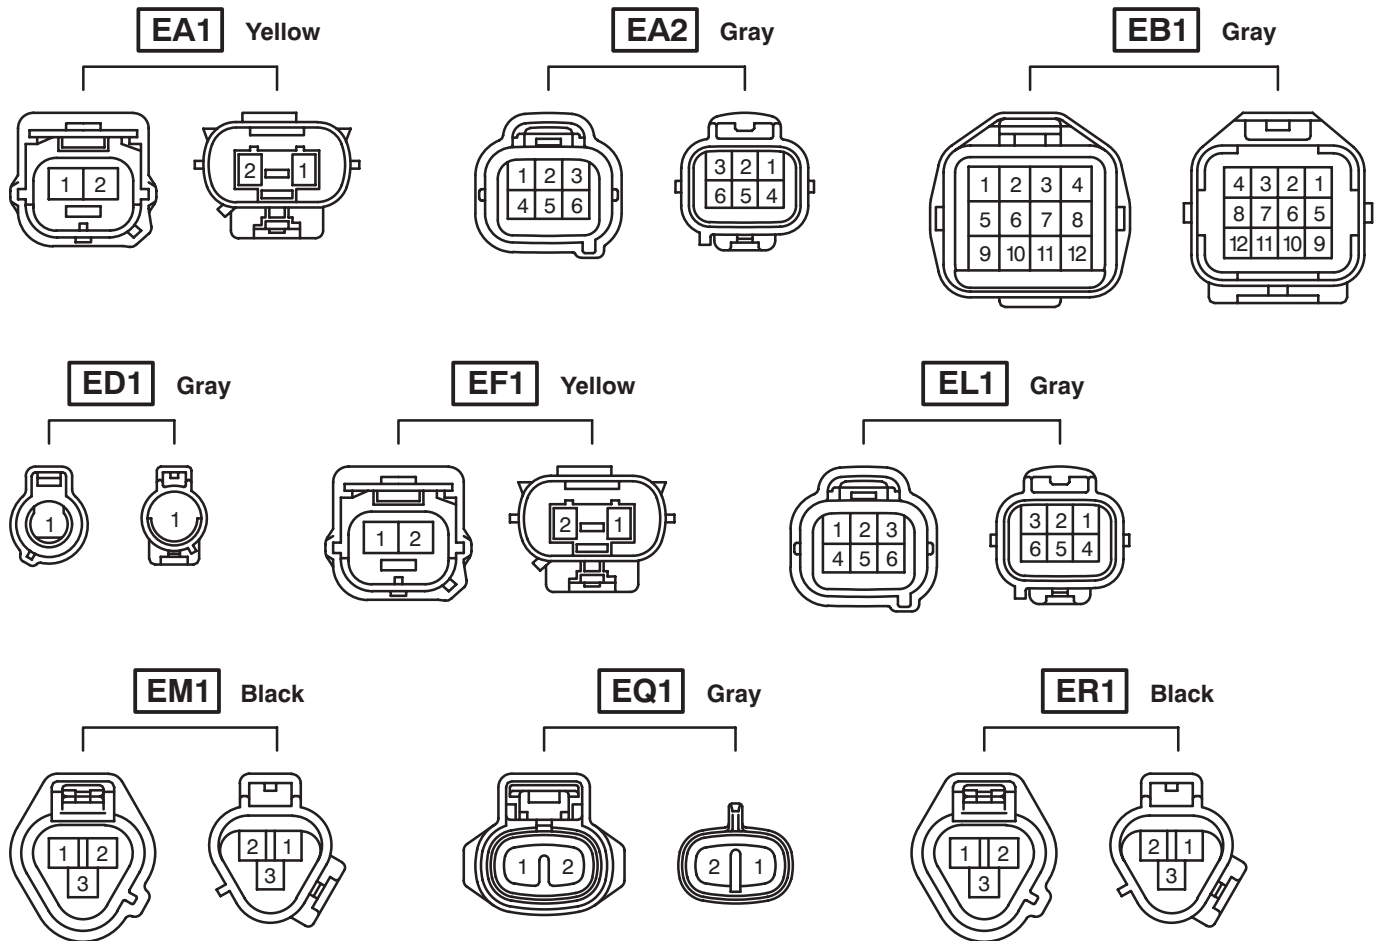

| Code | Joining Wire Harness and Wire Harness (Connector Location)                    |
|------|---|
| EA1  | Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)    |
| EA2  | Engine Room No.2 Wire and Engine Room Main Wire (Under the Engine Room J/B)   |
| EB1  | Engine Wire and Transmission Wire (On the Transmission)                       |
| ED1  | Engine No.2 Wire and Engine Room No.2 Wire (Near the Engine Room J/B)         |
| EF1  | Engine Room No.2 Wire and Engine Room Main Wire (Under the Engine Room J/B)   |
| EL1  | Engine Room No.2 Wire and Differential Wire (Engine Compartment Right)        |
| EM1  | Oil Pressure Switch Wire and Engine Room No.2 Wire (Engine Compartment Right) |
| EQ1  | Engine Room No.2 Wire and Magnet SW to Winch Wire (Near the Engine Room J/B)  |
| ER1  | Engine Room Main Wire and Engine No.2 Wire (Near the Battery)                 |