


## Connector Joining Wire Harness and Wire Harness

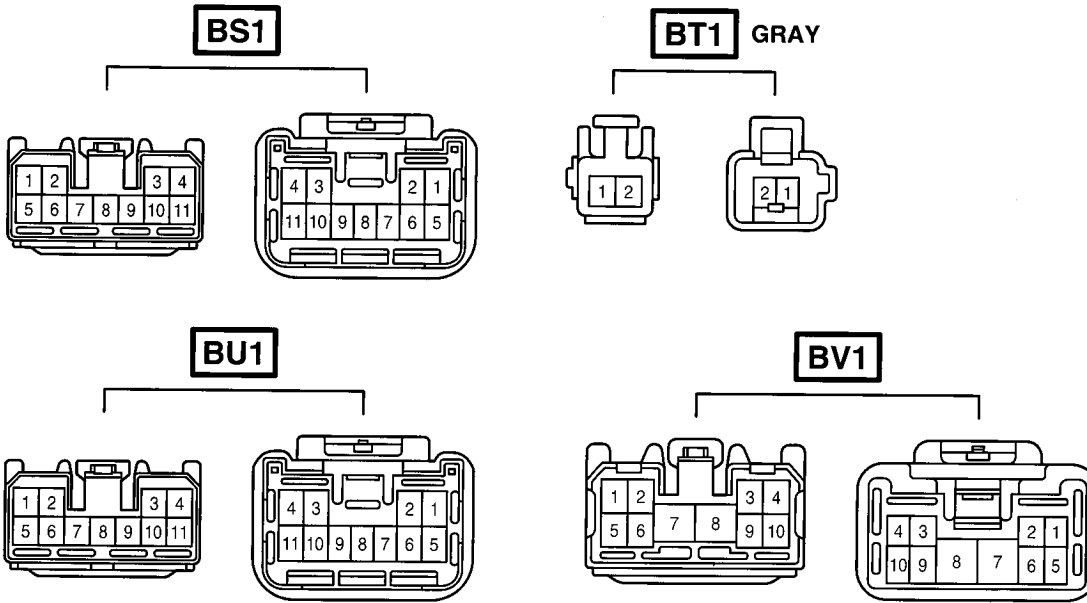

Code	Joining Wire Harness and Wire Harness (Connector Location)
BS1	Floor Wire and Front Seat LH Wire (Front Side Under the Front Passenger's Seat)
BT1	Seat No.2 Wire and Front Seat RH Wire (Rear Side Under the Driver's Seat)
BU1	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Driver's Seat)
BV1	Front Seat RH Wire and Seat Sub Wire (Front Side Under the Driver's Seat)