


REMOVAL

1. REMOVE MASTER CYLINDER (See page BR-15)
2. DISCONNECT VACUUM HOSE FROM BRAKE BOOSTER
3. REMOVE COWL SIDE TRIM (See page BO-124)
4. REMOVE LOWER NO. 1 PANEL (See page BO-124)
5. REMOVE NO. 2 HEATER TO REGISTER DUCT (See page BO-124)
6. REMOVE PEDAL, CLIP AND CLEVIS PIN
7. REMOVE BRAKE BOOSTER
 - (a) Remove the clevis from push rod.

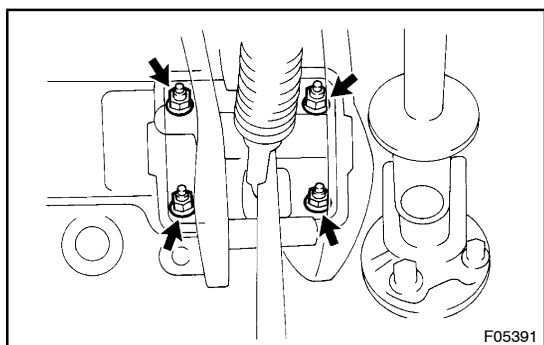

- (b) Remove the 4 booster installation nuts.
- (c) Remove the booster and gasket.